
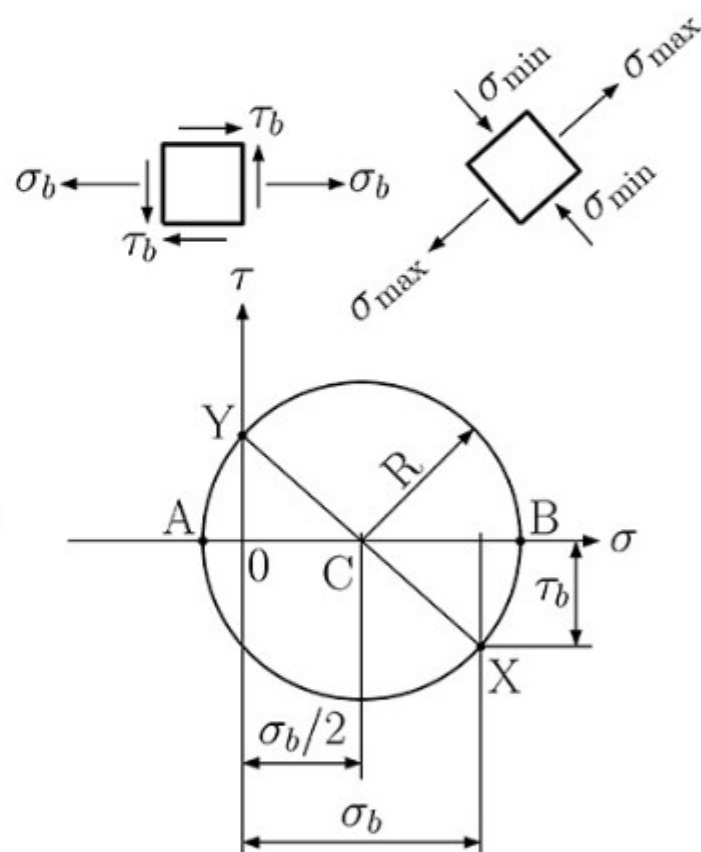


Introduction to Mechanics of Materials: Part I

Roland Jančo; Branislav Hučko

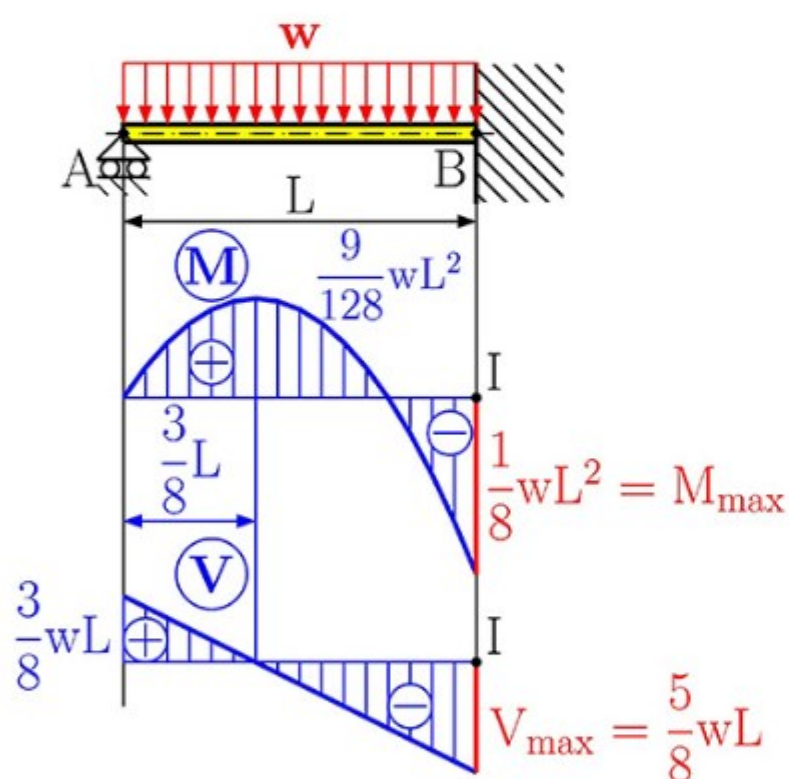

Download free books at

Roland Jančo & Branislav Hučko

Introduction to Mechanics of Materials

Part I

Introduction to Mechanics of Materials: Part I

First Edition

© 2013 Roland Jančo, Branislav Hučko & bookboon.com (Ventus Publishing ApS)

ISBN 978-87-403-0364-3

Reviewers: **Assoc. prof. Karel Frydryšek, Ph.D. ING-PAED IGIP**, VŠB-Technical
University of Ostrava, Czech Republic
prof. Milan Žmindák, PhD., University of Žilina, Slovak Republic
Dr. Michal Čekan, PhD., Canada

Language corrector: Dr. Michal Čekan, PhD., Canada

Contents

	List Of Symbols	8
	Preface	10
1	Introduction – Concept of stress	11
1.1	Introduction	11
1.2	A Short Review of the Methods of Statics	11
1.3	Definition of the Stresses in the Member of a Structure	16
1.4	Basic Stresses (Axial, Normal, Shearing and Bearing stress)	19
1.5	Application to the Analysis and Design of Simple Structures	24
1.6	Method of Problem Solution and Numerical Accuracy	25
1.7	Components of Stress under General Loading Conditions	27
1.8	Design Considerations and Factor of Safety	30
2	Stress and Strain – Axial Loading	32
2.1	Introduction	32
2.2	Normal Stress and Strain under Axial Loading	32

Teach with the Best. Learn with the Best.

Agilent offers a wide variety of affordable, industry-leading electronic test equipment as well as knowledge-rich, on-line resources—for professors and students.

We have 100's of comprehensive web-based teaching tools, lab experiments, application notes, brochures, DVDs/CDs, posters, and more.



See what Agilent can do for you.
www.agilent.com/find/EDUstudents
www.agilent.com/find/EDUeducators

© Agilent Technologies, Inc. 2012

u.s. 1-800-829-4444 canada: 1-877-894-4414

Anticipate — Accelerate — Achieve



Agilent Technologies



2.3	Stress-Strain Diagram, Hooke's Law, and Modulus of Elasticity	35
2.4	Poisson's Ratio	38
2.5	Generalised Hooke's Law for Multiaxial Loading	40
2.6	Saint Venant's Principle	44
2.7	Deformations of Axially Loaded Members	47
2.8	Problems Involving Temperature Changes	51
2.9	Trusses	54
2.10	Examples, Solved and Unsolved Problems	55
3	Torsion	86
3.1	Introduction	86
3.2	Deformation in a Circular Shaft	88
3.3	Stress in the Elastic Region	94
3.4	Angle of Twist in the Elastic Region	97
3.5	Statically indeterminate Shafts	98
3.6	Design of Transmission Shafts	100
3.7	Torsion of Non-Circular Members	100
3.8	Thin-Walled hollow Members	106
3.9	Examples, Solved and Unsolved Problems	110



Find and follow us: <http://twitter.com/bioradlscareers>
www.linkedin.com/groupsDirectory, search for Bio-Rad Life Sciences Careers
<http://bio-radlifesciencescareersblog.blogspot.com>



Your Profession is Your Passion. Pass it On.

John Randall, PhD
Senior Marketing Manager, Bio-Plex Business Unit

Bio-Rad is a longtime leader in the life science research industry and has been voted one of the Best Places to Work by our employees in the San Francisco Bay Area. Bring out your best in one of our many positions in research and development, sales, marketing, operations, and software development. Opportunities await — share your passion at Bio-Rad!

www.bio-rad.com/careers



4	Bending of Straight Beams	Part II
4.1	Introduction	Part II
4.2	Supports and Reactions	Part II
4.3	Bending Moment and Shear Force	Part II
4.4	Shear and Bending Moment Diagrams	Part II
4.5	Relations among Load, Shear, and the Bending Moment	Part II
4.6	Definition of Normal and Shearing Stresses	Part II
4.7	Design of Straight Prismatic Beams	Part II
4.8	Examples, Solved and Unsolved Problems	Part II
5	Deflection of Beams	Part II
5.1	Introduction	Part II
5.2	Integration method	Part II
5.3	Using a Singularity Function to Determine the Slope and Deflection of Beams	Part II
5.4	Castigliano's Theorem	Part II
5.5	Deflections by Castigliano's Theorem	Part II
5.6	Statically Indeterminate Beams	Part II
5.7	Examples, solved and unsolved problems	Part II



6	Columns	Part II
6.1	Introduction	Part II
6.2	Stability of Structures	Part II
6.3	Euler's formulas for Columns	Part II
6.4	Design of Columns under a Centric Load	Part II
6.5	Design of Columns under an Eccentric Load	Part II
6.6	Examples, solved and unsolved problems	Part II
	Appendix	135
A.1	Centroid and first moment of areas	135
A.2	Second moment, moment of areas	138
A.3	Parallel axis theorem	143
A.4	Product of Inertia, Principal Axes	151
A.5	Strain energy for simple loads	152
	References	159



ericsson.
com

Shaping tomorrow's world – today

Our business is at the heart of a connected world – a world where communication is empowering people, business and society. Our networks, telecom services and multimedia solutions are shaping tomorrow. And this might just be your chance to shape your own future.

It's a people thing

We are looking for high-caliber people who can see the opportunities, people who can bring knowledge, energy and vision to our organization. In return we offer the chance to work with cutting-edge technology, personal and professional development, and the opportunity to make a difference in a truly global company.

We are currently recruiting both new graduates and experienced professionals in four areas: **Software, Hardware, Systems and Integration & Verification.**

Are you ready to shape your future? Begin by exploring a career with Ericsson. Visit www.ericsson.com/join-ericsson



List Of Symbols

A	Area
b	width
B.C.	buckling coefficient
D	diameter
E	modulus of elasticity, Young's modulus
f_s	shearing factor
F	external force
F.S.	factor of safety
G	modulus of rigidity
h	height
I_z, I_y	second moment, or moment of inertia, of the area A respect to the z or y axis
J_o	polar moment of inertia of the area A
L	length
DL	elongation of bar
M	bending moment, couple
N	normal or axial force
Q_z, Q_y	first moment of area with respect to the z or y axis
r_z	radius of gyration of area A with respect to the z axis
R	radius
R_i	reaction at point i
s	length of centreline
T	torque
t	thickness
ΔT	change of temperature
u	strain energy density
U	strain energy
V	volume
V	transversal force
w	uniform load
y(x)	deflection
A	area bounded by the centerline of wall cross-section area
α	coefficient of thermal expansion (in chapter 2)
α	parameter of rectangular cross-section in torsion
γ	shearing strain
ϵ	strain
ϕ	angle of twist
Θ_i	slope at point i
τ	shearing stress

τ_{all}	allowable shearing stress
σ	stress or normal stress
σ_{all}	allowable normal stress
σ_{max}	maximum normal stress
σ_{Mises}	von Mises stress
σ_{N}	normal or axial stress

Preface

This book presents a basic introductory course to the mechanics of materials for students of mechanical engineering. It gives students a good background for developing their ability to analyse given problems using fundamental approaches. The necessary prerequisites are the knowledge of mathematical analysis, physics of materials and statics since the subject is the synthesis of the above mentioned courses.

The book consists of six chapters and an appendix. Each chapter contains the fundamental theory and illustrative examples. At the end of each chapter the reader can find unsolved problems to practice their understanding of the discussed subject. The results of these problems are presented behind the unsolved problems.

Chapter 1 discusses the most important concepts of the mechanics of materials, the concept of stress. This concept is derived from the physics of materials. The nature and the properties of basic stresses, i.e. normal, shearing and bearing stresses; are presented too.

Chapter 2 deals with the stress and strain analyses of axially loaded members. The results are generalised into Hooke's law. Saint-Venant's principle explains the limits of applying this theory.

In chapter 3 we present the basic theory for members subjected to torsion. Firstly we discuss the torsion of circular members and subsequently, the torsion of non-circular members is analysed.

In chapter 4, the largest chapter, presents the theory of beams. The theory is limited to a member with at least one plane of symmetry and the applied loads are acting in this plane. We analyse stresses and strains in these types of beams.

Chapter 5 continues the theory of beams, focusing mainly on the deflection analysis. There are two principal methods presented in this chapter: the integration method and Castigliano's theorem.

Chapter 6 deals with the buckling of columns. In this chapter we introduce students to Euler's theory in order to be able to solve problems of stability in columns.

In closing, we greatly appreciate the fruitful discussions between our colleagues, namely prof. Pavel Élesztős, Dr. Michal Čekan. And also we would like to thank our reviewers' comments and suggestions.

Roland Jančo
Branislav Hučko

1 Introduction – Concept of stress

1.1 Introduction

The main objective of the mechanics of materials is to provide engineers with the tools, methods and technologies for

- *analysing* existing load-bearing structures;
- *designing* new structures.

Both of the above mentioned tasks require the analyses of *stresses* and *deformations*. In this chapter we will firstly discuss the stress.

1.2 A Short Review of the Methods of Statics

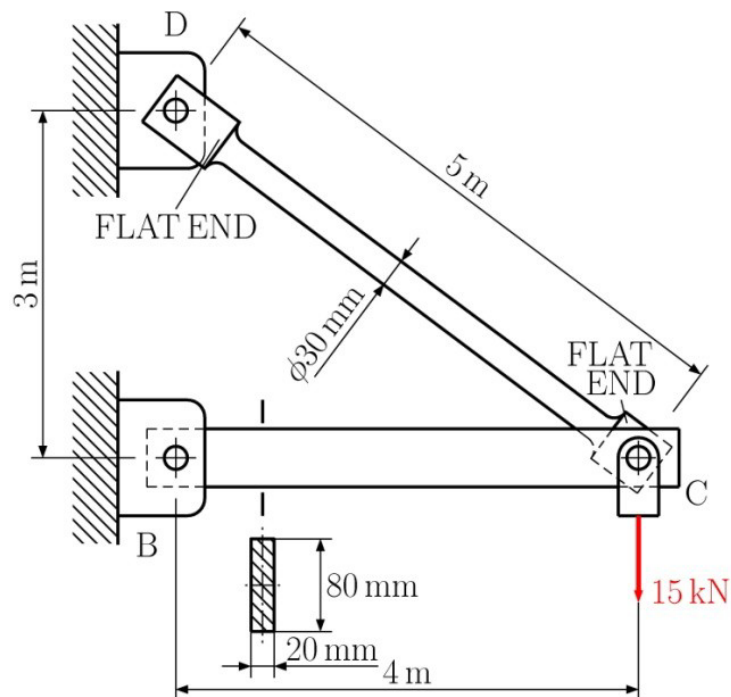


Fig. 1.1

Let us consider a simple truss structure, see Fig. 1.1. This structure was originally designed to carry a load of 15 kN. It consists of two rods; *BC* and *CD*. The rod *CD* has a circular cross-section with a 30-mm diameter and the rod *BC* has a rectangular cross-section with the dimensions 20×80 mm. Both rods are connected by a pin at point *C* and are supported by pins and brackets at points *B* and *D*. Our task is to analyse the rod *CD* to obtain the answer to the question: is rod *CD* sufficient to carry the load? To find the answer we are going to apply the methods of statics. Firstly, we determine the corresponding load acting on the rod *CD*. For this purpose we apply the joint method for calculating axial forces in each rod at joint *C*, see Fig. 1.2. Thus we have the following equilibrium equations

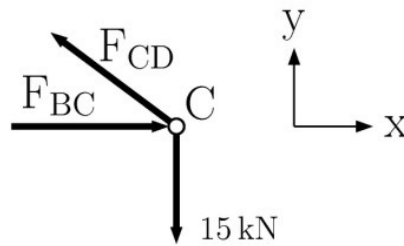


Fig. 1.2

$$\sum F_x = 0 \quad F_{BC} - F_{CD} \frac{4}{5} = 0$$

$$\sum F_y = 0 \quad F_{CD} \frac{3}{5} - 15 \text{ kN} = 0 \quad (1.1)$$

Solving the equations (1.1) we obtain the forces in each member: $F_{BC} = 20 \text{ kN}$, $F_{CD} = 25 \text{ kN}$. The force F_{BC} is compressive and the force F_{CD} is tensile. At this moment we are not able to make the decision about the safety design of rod CD .

Secondly, the safety of the rod BC depends mainly on the material used and its geometry. Therefore we need to make observations of processes inside of the material during loading.

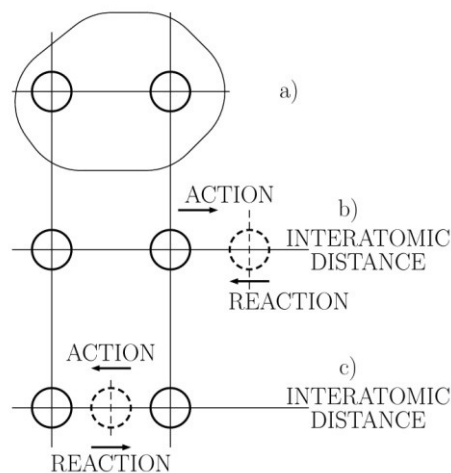


Fig. 1.3

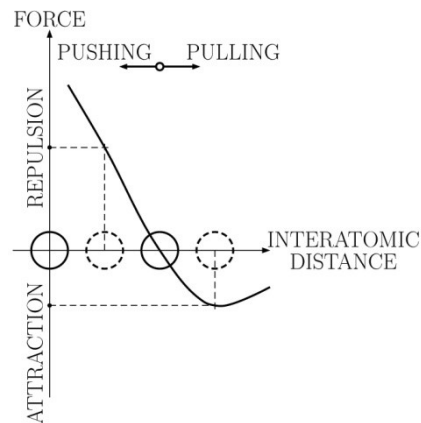


Fig. 1.4

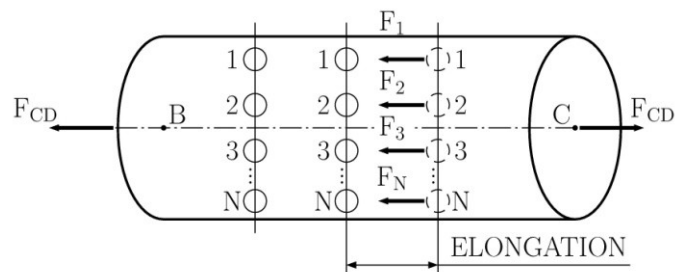


Fig. 1.5

SGE-ARCHBIN = 1x24-and, 50/64-and

data/komun/arc

2013-2014

2014-2015

2015-2016

2016-2017

2017-2018

2018-2019

2019-2020

2020-2021

2021-2022

2022-2023

2023-2024

2024-2025

2025-2026

2026-2027

2027-2028

2028-2029

2029-2030

2030-2031

2031-2032

2032-2033

2033-2034

2034-2035

2035-2036

2036-2037

2037-2038

2038-2039

2039-2040

2040-2041

2041-2042

2042-2043

2043-2044

2044-2045

2045-2046

2046-2047

2047-2048

2048-2049

2049-2050

2050-2051

2051-2052

2052-2053

2053-2054

2054-2055

2055-2056

2056-2057

2057-2058

2058-2059

2059-2060

2060-2061

2061-2062

2062-2063

2063-2064

2064-2065

2065-2066

2066-2067

2067-2068

2068-2069

2069-2070

2070-2071

2071-2072

2072-2073

2073-2074

2074-2075

2075-2076

2076-2077

2077-2078

2078-2079

2079-2080

2080-2081

2081-2082

2082-2083

2083-2084

2084-2085

2085-2086

2086-2087

2087-2088

2088-2089

2089-2090

2090-2091

2091-2092

2092-2093

2093-2094

2094-2095

2095-2096

2096-2097

2097-2098

2098-2099

2099-2100

2100-2101

2101-2102

2102-2103

2103-2104

2104-2105

2105-2106

2106-2107

2107-2108

2108-2109

2109-2110

2110-2111

2111-2112

2112-2113

2113-2114

2114-2115

2115-2116

2116-2117

2117-2118

2118-2119

2119-2120

2120-2121

2121-2122

2122-2123

2123-2124

2124-2125

2125-2126

2126-2127

2127-2128

2128-2129

2129-2130

2130-2131

2131-2132

2132-2133

2133-2134

2134-2135

2135-2136

2136-2137

2137-2138

2138-2139

2139-2140

2140-2141

2141-2142

2142-2143

2143-2144

2144-2145

2145-2146

2146-2147

2147-2148

2148-2149

2149-2150

2150-2151

2151-2152

2152-2153

2153-2154

2154-2155

2155-2156

2156-2157

2157-2158

2158-2159

2159-2160

2160-2161

2161-2162

2162-2163

2163-2164

2164-2165

2165-2166

2166-2167

2167-2168

2168-2169

2169-2170

2170-2171

2171-2172

2172-2173

2173-2174

2174-2175

2175-2176

2176-2177

2177-2178

2178-2179

2179-2180

2180-2181

2181-2182

2182-2183

2183-2184

2184-2185

2185-2186

2186-2187

2187-2188

2188-2189

2189-2190

2190-2191

2191-2192

2192-2193

2193-2194

2194-2195

2195-2196

2196-2197

2197-2198

2198-2199

2199-2200

2200-2201

2201-2202

2202-2203

2203-2204

2204-2205

2205-2206

2206-2207

2207-2208

2208-2209

2209-2210

2210-2211

2211-2212

2212-2213

2213-2214

2214-2215

2215-2216

2216-2217

2217-2218

2218-2219

2219-2220

2220-2221

2221-2222

2222-2223

2223-2224

2224-2225

2225-2226

2226-2227

2227-2228

2228-2229

2229-2230

2230-2231

2231-2232

2232-2233

2233-2234

2234-2235

2235-2236

2236-2237

2237-2238

2238-2239

2239-2240

2240-2241

2241-2242

2242-2243

2243-2244

2244-2245

2245-2246

2246-2247

2247-2248

2248-2249

2249-2250

2250-2251

2251-2252

2252-2253

2253-2254

2254-2255

2255-2256

2256-2257

2257-2258

2258-2259

2259-2260

2260-2261

2261-2262

2262-2263

2263-2264

2264-2265

2265-2266

2266-2267

2267-2268

2268-2269

2269-2270

2270-2271

2271-2272

2272-2273

2273-2274

2274-2275

2275-2276

2276-2277

2277-2278

2278-2279

2279-2280

2280-2281

2281-2282

2282-2283

2283-2284

2284-2285

2285-2286

2286-2287

2287-2288

2288-2289

2289-2290

2290-2291

2291-2292

2292-2293

2293-2294

2294-2295

2295-2296

2296-2297

2297-2298

2298-2299

2299-2300

2300-2301

2301-2302

2302-2303

2303-2304

2304-2305

2305-2306

2306-2307

2307-2308

2308-2309

2309-2310

2310-2311

2311-2312

2312-2313

2313-2314

2314-2315

2315-2316

2316-2317

2317-2318

2318-2319

2319-2320

2320-2321

2321-2322

2322-2323

2323-2324

2324-2325

2325-2326

2326-2327

2327-2328

2328-2329

2329-2330

2330-2331

2331-2332

2332-2333

2333-2334

2334-2335

2335-2336

2336-2337

2337-2338

2338-2339

2339-2340

2340-2341

2341-2342

2342-2343

2343-2344

2344-2345

2345-2346

2346-2347

2347-2348

2348-2349

2349-2350

2350-2351

2351-2352

2352-2353

2353-2354

2354-2355

2355-2356

2356-2357

2357-2358

2358-2359

2359-2360

2360-2361

2361-2362

2362-2363

2363-2364

2364-2365

2365-2366

2366-2367

2367-2368

2368-2369

2369-2370

2370-2371

2371-2372

2372-2373

2373-2374

2374-2375

2375-2376

2376-2377

2377-2378

2378-2379

2379-2380

2380-2381

2381-2382

2382-2383

2383-2384

2384-2385

2385-2386

2386-2387

2387-2388

2388-2389

2389-2390

2390-2391

2391-2392

2392-2393

2393-2394

2394-2395

2395-2396

2396-2397

2397-2398

2398-2399

2399-2400

2400-2401

2401-2402

2402-2403

2403-2404

2404-2405

2405-2406

2406-2407

2407-2408

2408-2409

2409-2410

2410-2411

2411-2412

2412-2413

2413-2414

2414-2415

2415-2416

2416-2417

2417-2418

2418-2419

2419-2420

2420-2421

2421-2422

2422-2423

2423-2424

2424-2425

2425-2426

2426-2427

2427-2428

2428-2429

2429-2430

2430-2431

2431-2432

2432-2433

2433-2434

2434-2435

2435-2436

2436-2437

2437-2438

2438-2439

2439-2440

2440-2441

2441-2442

2442-2443

2443-2444

2444-2445

2445-2446

2446-2447

2447-2448

2448-2449

2449-2450

2450-2451

2451-2452

2452-2453

2453-2454

2454-2455

2455-2456

2456-2457

2457-2458

2458-2459

2459-2460

2460-2461

2461-2462

2462-2463

2463-2464

2464-2465

2465-2466

2466-2467

2467-2468

2468-2469

2469-2470

2470-2471

2471-2472

2472-2473

2473-2474

2474-2475

2475-2476

2476-2477

2477-2478

2478-2479

2479-2480

2480-2481

2481-2482

2482-2483

2483-2484

2484-2485

2485-2486

2486-2487

2487-2488

2488-2489

2489-2490

2490-2491

2491-2492

2492-2493

2493-2494

2494-2495

2495-2496

2496-2497

2497-2498

2498-2499

2499-2500

2500-2501

2501-2502

2502-2503

2503-2504

2504-2505

2505-2506

2506-2507

2507-2508

2508-2509

2509-2510

2510-2511

2511-2512

2512-2513

2513-2514

2514-2515

2515-2516

2516-2517

2517-2518

2518-2519

2519-2520

2520-2521

2521-2522

2522-2523

2523-2524

2524-2525

2525-2526

2526-2527

2527-2528

2528-2529

2529-2530

2530-2531

2531-2532

2532-2533

2533-2534

2534-2535

2535-2536

2536-2537

2537-2538

2538-2539

2539-2540

2540-2541

2541-2542

2542-2543

2543-2544

2544-2545

2545-2546

2546-2547

2547-2548

2548-2549

2549-2550

2550-2551

2551-2552

2552-2553

2553-2554

2554-2555

2555-2556

2556-2557

2557-2558

2558-2559

2559-2560

2560-2561

2561-2562

2562-2563

2563-2564

2564-2565

2565-2566

2566-2567

2567-2568

2568-2569

2569-2570

2570-2571

2571-2572

2572-2573

2573-2574

2574-2575

2575-2576

2576-2577

2577-2578

2578-2579

2579-2580

2580-2581

2581-2582

2582-2583

2583-2584

2584-2585

2585-2586

2586-2587

2587-2588

2588-2589

2589-2590

2590-2591

2591-2592

2592-2593

2593-2594

2594-2595

2595-2596

2596-2597

2597-2598

2598-2599

2599-2600

2600-2601

2601-2602

2602-2603

2603-2604

2604-2605

2605-2606

2606-2607

2607-2608

2608-2609

2609-2610

2610-2611

2611-2612

2612-2613

2613-2614

2614-2615

2615-2616

2616-2617

2617-2618

2618-2619

2619-2620

2620-2621

2621-2622

2622-2623

2623-2624

2624-2625

2625-2626

2626-2627

2627-2628

2628-2629

2629-2630

2630-2631

2631-2632

2632-2633

2633-2634

2634-2635

2635-2636

2636-2637

2637-2638

2638-2639

2639-2640

2640-2641

2641-2642

2642-2643

2643-2644

2644-2645

2645-2646

2646-2647

2647-2648

2648-2649

2649-2650

2650-2651

2651-2652

2652-2653

2653-2654

2654-2655

2655-2656

2656-2657

2657-2658

2658-2659

2659-2660

2660-2661

2661-2662

2662-2663

2663-2664

2664-2665

2665-2666

2666-2667

2667-2668

2668-2669

2669-2670

2670-2671

2671-2672

2672-2673

2673-2674

2674-2675

2675-2676

2676-2677

2677-2678

2678-2679

2679-2680

2680-2681

2681-2682

2682-2683

2683-2684

2684-2685

2685-2686

2686-2687

2687-2688

2688-2689

2689-2690

2690-2691

2691-2692

2692-2693

2693-2694

2694-2695

2695-2696

2696-2697

2697-2698

2698-2699

2699-2700

2700-2701

2701-2702

2702-2703

2703-2704

2704-2705

2705-2706

2706-2707

2707-2708

2708-2709

2709-2710

2710-2711

2711-2712

2712-2713

2713-2714

2714-2715

2715-2716

2716-2717

2717-2718

2718-2719

2719-2720

2720-2721

2721-2722

2722-2723

2723-2724

2724-2725

2725-2726

2726-2727

2727-2728

2728-2729

2729-2730

2730-2731

2731-2732

2732-2733

2733-2734

2734-2735

2735-2736

2736-2737

2737-2738

2738-2739

2739-2740

2740-2741

2741-2742

2742-2743

2743-2744

2744-2745

2745-2746

2746-2747

2747-2748

2748-2749

2749-2750

2750-2751

2751-2752

2752-2753

2753-2754

2754-2755

2755-2756

2756-2757

2757-2758

2758-2759

2759-2760

2760-2761

2761-2762

2762-2763

2763-2764

2764-2765

2765-2766

2766-2767

2767-2768

2768-2769

2769-2770

2770-2771

2771-2772

2772-2773

2773-2774

2774-2775

2775-2776

2776-2777

2777-2778

2778-2779

2779-2780

2780-2781

2781-2782

2782-2783

2783-2784

2784-2785

2785-2786

2786-2787

2787-2788

2788-2789

2789-2790

2790-2791

2791-2792

2792-2793

2793-2794

2794-2795

2795-2796

2796-2797

2797-2798

2798-2799

2799-2800

28

Let us consider a crystalline mesh of rod material. By detaching two neighbour atoms from the crystalline mesh, we can make the following observation. The atoms are in an equilibrium state, see Fig. 1.3(a). Now we can pull out the right atom from its equilibrium position by applying external force, see Fig. 1.3(b). The applied force is the action force. Due to Newton's first law a reaction force is pulling back on the atom to the original equilibrium. During loading, the atoms find a new equilibrium state. The action and the reaction are in equilibrium too. If we remove the applied force, the atom will go back to its initial position, see Fig. 1.3(a). If we push the right atom towards the left atom, we will observe a similar situation; see Fig. 1.3(c). Now we can build the well-known diagram from the physics of materials: internal force versus interatomic distance, see Fig. 1.4. From this diagram we can find the magnitudes of forces in corresponding cases. Now we can extend our observation to our rod CD . For simplicity let us draw two parallel layers of atoms inside the rod considered, see Fig. 1.5. After applying the force of the external load on CD we will observe the elongation of the rod. In other words, the interatomic distance between two neighbouring atoms will increase. Then due to Newton's first law the internal reaction forces will result between two neighbouring atoms. Subsequently the rod will reach a new equilibrium. Thus we can write:

$$\sum_{i=1}^N F_i = F_{CD} \quad \text{or} \quad \sum \text{internal forces} = \text{external applied force} \quad (1.2)$$

The next task is to determine the internal forces. Considering the continuum approach we can replace equation (1.2) with the following one:

$$\text{Resultant of internal forces} = \text{external applied force} \quad (1.3)$$

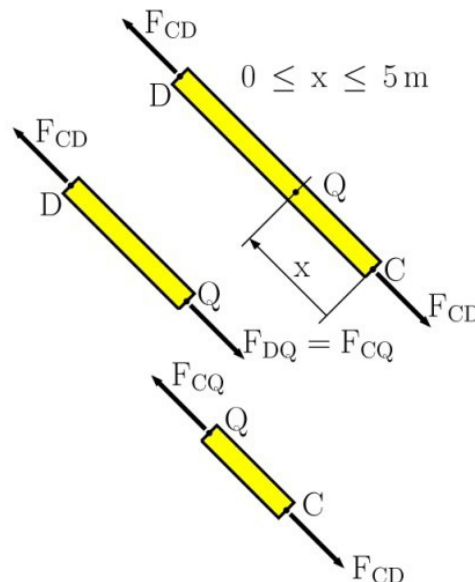


Fig. 1.6

The resultant can be determined by applying *the method of section*. Passing the section at some arbitrary point Q we get two portions of the rod: CQ and DQ , see Fig. 1.6. Since force $F_{CD} = 25 \text{ kN}$ must be applied at point Q for both portions to keep them in equilibrium, we can conclude that the resultant of internal forces of 100 kN is produced in the rod CD , when a load of 15 kN is applied at C .

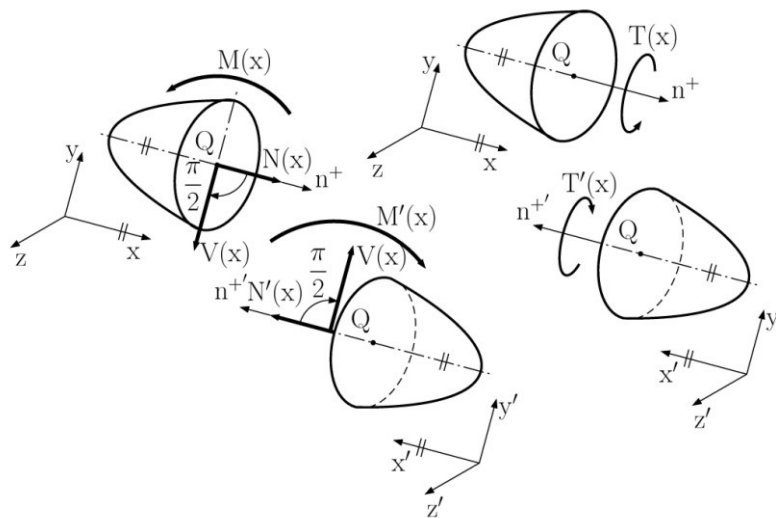


Fig. 1.7

The above mentioned method of section is a very helpful tool for determining all internal forces. Let us now consider the arbitrary body subjected to a load. Dividing the body into two portions at an arbitrary point Q , see Fig. 1.7, we can define the positive outgoing normal n^+ . The normal force $N_{(x)}$ is the force component in the direction of positive normal. The force component derived by turning the positive normal clockwise about $\frac{\pi}{2}$ at Q is known as the shear force $V_{(x)}$, the moment $M_{(x)}$ about the z -axis defines the bending moment (the positive orientation will be explained in Chapter 4). The moment $T_{(x)}$ defines the torque with a positive orientation according to the right-hand rule.

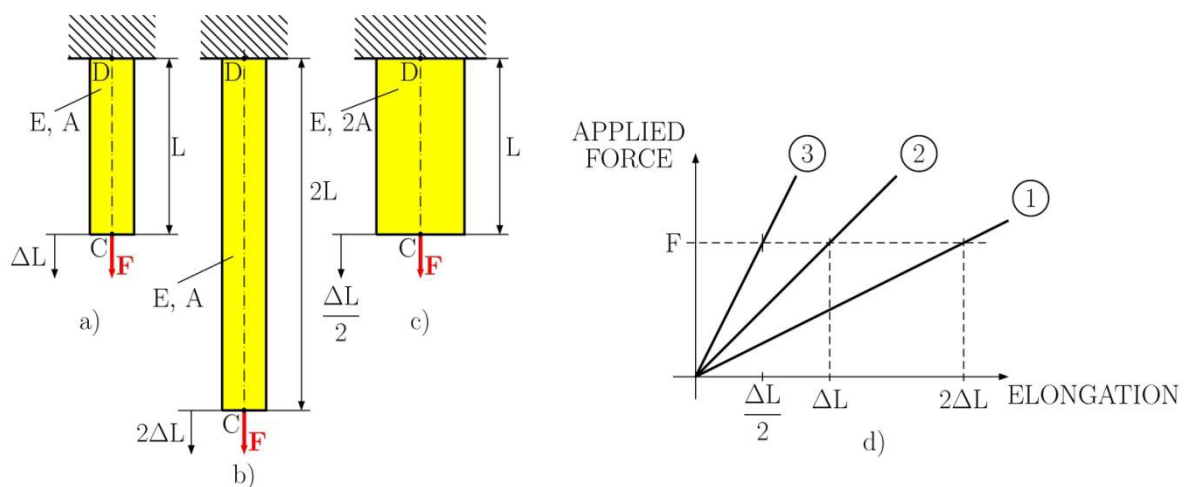


Fig. 1.8

For assessing the safety of rod CD we need to ask material scientists for the experimental data about the materials response. When our rod is subjected to tension, we can obtain the experimental data from a simple tensile test. Let us arrange the following experiments for the rod made of the same material. The output variables are the applied force and the elongation of the rod, i.e. the force vs. elongation diagram. The first test is done for the rod of length L , and cross-sectional area A , see Fig 1.8 (a). The output can be plotted in Fig 1.8 (d), seen as curve number 1. For the second test we now define the rod to have a length of $2L$ while all other parameters remain, see Fig. 1.8 (b). The result is represented by curve number 2, see Fig. 1.8 (d). It is only natural that the total elongation is doubled for the same load level. For the third test we keep the length parameter L but increase the cross-sectional area to $2A$. The result are represented by curve number 3, see Fig. 1.8 (d). The conclusion of these three experiments is that the load vs. elongation diagram is not as useful for designers as one would initially expect. The results are very sensitive to geometrical parameters of the samples. Therefore we need to exclude the geometrical sensitivity from experimental data.

1.3 Definition of the Stresses in the Member of a Structure

The results of the proceeding section represent the first necessary step in the design or analysing of structures. They do not tell us whether the structure can support the load safely or not. We can determine the distribution functions of internal forces along each member. Applying the method of section we can determine the resultant of all elementary internal forces acting on this section, see Fig. 1.9. The average intensity of the elementary force ΔN over the elementary area ΔA is defined as $\Delta N / \Delta A$. This ratio represents the internal force per unit area. Thus the intensity of internal force at any arbitrary point can be derived as

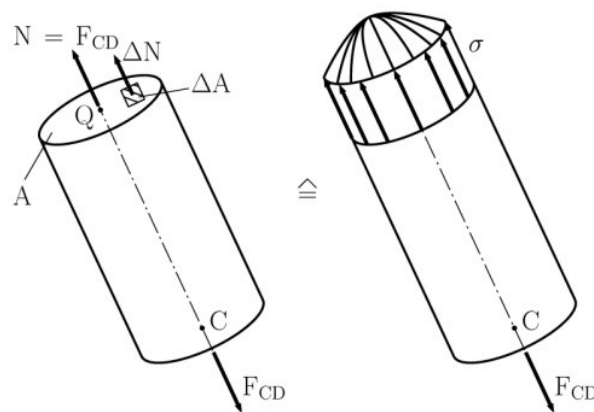


Fig. 1.9

$$intensity = \lim_{\Delta A \rightarrow 0} \frac{\Delta N}{\Delta A} = \frac{dN}{dA} \quad (1.4)$$

Whether or not the rod will break under the given load clearly depends upon the ability of the material to withstand the corresponding value, see the above mentioned definition, of the distributed internal forces. It is clear that this depends on the applied load F_{CD} , the cross-section area A and on the material of the rod considered.

The internal force per unit area, or the intensity of internal forces distributed over a given cross-sectional area, is called *stress*. The stress is denoted by the Greek letter sigma σ . The unit of stress is called the Pascal which has the value N/m^2 . Then we can rewrite equation (1.4) into

$$\sigma = \lim_{\Delta A \rightarrow 0} \frac{\Delta N}{\Delta A} = \frac{dN}{dA} \quad (1.5)$$

The positive sign indicates tensile stress in a member or that the member is in tension. The negative sign of stress indicates compressive stress in a member or that the member is subjected to compression.

The equation (1.5) is not so convenient to use in engineering design so solving for this equation we get

$$N = \int \sigma dA \quad (1.6)$$

It's only an opportunity if you act on it

IKEA.SE/STUDENT

© Inter IKEA Systems B.V. 2009



If we apply Saint Venant's principle, see Section 2.6 for more details, we can assume the uniform stress distribution function over the cross-section, except in the immediate vicinity of the loads points of application, thus we have

$$N = \sigma \int dA = \sigma A \quad \text{or} \quad \sigma = \frac{N}{A} \quad (1.7)$$

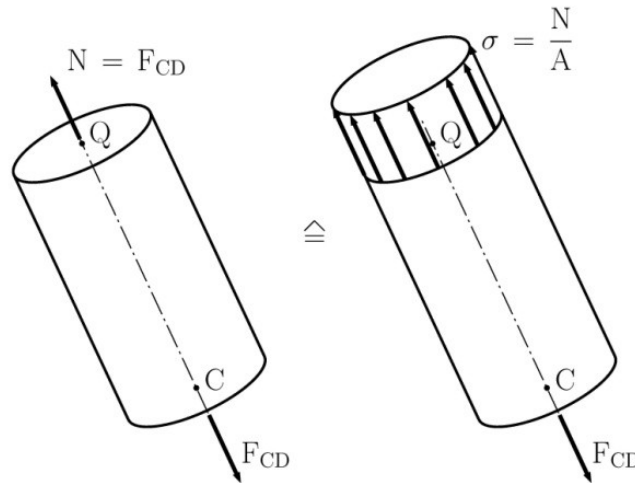


Fig. 1.10

A graphical representation is presented in Fig. 1.10. If an internal force N was obtained by the section passed perpendicular to the member axis, and the direction of the internal force N coincides with the member axis, then we are talking about *axially loaded members*. The direction of the internal force N also determines the direction of stress σ . Therefore we define this stress σ as *the normal stress*. Thus formula (1.7) determines the normal stress in the axially loaded member.

From elementary statics we get the resultant N of the internal forces, which then must be applied to the centre of the cross-section under the condition of uniformly distributed stress. This means that *a uniform distribution of stress is possible only if the action line of the applied loads passes through the centre of the section considered*, see Fig. 1.11. Sometimes we this type of loading is known as *centric loading*. In the case of an *eccentrically loaded member*, see Fig. 1.12, this condition is not satisfied, therefore the stress distribution function is not uniform. The explanation will be done in Chapter 4. The normal force $N_C = F$ and the moment $M_C = Fd$ are the internal forces obtained through the method of section.

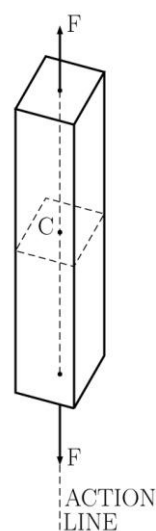


Fig. 1.11

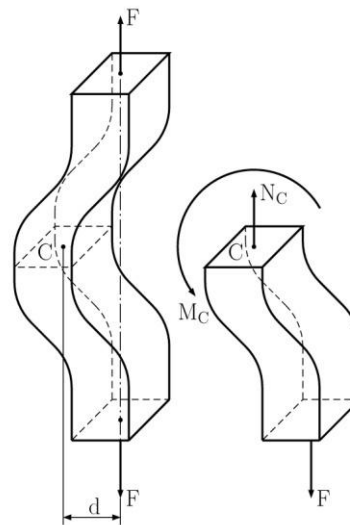
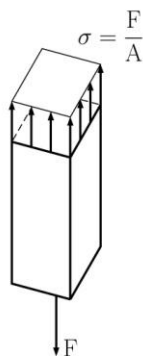


Fig. 1.12

1.4 Basic Stresses (Axial, Normal, Shearing and Bearing stress)

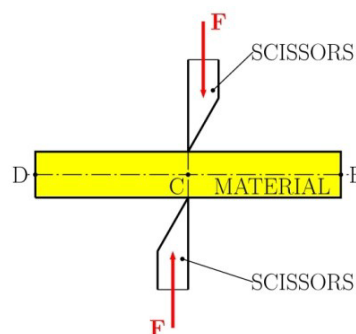


Fig. 1.13

In the previous Section we discussed the case when the resultant of internal forces and the resulting stress normal to the cross-section are considered. Now let us consider the cutting process of material using scissors, see Fig. 1.13. The applied load F is transversal to the axis of the member. Therefore the load F is called the transversal load. Thus we have a physically different stress. Let us pass a section through point C between the application points of two forces, see Fig. 1.14 (a). Detaching portion DC from the member we will get the diagram of the portion DC shown in Fig. 1.14(b). The zero valued internal forces are excluded. The resultant of internal forces is only the shear force. It is placed perpendicular to the member axis in the section and is equal to the applied force. The corresponding stress is called *the shearing stress* denoted by the Greek letter tau τ . Now we can define the shearing stress as In comparison to the normal stress, we cannot assume that the shearing stress is uniform over the cross-section. The proof of this statement is explained in Chapter 4. Therefore we can only calculate the average value of shearing stress:

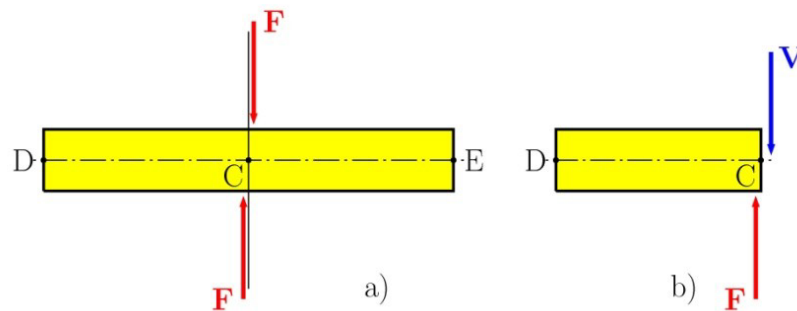


Fig. 1.14

$$\tau = \lim_{\Delta A \rightarrow 0} \frac{\Delta V}{\Delta A} = \frac{dV}{dA} \quad \text{or} \quad V = \int \tau dA \quad (1.8)$$

$$\tau_{ave} = \frac{V}{A} \quad (1.9)$$

The presented case of cutting is known as the *shear*.

The cutaway effect can be commonly found in bolts, screws, pins and rivets used to connect various structural components, see Fig. 1.15(a). Two plates are subjected to the tensile force F . The corresponding cutting stress will develop in plane CD . Considering the method of section in plane CD , for the top portion of the rivet, see Fig. 1.15(b), we obtain the shearing stress according to formula (1.9)

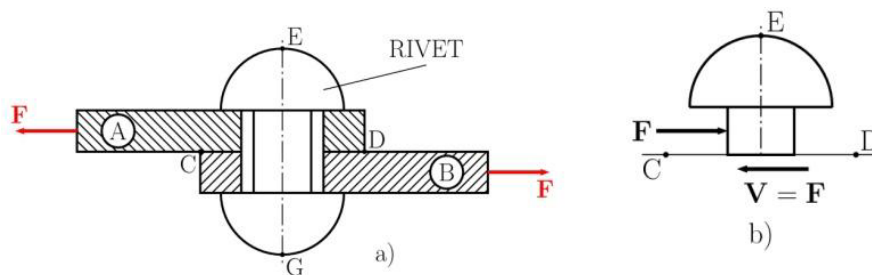


Fig. 1.15

$$\tau_{ave} = \frac{V}{A} = \frac{F}{A} \quad (1.10)$$

Until now we have discussed the application of section in a perpendicular direction to the member axis. Let us now consider the axially loaded member CD , see Fig. 1.16. If we pass the section at any arbitrary point Q over an angle θ between the perpendicular section and this arbitrary section, we will get the free body diagram shown in Fig. 1.17. From the free body diagram we see that the applied force F is in equilibrium with the *axial force* P , i.e. $P = F$. This axial force P represents the resultant of internal forces acting in this section. The components of axial force are

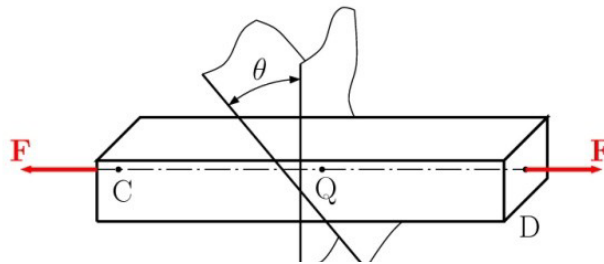


Fig. 1.16

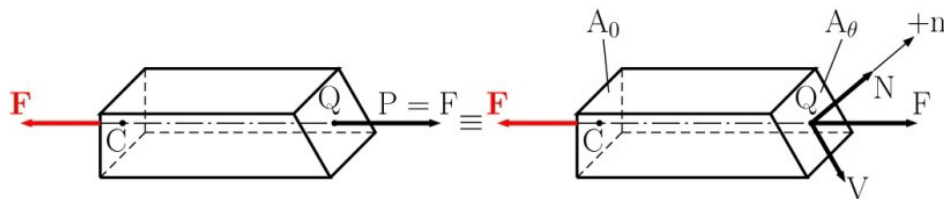


Fig. 1.17

$$N = P \cos \theta \quad \text{and} \quad V = P \sin \theta \quad (1.11)$$

REDEFINE YOUR FUTURE

**AXA GLOBAL
GRADUATE PROGRAM**

redefining / standards AXA



The normal force N and the shear force V represent the resultant of normal forces and shear forces respectively distributed over the cross-section and we can write the corresponding stresses over the cross-section $A_\theta = A_0/\cos\theta$ as follows

$$\sigma = \frac{N}{A_\theta} = \frac{P \cos \theta}{\frac{A_0}{\cos \theta}} = \frac{F}{A_0} \cos^2 \theta \quad (1.12)$$

$$\tau_{ave} = \frac{V}{A_\theta} = \frac{P \sin \theta}{\frac{A_0}{\cos \theta}} = \frac{F}{A_0} \sin \theta \cos \theta \quad (1.13)$$

For the perpendicular section, when $\theta = 0$, we get $\sigma = \sigma_{max} = \frac{F}{A_0}$ and $\tau_{ave} = 0$. These results correspond to the ones we found earlier. In the point of view of mathematics, the magnitudes of stresses depend upon the orientation of the section.

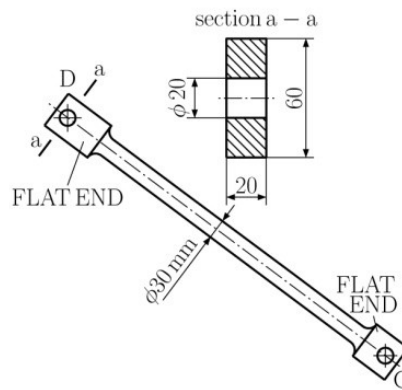


Fig. 1.18

The resultant stress from the normal and shearing stress components is called *the axial stress (the stress in the direction of the axis)* and it is denoted as p ; see Fig. 1.18. Then using elementary mathematics we get

$$p = \sqrt{\sigma^2 + \tau_{ave}^2} \quad (1.14)$$

The exact mathematical definition of the axial stress is the same as previously defined stress types, i.e.

$$p = \lim_{\Delta A \rightarrow 0} \frac{\Delta P}{\Delta A} = \frac{dP}{dA} \quad (1.15)$$

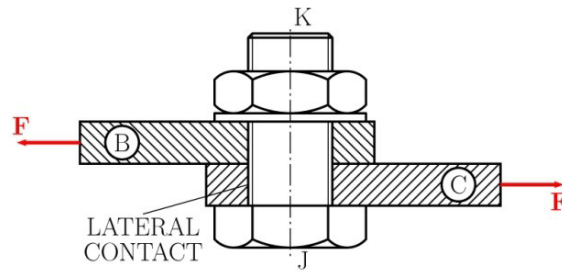


Fig. 1.19

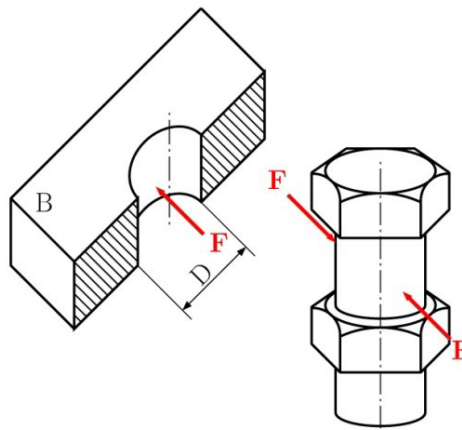


Fig. 1.20

I'm with ZF.
Engineer and Easy Rider.

I enjoy motorcycle riding as a hobby. My mind is free and clear. I just feel great. Especially in this famous region where I live and work. Riding on the legendary Blue Ridge Parkway with its beautiful scenic views is breathtaking. I have a great life and a great job. The doors are always open and everybody helps each other out. My name is Charles Jenkins and I'm working as a quality engineer. For more about me, what I do, and why I really enjoy working at ZF, go to www.im-with-zf.com.

DriveLine and Chassis Technology 

Charles Jenkins
Quality Engineer
ZF Friedrichshafen AG
North Carolina/USA

www.im-with-zf.com




Fittings, bolts, or screws have a lateral contact within the connected member, see Fig. 1.19. They create the stress in the connected member along the *bearing surface* or the *contact surface*. For example let us consider the bolt JK connecting two plates B and C , which are subjected to shear, see Fig. 1.19. The bolt shank exerts a force P on the plate B which is equal to the applied force F . The force P represents the resultant of all elementary forces distributed over the half of the cylindrical hole in plate B , see Fig. 1.20. The diameter of the cylindrical hole is D and the height is t . The distribution function of the aforementioned stresses is very complicated and therefore we usually use the average value of *contact* or *bearing stress*. In this case the average engineering bearing stress is defined as

$$\sigma_b = \frac{P}{A} = \frac{F}{A} = \frac{F}{Dt} \quad (1.16)$$

1.5 Application to the Analysis and Design of Simple Structures

Let us recall the simple truss structure that we discussed in Section 1.2, see Fig. 1.1. Let us now detach rod CD for a more detailed analysis, see Fig. 1.21. The detailed pin connection at point D is presented in Fig 1.22. The following stresses acting in the rod CD can be calculated

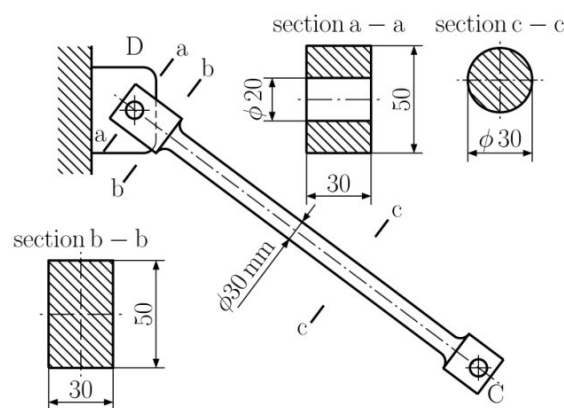


Fig. 1.21

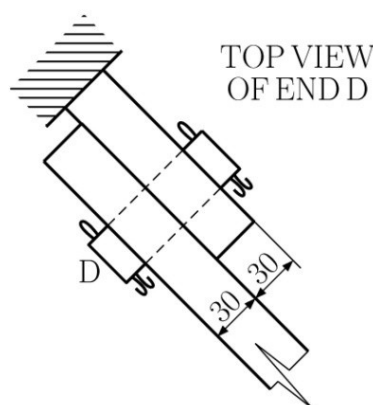


Fig. 1.22

- The normal stress in the shank of the rod CD :

The normal force acting in the circular shank is $F_{CD} = 25 \text{ kN}$, the corresponding cross-sectional area is $A_{shank} = \pi \left(\frac{30}{2}\right)^2 = 706,9 \text{ mm}^2$. Then we have

$$\sigma_{shank} = \frac{F_{CD}}{A_{shank}} = \frac{25000 \text{ N}}{706,9 \text{ mm}^2} = 35,4 \text{ MPa}$$

- The normal stresses in the flat end of D :

The normal force acting in the flat end is $F_{CD} = 25 \text{ kN}$ again, the corresponding cross-sectional areas are at the section $a-a$ $A_{aa} = (50 - 20) \cdot 30 = 900 \text{ mm}^2$ and at the section $b-b$ $A_{bb} = 50 \cdot 30 = 1500 \text{ mm}^2$. Thus we get

$$\sigma_{aa} = \frac{F_{CD}}{A_{aa}} = \frac{25000 \text{ N}}{900 \text{ mm}^2} = 27,8 \text{ MPa} \quad \text{and} \quad \sigma_{bb} = \frac{F_{CD}}{A_{bb}} = \frac{25000 \text{ N}}{1500 \text{ mm}^2} = 16,7 \text{ MPa}$$

- The shearing stress in the pin connection D :

The shear force acting in the pin is $F_{CD} = 25 \text{ kN}$, the corresponding cross-sectional area is $A_{pin} = \pi \left(\frac{20}{2}\right)^2 = 314,2 \text{ mm}^2$. Then we have

$$\tau_{pin} = \frac{F_{CD}}{A_{pin}} = \frac{25000 \text{ N}}{314,2 \text{ mm}^2} = 79,6 \text{ MPa}$$

- The bearing stress at D :

The contact force acting in the cylindrical hole is $F_{bearing} = 25 \text{ kN}$, the corresponding cross-sectional area is $A_{bearing} = 30 \cdot 30 = 900 \text{ mm}^2$. Using formula (1.16) we get

$$\sigma_{bearing} = \frac{F_{bearing}}{A_{bearing}} = \frac{25000 \text{ N}}{900 \text{ mm}^2} = 27,8 \text{ MPa}$$

1.6 Method of Problem Solution and Numerical Accuracy

Every formula previously mentioned and derived has its own validity. This validity predicts the application area, i.e. the limitations on the applicability. Our solution must be based on the fundamental principles of statics and mechanics of materials. Every step, which we apply in our approach, must be justified on this basis. After obtaining the results, they must be checked. If there is any doubt in the results obtained, we should check the problem formulation, the validity of applied methods, input data (material parameters, boundary conditions) and the accuracy of computations.


The method of problem solution is the *step-by-step solution*. This approach consists of the following steps:

- i. Clear and precise problem formulation. This formulation should contain the given data and indicate what information is required.
- ii. Simplified drawing of a given problem, which indicates all essential quantities, which should be included.
- iii. Free body diagram to obtaining reactions at the supports.
- iv. Applying method of section in order to obtain the internal forces and moments.
- v. Solution of problem oriented equations in order to determine stresses, strains, and deformations.

Subsequently we have to check the results obtained with respect to some simplifications, for example boundary conditions, the neglect of some structural details, etc.

The numerical accuracy depends upon the following items:

- the accuracy of input data;
- the accuracy of the computation performed.

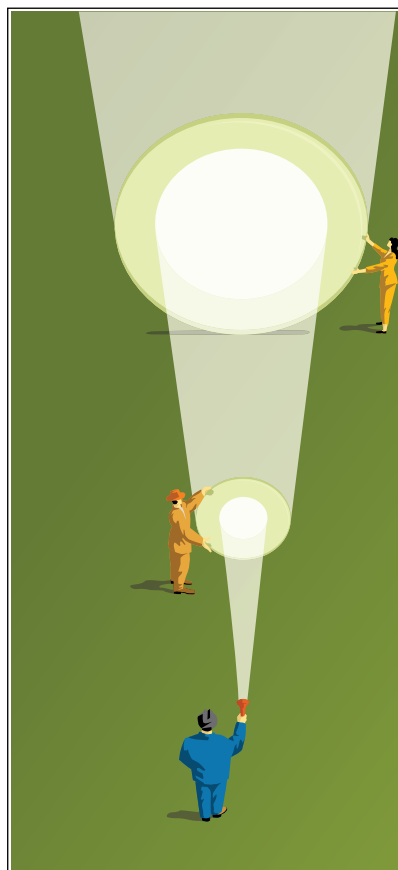

At Navigant, there is no limit to the impact you can have. As you envision your future and all the wonderful rewards your exceptional talents will bring, we offer this simple guiding principle: It's not what we do. It's how we do it.

Impact matters.

NAVIGANT
navigant.com

DISPUTES & INVESTIGATIONS • ECONOMICS • FINANCIAL ADVISORY • MANAGEMENT CONSULTING

©2013 Navigant Consulting, Inc. All rights reserved. Navigant Consulting is not a certified public accounting firm and does not provide audit, attest, or public accounting services.
See navigant.com/licensing for a complete listing of private investigator licenses.



For example it is possible that we can get inaccurate material parameters. Let us consider an error of 5% in Young's modulus. Then the calculation of stress contains at least the same error, the explanation can be found in Section 2.5. The accuracy of computation is tightly connected with the computational method applied. We can apply either the analytical solution or the iterative solution.

1.7 Components of Stress under General Loading Conditions

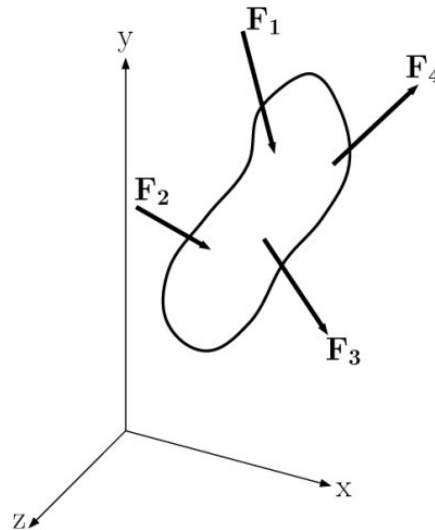


Fig. 1.23

Until now we have limited the discussion to axially loaded members. Let us generalise the results obtained in the previous sections. Thus we can consider a body subjected to several forces, see Fig. 1.23. To analyse the stress conditions created by the loads inside the body, we must apply the method of sections. Let us analyse stresses at an arbitrary point Q . The Euclidian space is defined by three perpendicular planes, therefore we will pass three parallel sections to the Euclidian ones through point Q .

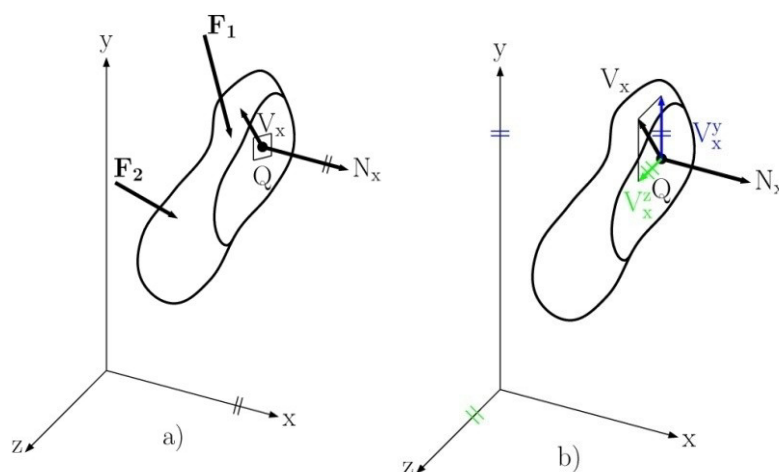


Fig 1.24

Firstly we pass a section parallel to the principal plane yz , see Fig. 1.24 and take into account the left portion of the body. This portion is subjected to the applied forces and the resultants of all internal forces (these forces replace the effect of the removed part). In our case we have the normal force N_x and the shear force V_x . The lower subscript means the direction of the positive outgoing normal. The general shear force V_x has two components in the directions of y and z , i.e. V_x^y and V_x^z . The superscript indicates the direction of the shear component. For determining the stress distributions over the section we need to define a small area ΔA surrounding point Q , see Fig. 1.24. Then the corresponding internal forces are $\Delta N_x, \Delta V_x^y, \Delta V_x^z$. Recalling the mathematical definition of stress in equations (1.5) and (1.8), we get

$$\sigma_x = \lim_{\Delta A \rightarrow 0} \frac{\Delta N_x}{\Delta A} \quad \tau_{xy} = \lim_{\Delta A \rightarrow 0} \frac{\Delta V_x^y}{\Delta A} \quad \tau_{xz} = \lim_{\Delta A \rightarrow 0} \frac{\Delta V_x^z}{\Delta A} \quad (1.17)$$

These results are presented in Fig. 1.25. Remember that the first subscript in σ_x , τ_{xy} and τ_{xz} is used to indicate that the stresses under consideration are exerted *on a surface perpendicular to the x axis*. The second subscript in the shearing stresses identifies the direction of the component. The same results will be obtained if we apply the same approach for the right side of the body considered, see Fig. 1.26.

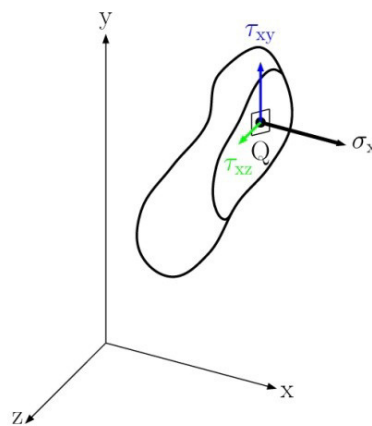


Fig. 1.25

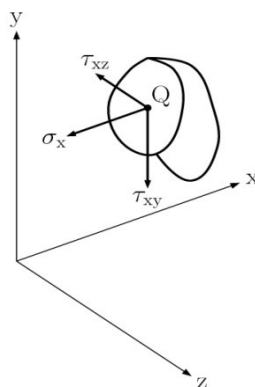


Fig. 1.26

Secondly we now pass a section parallel to the principal plane of xz , where we will get the stress components: σ_y , τ_{yx} and τ_{yz} in a similar way. Thirdly, passing a section parallel to the principal plane of xy , we can also get the stress components: σ_z , τ_{zx} and τ_{zy} by the same way. Thus the stress state at point Q is defined by nine stress components. With respect to statics, it is a statically indeterminate problem, since we only have six equilibrium equations.

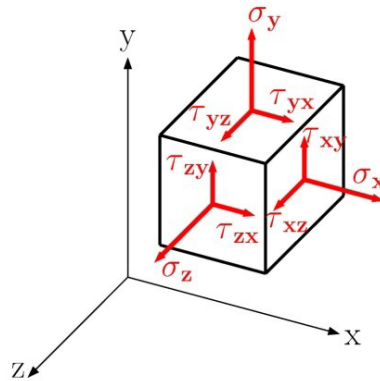


Fig. 1.27

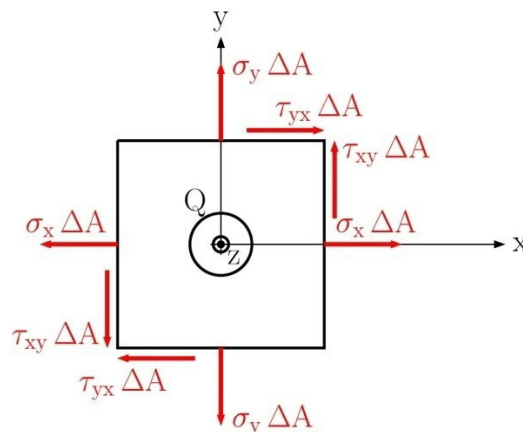


Fig. 1.28

To visualise the stress conditions at point Q, we can represent point Q as a small cube, see Fig. 1.27. There are only three faces of the cube visible in Fig. 1.27. The stresses on the hidden parallel faces are equal and opposite of the visible ones. Such a cube must satisfy the condition of equilibrium. Therefore we can multiply the stresses by the face area ΔA to obtain the forces acting on the cube faces. Focusing on the moment equation about the local z axis, see Fig. 1.28 and assuming the positive moment in the counter-clockwise direction, we have

$$\sum M_{z'} = 0 \quad \tau_{xy} \Delta A \frac{a}{2} - \tau_{yx} \Delta A \frac{a}{2} + \tau_{xy} \Delta A \frac{a}{2} - \tau_{yx} \Delta A \frac{a}{2} = 0 \quad (1.18)$$

we then conclude

$$\tau_{xy} = \tau_{yx} \quad (1.19)$$

The relation obtained shows that the y component of the shearing stress exerted on a face perpendicular to the x axis is equal to the x component of the shearing exerted on a face perpendicular to the y axis. Similar results will be obtained for the rest of the moment equilibrium equations, i.e.

$$\tau_{xz} = \tau_{zx} \quad \text{and} \quad \tau_{yz} = \tau_{zy} \quad (1.20)$$

The equations (1.19) and (1.20) represent the *shear law*. The explanation of the shear law is: if the shearing stress exerts on any plane, then the shearing stress will also exert on the perpendicular plane to that one. Thus the stress state at any arbitrary point is determined by six stress components: $\sigma_x, \sigma_y, \sigma_z, \tau_{xy}, \tau_{xz}, \tau_{yz}$.

1.8 Design Considerations and Factor of Safety

In the previous sections we discussed the stress analysis of existing structures. In engineering applications we must design with safety as well as economical acceptability in mind. To reach this compromise stress analyses assists us in fulfilling this task. The design procedure consists of the following steps:

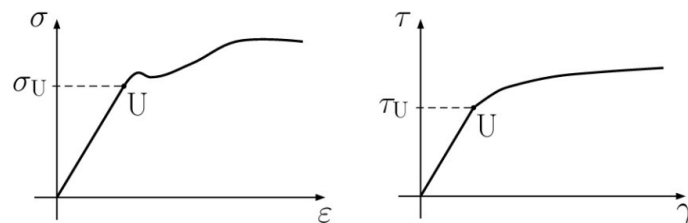


Fig. 1.29

Success here is about overcoming challenges – especially the ones we didn't even think of. I look forward to that.

- Scott, Mechanical Engineering Group Leader

Collaborating. Inspiring. Leading.

Monsanto has always embraced innovation and always focused on helping to make a better world. You can see it in our groundbreaking products and in our dynamic environment where your skills and your career can grow and develop. We know that every day, new ideas can come from anyone, anywhere. At Monsanto, you'll be respected, you'll contribute to the bottom line and you'll help farmers feed the world.

Start right now: www.monsanto.com/students

EEO/AA EMPLOYER M/F/D/V ©2013 Monsanto Company

MONSANTO



- *Determination of the ultimate stress of a material.* A certified laboratory will make material tests in respect to the defined load. For example they can determine the *ultimate tensile stress*, the *ultimate compressive stress* and the *ultimate shearing stress* for a given material, see Fig. 1.29.
- *Allowable load and allowable stress, Factor of Safety.* Due to any unforeseen loading during the structures operation, the maximum stress in the designed structure can not be equal to the ultimate stress. Usually the maximum stress is less than this ultimate stress. Low stress corresponds to the smaller loads. This smaller loading we call the *allowable load* or *design load*. The ratio of the ultimate load to the allowable load is used to define the *Factor of Safety* which is:

$$\text{Factor of Safety} = F.S. = \frac{\text{Ultimate load}}{\text{Allowable load}} \quad (1.21)$$

An alternative of this definition can be applied to stresses:

$$\text{Factor of Safety} = F.S. = \frac{\text{Ultimate stress}}{\text{Allowable stress}} \quad (1.22)$$

- *Selecting the appropriate Factor of Safety.* The appropriate Factor of Safety (F.S.) for a given design application requires good engineering judgment based on many considerations, such as the following:
 - Type of loading, i.e. static or dynamic or random loading.
 - Variation of material properties, i.e. composite structure of different materials.
 - Type of failure that is expected, i.e. brittle or ductile failure, etc.
 - Importance of a given member, i.e. less important members can be designed with allowed F.S.
 - Uncertainty due to the analysis method. Usually we use some simplifications in our analysis.
 - The nature of operation, i.e. taking into account the properties of our surrounding, for example: corrosion properties.

For the majority of structures, the recommended F.S. is specified by structural Standards and other documents written by engineering authorities.

2 Stress and Strain – Axial Loading

2.1 Introduction

In the previous chapter we discussed the stresses produced in the structures under various conditions, i.e. loading, boundary conditions. We have analyzed the stresses in simply loaded members and we learned how to design some characteristic dimensions of these members due to allowable stress. Another important aspect in the design and analysis of structures are their deformations, and the reasons are very simple. For example, large deformations in the structure as a result of the stress conditions under the applied load should be avoided. The design of a bridge can fulfil the condition for allowable stress but the deformation (in our case deflection) at mid-span may not be acceptable. The deformation analysis is very helpful in the stress determination too, mainly for statically indeterminate problems. Statically it is assumed that the structure is a composition of rigid bodies. But now we would like to analyse the structure as a deformable body.

2.2 Normal Stress and Strain under Axial Loading

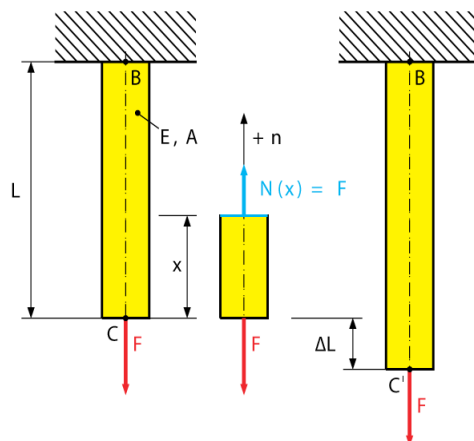


Fig. 2.1

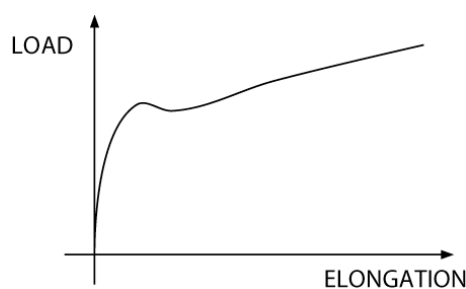


Fig. 2.2

Let us assume that the rod BC , of length L with constant cross-sectional area A , is hanging on a fixed point B , see Fig. 2.1 . If we apply the load F we can observe an elongation of the rod BC . Both the applied force and elongation can be measured. And we can plot the load vs. elongation, see Fig. 2.2.

As we mentioned in the previous chapter, we would like to avoid plotting geometrical characteristics, i.e. cross-sectional area and length. We cannot use such a graph directly to predict the rod elongation of the same material with different dimensions. Let us consider the following examples:

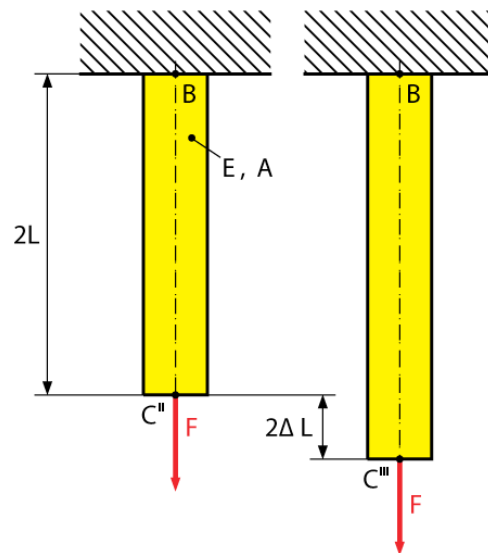


Fig. 2.3



Are you the surfer or the wave?

Creating the future of communications technology requires to be a powerful force for change and at the same time be swift and agile enough to deliver even in varying conditions. Which is why when you look at our history of innovation you'll find countless awards and even a handful of Nobel Prizes in our company résumé. And when you look at our teams, you will find dynamic, diverse, passionate professionals. Hand-in-hand, team by team, every day we bring innovations to market to help realize the potential of a connected world.

..... Alcatel-Lucent 

www.alcatel-lucent.com/careers



The applied load F causes the elongation ΔL . The corresponding normal stress can be found by passing a section perpendicular to the axis of the rod (method of sections) applying this method we obtain $\sigma_x = \frac{N(x)}{A} = F/A$, see Fig. 2.1. If we apply the same load to the rod of length $2L$ and the same cross-sectional area A , we will observe an elongation of $2\Delta L$ with the same normal stress $\sigma_x = F/A$, see Fig. 2.3. This means the deformation is twice as large as the previous case. But the ratio of deformation over the rod length is the same, i.e. is equal to $\Delta L/L$. This result brings us to the concept of strain.

We can now define the normal strain ε caused by axial loading as the deformation per unit length of the rod. Since length and elongation have the same units, the normal strain is a dimensionless quantity. Mathematically, we can express the normal strain by:

$$\varepsilon_x = \frac{\Delta L}{L} \quad (2.1)$$

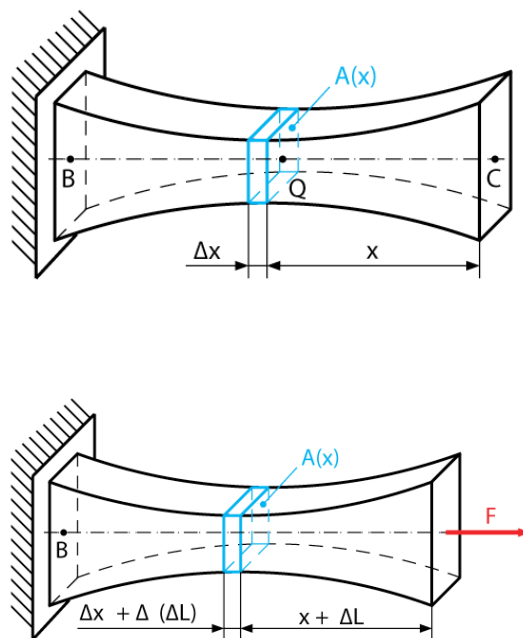


Fig. 2.4

This equation is valid only for a rod with constant cross-sectional area. In the case of variable cross sectional area, the normal stress varies over the axis of the rod by $\sigma_x = F/A_{(x)}$. Then we must define the normal strain at an arbitrary point Q by considering a small element of undeformed length Dx . The corresponding elongation of this element is $D(\Delta L)$, see Fig 2.4. Thus we can define the normal strain at point Q as:

$$\varepsilon_x = \lim_{\Delta x \rightarrow 0} \frac{\Delta(\Delta L)}{\Delta x} = \frac{d\Delta L}{dx} \quad (2.2)$$

which again, results in a dimensionless quantity.

2.3 Stress-Strain Diagram, Hooke's Law, and Modulus of Elasticity

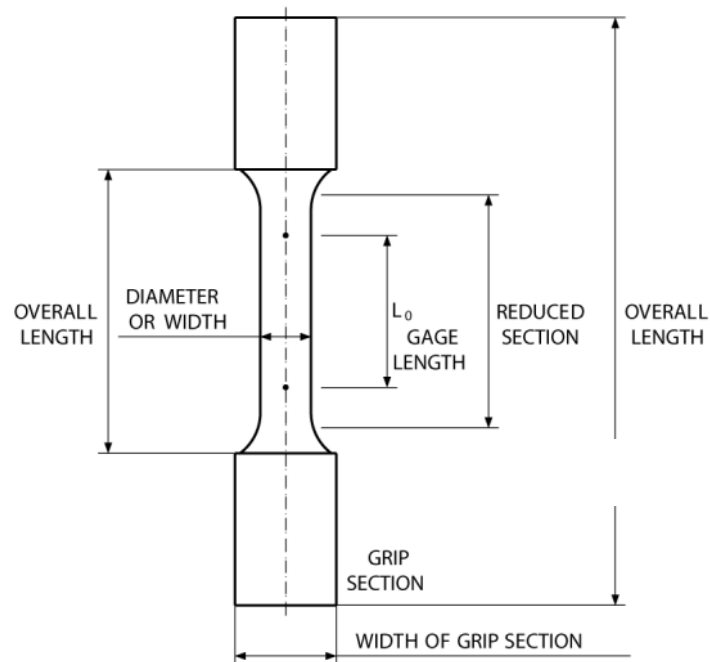


Fig. 2.5 Test specimen



Fig. 2.6 MTS testing machine, see www.mts.com

As we discussed before, plotting load vs. elongation is not useful for engineers and designers due to their strong sensitivity on the sample geometry. Therefore we explained the concepts of stress and strain in Sec. 1.3 and Sec. 2.2 in detail. The result is a stress-strain diagram that represents the relationship between stress and strain. This diagram is an important characteristic of material and can be obtained by conducting a tensile test. The typical specimen can be shown in Fig. 2.5. The cross-sectional area of the cylindrical central portion of the specimen has been accurately determined and two gage marks have been made in this portion at a distance L_0 from each other. The distance L_0 is known as the *gage length* (or *referential length*) of the specimen. The specimen is then placed into the test machine seen in Fig. 2.6, which is used for centric load application. As the load F increases, the distance L between gage marks also increases. The distance can be measured by several mechanical gages and both quantities (load and distance) are recorded continuously as the load increases. As a result we obtain the total elongation of the cylindrical portion $DL=L-L_0$ for each corresponding load step. From the measured quantities we can recalculate the values of stress and strain using equations (1.5) and (2.1). For different materials we obtain different stress-strain diagrams. In Fig. 2.7 one can see the typical diagrams for ductile and brittle materials.

Budget-Friendly. Knowledge-Rich.

The Agilent InfiniiVision X-Series and 1000 Series offer affordable oscilloscopes for your labs. Plus resources such as lab guides, experiments, and more, to help enrich your curriculum and make your job easier.



Scan for free
Agilent iPhone
Apps or visit
qrs.ly/po20pli



See what Agilent can do for you.
www.agilent.com/find/EducationKit

© Agilent Technologies, Inc. 2012

u.s. 1-800-829-4444 canada: 1-877-894-4414

Anticipate — Accelerate — Achieve



Agilent Technologies



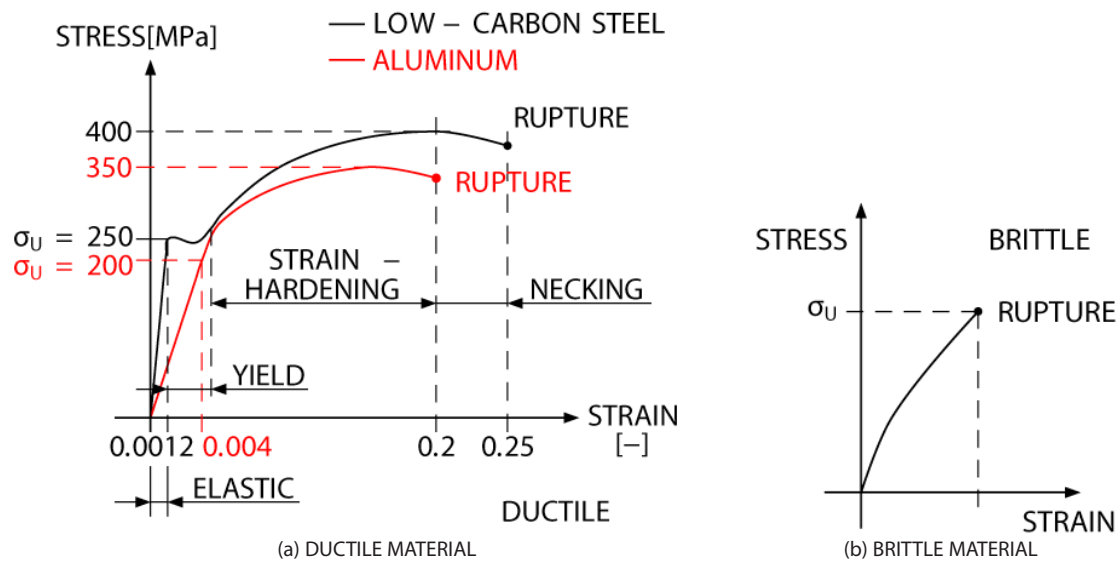


Fig. 2.7

For a more detailed discussion about the diagrams we recommend any book which is concerned with material sciences for engineers.

Many engineering applications undergo small deformations and small strains. Thus the response of material can be expected in an elastic region. For many engineering materials the elastic response is linear, i.e. the straight line portion in a stress-strain diagram. Therefore we can write:

$$\sigma_x = E \varepsilon_x \quad (2.3)$$

This equation is the well-known *Hooke's law*, found by Robert Hooke (1635–1703), the English pioneer of applied mechanics. The coefficient E is called *the modulus of elasticity* for a given material, or *Young's modulus*, named after the English scientist Thomas Young (1773–1829). Since the strain ε is a dimensionless quantity, then the modulus of elasticity E has the same units as the stress σ , in Pascals. The physical meaning of the modulus of elasticity is the stress occurring in a material undergoing a strain equal to one, i.e. the measured specimen is elongated from its initial length L_0 .

If the response of the material is independent from the direction of loading, it is known as *isotropic*. Materials whose properties depend upon the direction of loading are *anisotropic*. Typical example of anisotropic materials are laminates, composites etc.

2.4 Poisson's Ratio

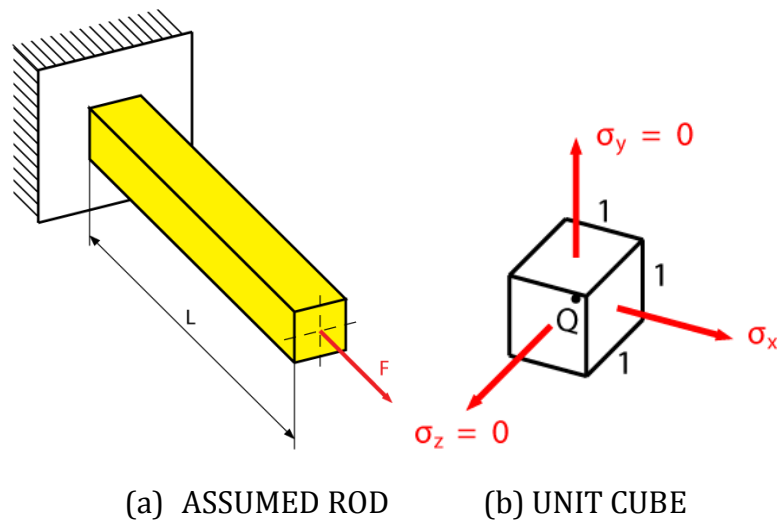


Fig. 2.8

As we can see in the previous sections (2.2 and 2.3) the normal stress and strain have the same direction as the applied load. Let us assume that the homogenous and isotropic rod is axially loaded by a force F as in Fig. 2.8. Then the corresponding normal stress is $\sigma_x = \frac{N(x)}{A} = F/A$ and applying Hooke's law we obtain:

$$\varepsilon_x = \frac{\sigma_x}{E} = \frac{F}{EA} \quad (2.3)$$

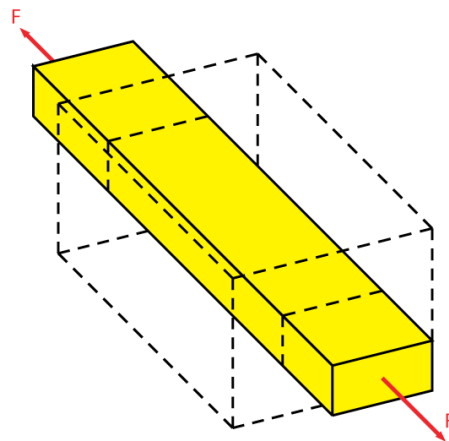


Fig. 2.9

It is natural to assume that normal stresses on the faces of a unit cube which represents the arbitrary point Q are zero. $\sigma_y = \sigma_z = 0$. This could convince one to assume that the corresponding strains $\varepsilon_y, \varepsilon_z$ are zero too. But this is not our case. In many engineering materials the elongation in the direction of applied load is accompanied with a contraction in any transversal direction, see Fig. 2.9. We are assuming homogeneous and isotropic materials, i.e. mechanical properties are independent of position and direction. Therefore we have $\varepsilon_y = \varepsilon_z$. This common value is called the *lateral strain*. Now we can define the important material constant: *Poisson's ratio*, named after Simeon Dennis Poisson (1781–1840), as:

$$\nu = - \frac{\text{lateral strain}}{\text{axial strain}} \quad (2.4)$$

or

$$\nu = - \frac{\varepsilon_y}{\varepsilon_x} = - \frac{\varepsilon_z}{\varepsilon_x} \quad (2.5)$$

Note that the contraction in the lateral direction means that the reduction of lateral dimension return a negative value of strain and a positive value of Poisson's ratio. Usually Poisson's ratio has a value within the interval of $(0, \frac{1}{2})$ for common engineering materials like steel, iron, brass, aluminium, etc. If we apply Hooke's law and eq. (2.5) we will obtain the following strains:

$$\varepsilon_x = \frac{\sigma_x}{E} = \frac{F}{EA} \quad \text{and} \quad \varepsilon_y = \varepsilon_z = - \frac{\nu \sigma_x}{E} = - \frac{\nu F}{EA} \quad (2.6)$$

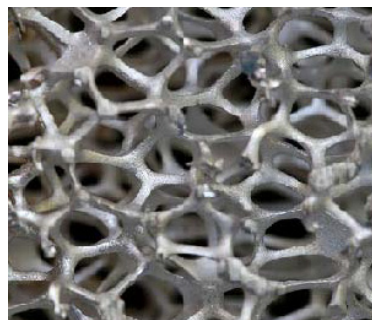


Fig. 2.10 Open foam

The financial industry needs a strong software platform

That's why we need you

Working at SimCorp means making a difference. At SimCorp, you help create the tools that shape the global financial industry of tomorrow. SimCorp provides integrated software solutions that can turn investment management companies into winners. With SimCorp, you make the most of your ambitions, realising your full potential in a challenging, empowering and stimulating work environment.

Are you among the best qualified in finance, economics, computer science or mathematics?

Find your next challenge at www.simcorp.com/careers

Mitigate risk | Reduce cost | Enable growth
simcorp.com



"When I joined SimCorp, I was very impressed with the introduction programme offered to me."

Meet Lars and other employees at simcorp.com/meetouremployees





Naturally, there exist some materials with a negative value of Poisson's ratio. These materials are known as cellular, i.e. foams and honeycombs. Instead of contraction, they elongate in the lateral direction. The structure of these materials is presented in Fig. 2.10. For more information see any book written by L.J. Gibson and M.F. Ashby.

2.5 Generalised Hooke's Law for Multiaxial Loading

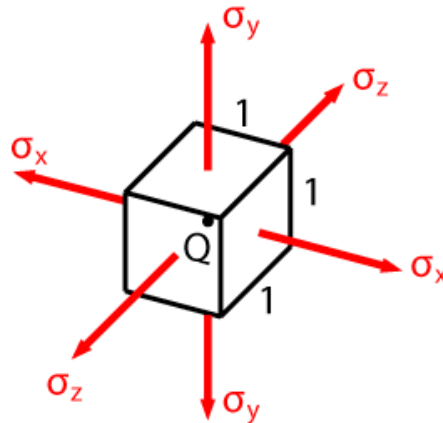


Fig. 2.11

Until now we have discussed slender members (rods, bars) under axial loading alone. This resulted in a stress state at any arbitrary point of Q : $\sigma_x = \frac{F}{A}$, $\sigma_y = \sigma_z = 0$. Now let us consider multiaxial loading acting in the direction of all three coordinate axes and producing non-zero normal stresses: $\sigma_x \neq \sigma_y \neq \sigma_z \neq 0$, see Fig. 2.11.

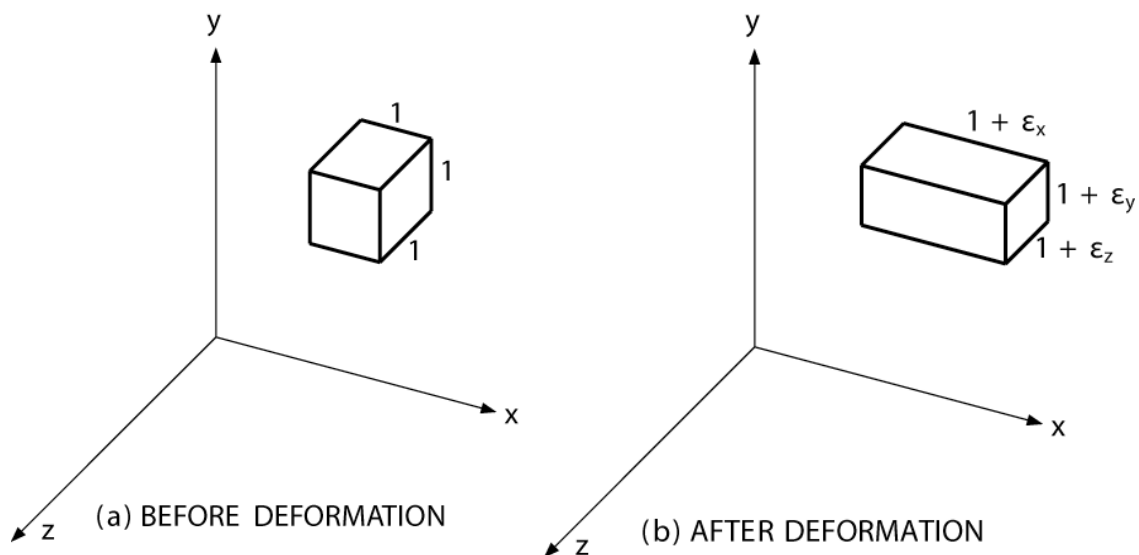


Fig. 2.12

Let us consider that our material is isotropic and homogeneous. Our arbitrary point Q is represented by a unit cube (where the dimensions of each side are a unit of the length), see Fig. 2.12. Under the given multiaxial loading the unit cube is deformed into a rectangular parallelepiped with the following sides: $(1 + \varepsilon_x), (1 + \varepsilon_y), (1 + \varepsilon_z)$, where $\varepsilon_x, \varepsilon_y, \varepsilon_z$ are strains in the directions of the coordinate axes seen in Fig. 2.12(b). It is necessary to emphasize that the unit cube is undergoing the deformation motion only with no rigid motion (translation). Then we can express the strain components $\varepsilon_x, \varepsilon_y, \varepsilon_z$ in terms of the stress components $\sigma_x, \sigma_y, \sigma_z$. For this purpose, we will first consider the effect of each stress component separately. Secondly we will combine the effects of all contributing stress components by applying the principle of superposition. This principle states that the final effect of combined loading can be obtained by determining the effects for individual loads separately and subsequently these separate effects are combined into the final result.

In our case the strain components are caused by the stress component σ_x : in the x direction $\varepsilon'_x = \sigma_x/E$ and in the y and z directions $\varepsilon'_y = \varepsilon'_z = -\nu\sigma_x/E$ recalling eq. (2.6). Similarly, the stress component σ_y causes the strain components: in the y direction $\varepsilon''_y = \sigma_y/E$ and in x and z directions $\varepsilon''_x = \varepsilon''_z = -\nu\sigma_y/E$. And finally the stress component σ_z causes the strain components: in z direction $\varepsilon'''_z = \sigma_z/E$ and in x and y directions $\varepsilon'''_x = \varepsilon'''_y = -\nu\sigma_z/E$. These are separate effects of individual stress components. The final strain components are then the sums of individual contributions, i.e.

$$\begin{aligned}\varepsilon_x &= \varepsilon'_x + \varepsilon''_x + \varepsilon'''_x = \frac{\sigma_x}{E} - \frac{\nu\sigma_y}{E} - \frac{\nu\sigma_z}{E} \\ \varepsilon_y &= \varepsilon'_y + \varepsilon''_y + \varepsilon'''_y = -\frac{\nu\sigma_x}{E} + \frac{\sigma_y}{E} - \frac{\nu\sigma_z}{E} \\ \varepsilon_z &= \varepsilon'_z + \varepsilon''_z + \varepsilon'''_z = -\frac{\nu\sigma_x}{E} - \frac{\nu\sigma_y}{E} + \frac{\sigma_z}{E}\end{aligned}\quad (2.7)$$

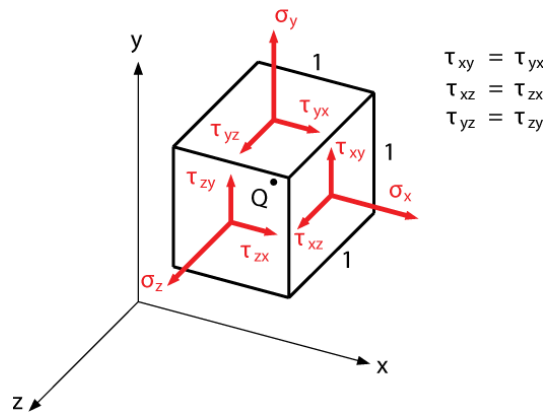


Fig. 2.13

The equation (2.7) are known as a part of the generalised Hooke's law or a part of the elasticity equations for homogeneous and isotropic materials.

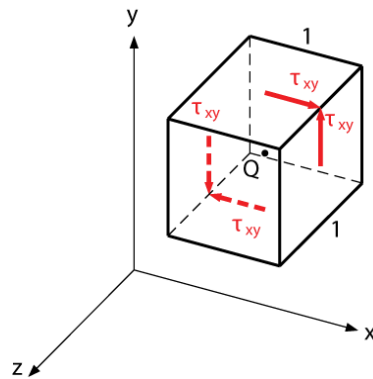


Fig. 2.14

Until now, shearing stresses have not been involved in our discussion. Therefore consider the more generalized stress state defines with six stress components $\sigma_x, \sigma_y, \sigma_z, \tau_{xy}, \tau_{xz}, \tau_{yz}$, see Fig. 2.13. The shearing stresses $\tau_{xy}, \tau_{xz}, \tau_{yz}$ have no direct effect on normal strains, as long as the deformations remain small. In this case there is no effect on validity of equation (2.7). The occurrence of shearing stresses is clearly observable. Since the shearing stresses tend to deform the unit cube into a oblique parallelepiped.



ENGINEERING, RESEARCH AND OPERATIONS

85

years of
innovation

Who are we?
We are the world's largest oilfield services company¹. Working globally—often in remote and challenging locations—we invent, design, engineer, and apply technology to help our customers find and produce oil and gas safely.

Who are we looking for?
We're looking for high-energy, self-motivated graduates with vision to work in our engineering, research and operations domain.

> 113,000 employees

> 140 nationalities

> 85 countries of operation

What will you be?

Schlumberger

careers.slb.com

¹ Based on Fortune 500 ranking 2011. Copyright © 2012 Schlumberger. All rights reserved.



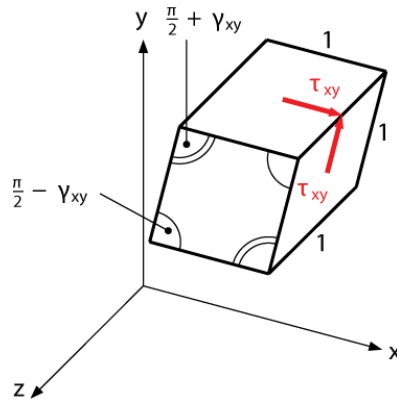


Fig. 2.15

For simplicity, let us consider a unit cube of material which undergoes a simple shear in the xy plane, see Fig. 2.14. The unit cube is deformed into the rhomboid with sides equal to one, see Fig. 2.15. In other words, shearing stresses cause the shape changes while normal stresses cause the volume changes. Let us focus on the angular changes. The four angles undergo a change in their values. Two of them reduced their values from $\frac{\pi}{2}$ to $\frac{\pi}{2} - \gamma_{xy}$ while the other two increase from $\frac{\pi}{2}$ to $\frac{\pi}{2} + \gamma_{xy}$. This angular change γ_{xy} (measured in radians) defines the *shearing strain* in both directions x and y . The shearing strain is positive if the reduced angle is formed by two faces with the same direction as the positive x and y axes, see Fig. 2.15. Otherwise it is negative.

In a similar way as the normal stress-strain diagram for tensile test we can obtain the shear stress-strain plot for simple shear or simple torsion, discussed in Chapter 3. From a mathematical point of view we can write Hooke's law for the straight part of the diagram by:

$$\tau_{xy} = G\gamma_{xy} \quad (2.8)$$

The material constant G is the *shear modulus* for any given material and has the similar physical meaning as Young's modulus.

If we consider shear in the xz and yz planes we will get similar solutions to Eq. (2.8) for stresses in those planes, i.e.

$$\tau_{xz} = G\gamma_{xz} \quad \tau_{yz} = G\gamma_{yz} \quad (2.9)$$

Finally we can conclude that the generalised Hooke's law or elasticity equations for the generalised stress state are written by:

$$\begin{aligned}
 \varepsilon_x &= \frac{\sigma_x}{E} - \frac{\nu\sigma_y}{E} - \frac{\nu\sigma_z}{E} \\
 \varepsilon_y &= -\frac{\nu\sigma_x}{E} + \frac{\sigma_y}{E} - \frac{\nu\sigma_z}{E} \\
 \varepsilon_z &= -\frac{\nu\sigma_x}{E} - \frac{\nu\sigma_y}{E} + \frac{\sigma_z}{E}
 \end{aligned}
 \tag{2.10}$$

$$\gamma_{xy} = \frac{\tau_{xy}}{G}$$

$$\gamma_{xz} = \frac{\tau_{xz}}{G}$$

$$\gamma_{yz} = \frac{\tau_{yz}}{G}$$

The validity of these equations is limited to isotropic materials, the proportionality limit stress that can not be exceeded by none of the stresses, and the superposition principle. Equation (2.10) contains three material constants E , G , ν that must be determined experimentally. In reality we need only two of them, because the following relationship can be derived

$$G = \frac{E}{2(1+\nu)} \tag{2.11}$$

2.6 Saint Venant's Principle



Fig. 2.16

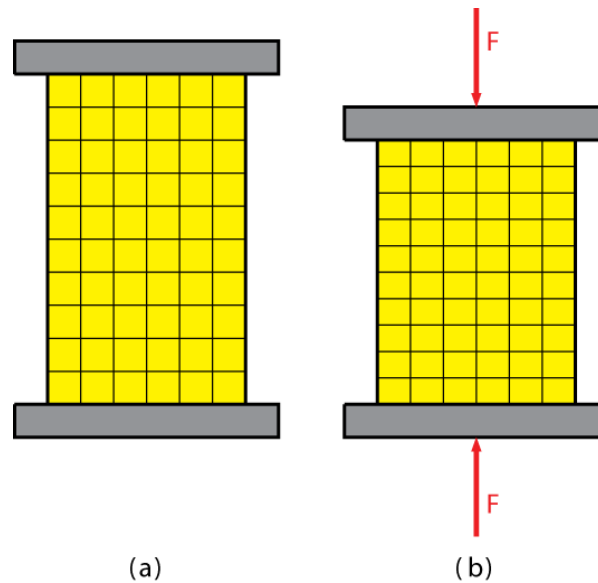


Fig. 2.17

Until now we have discussed axially loaded members (bars, rods) with uniformly distributed stress over the cross-section perpendicular to the axis of the member. This assumption can cause errors in the vicinity of load application. For simplicity let us consider a homogeneous rubber-like member that is axially loaded by a compressive force F , see Fig. 2.16. Let us make the following two experiments. Firstly, we draw a squared mesh over the member; see Fig. 2.17(a). Then we apply the compressive load through two rigid plates; see Fig. 2.17(b). The member is deformed in such a manner that it remains straight but the original square element change into a rectangular elements, see Fig. 2.17(b). The deformed mesh is uniform; therefore the strain distribution over a perpendicular cross-section is also uniform. If the strain is uniform, then we can conclude that the stress distribution is also similarly uniform described by Hooke's law. Secondly we apply the compressive force to the same meshed member throughout the sharp points, see Fig. 2.18. This is the effect of a concentrated load. We can observe strong deformations in the vicinity of the load application point. At certain distances from the end of a member the mesh is again uniform and rectangular. Therefore we can say that there are large deformations and stresses around the load application point while uniform deformations and stresses occur farther from this point. In other words, except for the vicinity of load application point, the stress distribution function may be assumed independently to the load application mode. This statement which can be applicable to any type of loading is known as *Saint-Venant's principle*, after Adhémar Barré de Saint-Venant (1797–1886).

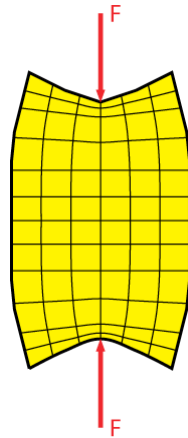


Fig. 2.18

While Saint-Venant's principle makes it possible to replace actual loading with a simpler one for computational purposes, we need to keep in mind the following:

- The actual loading and loading used to compute stresses must be statically equivalent.
- Stresses cannot be computed in the vicinity of load application point. In these cases advanced theoretical and experimental method must be applied for stress determination.



You're full of *energy*
and ideas. And that's
just what we are looking for.

Looking for a career where your ideas could really make a difference? UBS's Graduate Programme and internships are a chance for you to experience for yourself what it's like to be part of a global team that rewards your input and believes in succeeding together.

Wherever you are in your academic career, make your future a part of ours by visiting www.ubs.com/graduates.

www.ubs.com/graduates



© UBS 2010. All rights reserved.



2.7 Deformations of Axially Loaded Members

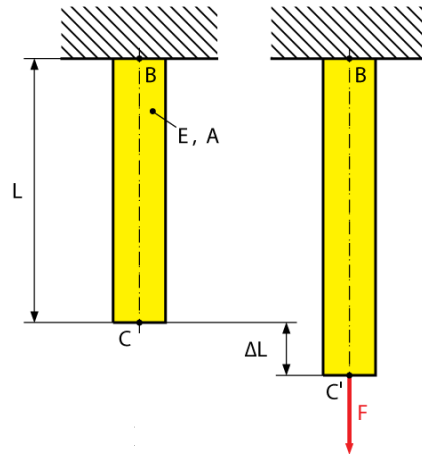


Fig. 2.18

Let us consider a homogeneous isotropic member BC of length L , cross-sectional area A , and Young's modulus E subjected to the centric axial force F , see Fig. 2.18. If the resulting normal stress $\sigma_x = N_{(x)}/A = F/A$ does not exceed the proportional limit stress and applying Saint-Venant's principle we can then apply Hooke's law

$$\sigma_x = E\varepsilon_x \quad \text{or} \quad \varepsilon_x = \frac{\sigma_x}{E} \quad (2.12)$$

And substituting for the normal stress $\sigma_x = N_{(x)}/A = F/A$ we have

$$\varepsilon_x = \frac{N_{(x)}}{E A} = \frac{F}{E A} \quad (2.13)$$

Recalling the definition of normal strain, equation (2.1) we get

$$\Delta L = \varepsilon_x L \quad (2.14)$$

and substituting equation (2.13) into equation (2.14) we have

$$\Delta L = \frac{N_{(x)}L}{E A} = \frac{F L}{E A} \quad (2.15)$$

Now we can conclude that the application of this equation: *Equation (2.15) may be used only if the rod is homogeneous (constant E), has a uniform cross-sectional area A , and is loaded at both ends.* If the member is loaded at any other point or is composed from several different homogeneous parts having different cross-sectional areas we must apply the division into parts satisfying the previous conclusion. Denoted $N_{i(x)}$, E_i , A_i , L_i the internal normal force, Young's modulus, cross-sectional area and length corresponding to the part i respectively. Then the total elongation is the sum of individual elongations (principle of superposition):

$$\Delta L = \sum_{i=1}^n \Delta L_i = \sum_{i=1}^n \frac{N_{i(x)} L_i}{E_i A_i} \quad (2.16)$$

In the case of variable cross-sectional area, as in Fig. 2.4, the strain depends on the position of the arbitrary point Q , therefore we must apply equation (2.2) for the strain computation. After some mathematical manipulation we have the total elongation of the member

$$\Delta L = \int_{(L)} \frac{N(x)}{EA} dx \quad (2.17)$$

Until now we could solve problems starting with the free body diagram, and subsequently determine the reactions from equilibrium equations. Recalling the method of sections in (chapter 2.2) we can compute internal forces at any arbitrary section, allowing us to then proceed with computing stresses, strains and deformations. But many engineering problems can not be solved by the approach of statics alone.

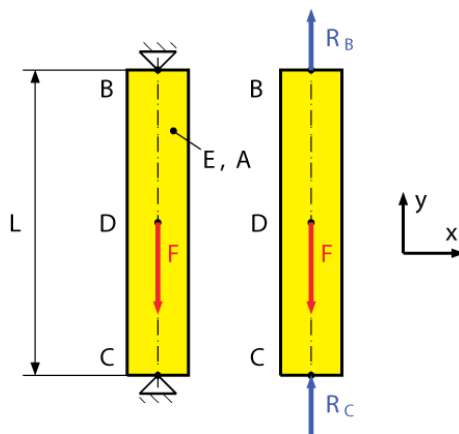


Fig. 2.19

For simplicity, let us consider a simple problem, see Fig. 2.19. Using statics we cannot solve the problem through equilibrium equations. The main difficulty in this problem is that the number of unknown reactions is greater than the number of equilibrium equations. From a mathematical point of view the problem is ill-conditioning. For our case we obtain one equilibrium equation as

$$\sum F_x = 0 : R_C - F + R_B = 0 \quad (2.18)$$

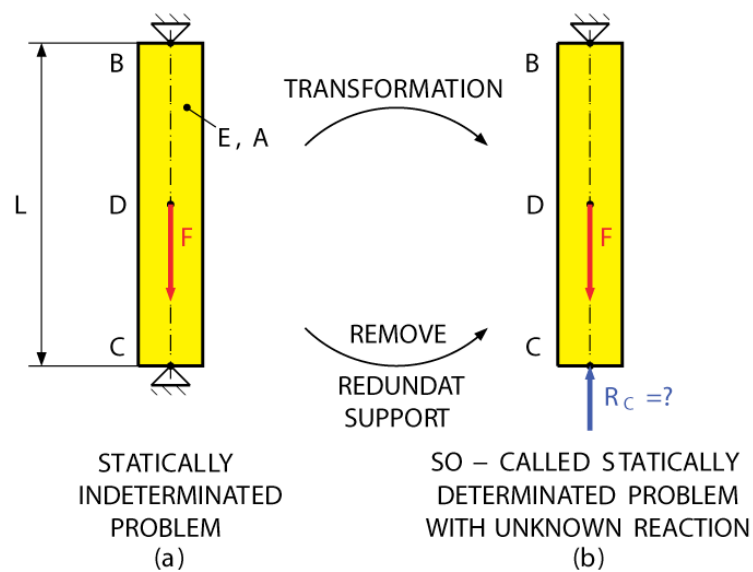


Fig. 2.20

There are two unknown reactions in equation (2.18). Problems of this type are called *statically indeterminate problems*.

Do you have to be a banker to work in investment banking?

Deutsche Bank
db.com/careers

Agile minds **value ideas** as well as experience

Global Graduate Programs

Ours is a complex, fast-moving, global business. There's no time for traditional thinking, and no space for complacency. Instead, we believe that success comes from many perspectives — and that an inclusive workforce goes hand in hand with delivering innovative solutions for our clients. It's why we employ 135 different nationalities. It's why we've taken proactive steps to increase female representation at the highest levels. And it's just one of the reasons why you'll find the working culture here so refreshing.

Discover something different at db.com/careers

Passion to Perform



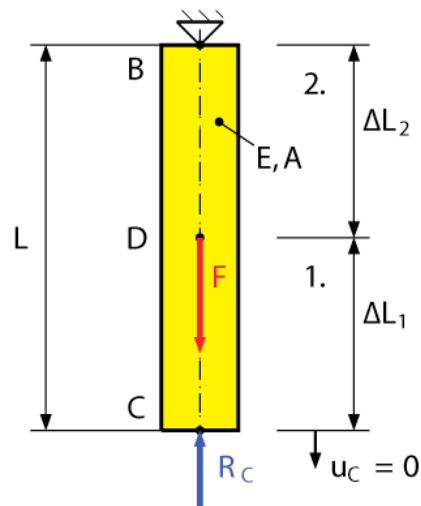


Fig. 2.21

To overcome the static indeterminacy we need to complete the system of equilibrium equations with relations involving deformations by considering the geometry of the problem. These additional relations are called *deformation conditions*. For practical solution let us consider the following transformation in Fig. 2.20. The problem presented is exactly the same as the problem in Fig. 2.19. This problem is statically indeterminate to the first degree. Removing the redundant support at point C and replacing it with the unknown reaction R_c we obtain the so-called statically indeterminate problem with unknown reaction, see Fig. 2.20(b). Now our task is to receive the same response for the statically indeterminate problem as in the original statically indeterminate problem. To get the same response of the structure we need to impose the deformation condition for point C, that the displacement for this point is equal to zero, see Fig. 2.21, or mathematically

$$u_c = 0 \quad (2.19)$$

This condition (2.19) coincides with the total elongation of the member also equal to zero. We then have:

$$u_c = \Delta L = 0 \quad (2.20)$$

The member presented in Fig. 2.21 can be divided into two homogeneous parts. Therefore the total elongation is a sum of individual elongation, equation (2.16), i.e. $\Delta L = \Delta L_1 + \Delta L_2$. Then we have

$$\Delta L = \frac{N_{1(x)}L_1}{EA} + \frac{N_{2(x)}L_2}{EA} = 0 \quad (2.21)$$

Both normal forces $N_{1(x)} = -R_C$, $N_{2(x)} = F - R_C$ are functions of unknown reaction R_C . Solving equation (2.21) we obtain the value of reaction R_C . We can then continue by solving in the usual way for statically determinate problems.

2.8 Problems Involving Temperature Changes

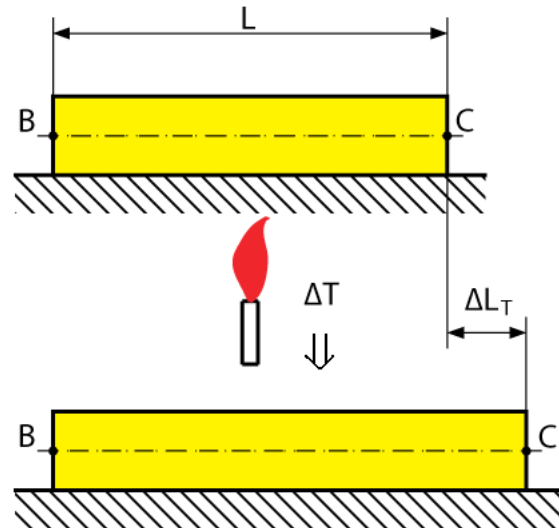


Fig. 2.22

In the previous discussions we assumed constant temperature as the member was being loaded. Let us now consider a homogeneous rod BC with the constant cross-sectional area A and the initial length L , see Fig. 2.22. If the temperature of the rod grows by ΔT then we will observe the elongation of the rod by ΔL_T , see Fig. 2.22. This elongation is proportional to the temperature increase ΔT and the initial length L . Using basic physics we have

$$\Delta L_T = \alpha(\Delta T)L \quad (2.22)$$

where α is the *coefficient of thermal expansion*. The thermal strain ε_T is associated with the aforementioned elongation ΔL_T , i.e. $\varepsilon_T = \Delta L_T/L$. Then we have

$$\varepsilon_T = \alpha(\Delta T) \quad (2.23)$$

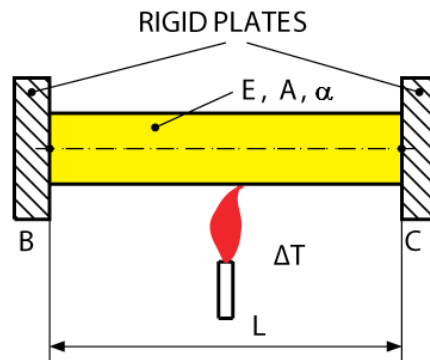


Fig. 2.23

In this case there is no stress in a rod. We can prove this very easily by applying the method of sections and writing equilibrium equations.

**Real drive.
Unreal destination.**

As an intern, you're eager to put what you've learned to the test. At Ernst & Young, you'll have the perfect testing ground. There are plenty of real work challenges. Along with real-time feedback from mentors and leaders. You'll also get to test what you learn. Even better, you'll get experience to learn where your career may lead. Visit ey.com/internships.

[See More | Opportunities](#)

ERNST & YOUNG
Quality In Everything We Do

© 2012 Ernst & Young LLP. All Rights Reserved.



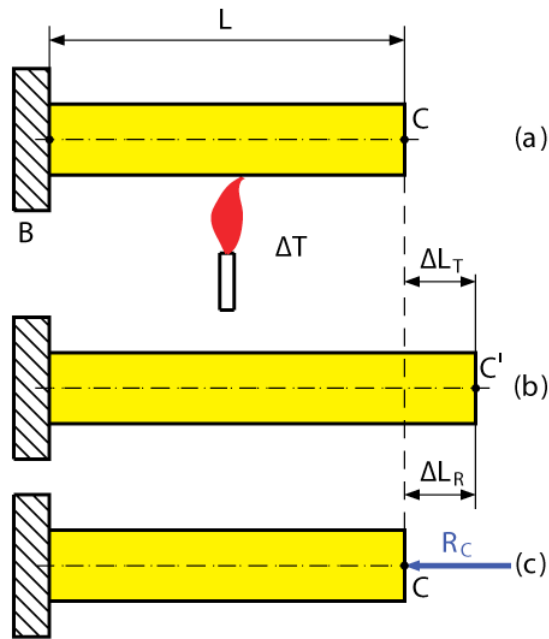


Fig. 2.24

By modify the previous rod by placing it between two rigid plates and subjecting it to a temperature change of ΔT we will observe no elongation because of the fixed supports at its ends. We know that this problem is statically indeterminate due to the supports at each end. Let us then transform the problem into the so-called statically determinate problem. Removing the support at point C and replace it by unknown reaction R_C . Now we can apply the principle of superposition in the following way. Firstly, we heat the rod by ΔT , see Fig. 2.24(a), then we can observe the elongation $\Delta L_T = \alpha(\Delta T)L$, see Fig. 2.24(b). Secondly, we push the rod by the reaction R_C back to its initial length, see Fig. 2.24(c). The effect of pushing is the opposite of elongation ΔL_{R_C} . Applying the formulas (2.22) and (2.15) we have

$$\Delta L_T = \alpha(\Delta T)L \quad \text{and} \quad \Delta L_{R_C} = \frac{R_C L}{EA} \quad (2.24)$$

Expressing the condition that the total elongation must be zero, we get

$$\Delta L = \Delta L_T + \Delta L_{R_C} = \alpha(\Delta T)L + \frac{R_C L}{EA} = 0 \quad (2.25)$$

This equation represents the deformation condition. And we can compute the reaction as

$$R_C = -EA\alpha(\Delta T) \quad (2.26)$$

and corresponding stress

$$\sigma_x = \frac{N(x)}{A} = \frac{R_C}{A} = -E\alpha(\Delta T) \quad (2.27)$$

2.9 Trusses

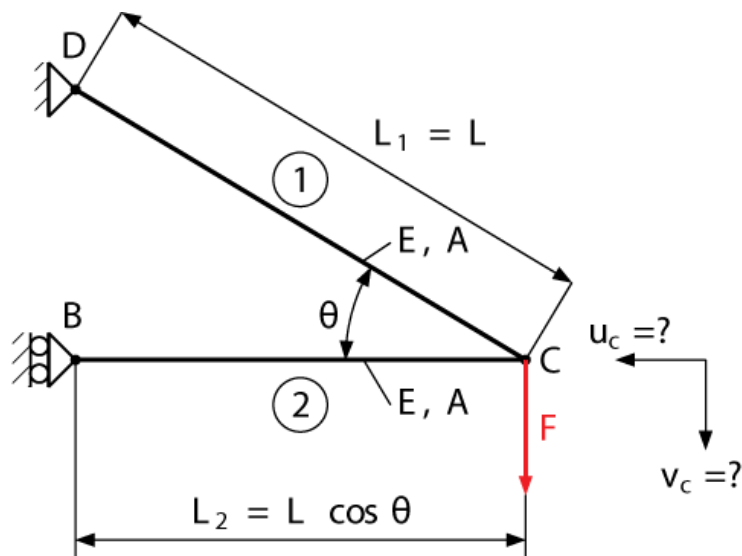


Fig. 2.25

The truss is a structure consisting of several slender members (rods, bars) that are subjected to axial loading only. The simple truss structure is presented in Fig. 2.25. This truss consists of two bars of the same cross-sectional area A and Young's modulus E . The truss is loaded by a vertical force F . Our task is to compute the vertical and horizontal displacements of joint C . Applying the methods of statics we can determine axial forces in each bar: $N_1 = F/\sin \theta$, $N_2 = F/\tan \theta$. Consequently, we can determine elongations for individual bars using equation (2.15)

$$\Delta L_1 = \frac{N_1 L_1}{EA} = \frac{F L_1}{EA \sin \theta} \quad \text{and} \quad \Delta L_2 = \frac{N_2 L_2}{EA} = \frac{F L_2}{EA \tan \theta} \quad (2.28)$$

The deformed configuration can be founded by drawing two circles with centres at joints B and D with the following radii, see Fig. 2.26

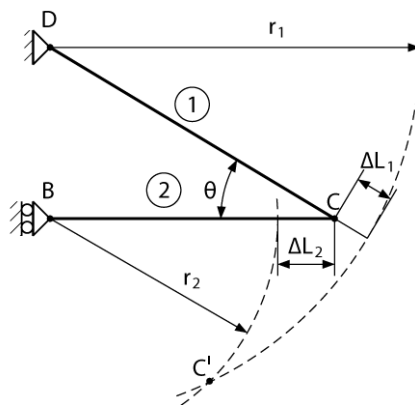


Fig. 2.26

$$r_1 = L_1 + \Delta L_1 = L_1 \left(1 + \frac{F}{EA \sin \theta} \right)$$

$$r_2 = L_2 - \Delta L_2 = L_2 \left(1 - \frac{F}{EA \tan \theta} \right)$$

The deformations are relatively small, therefore we can replace the circles with tangents perpendicular to the undeformed bars, see Fig. 2.27. One can then compute the horizontal and vertical displacements as follows:

$$u_C = \Delta L_2 = \frac{F L_2}{EA \tan \theta}$$

$$v_C = \Delta L_1 \sin \theta + \frac{\Delta L_2 + \Delta L_1 \cos \theta}{\tan \theta} = \frac{F L_1}{EA \sin^2 \theta} + \frac{F L_2}{EA \tan^2 \theta} \quad (2.29)$$

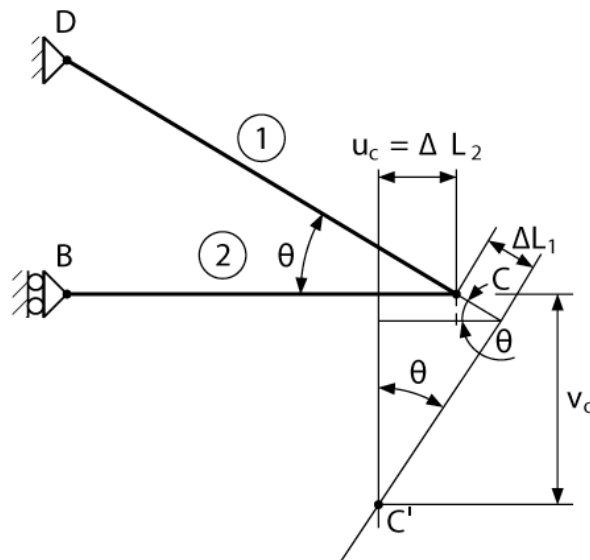


Fig. 2.27 Vertical and horizontal displacements

2.10 Examples, Solved and Unsolved Problems

Problem 2.1

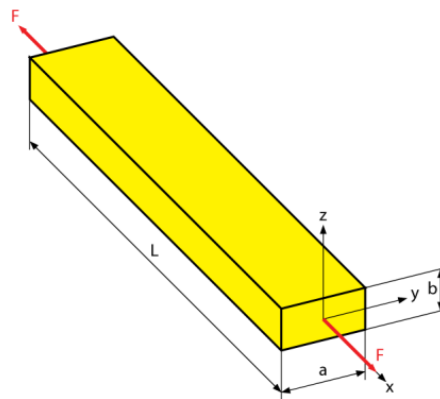


Fig. 2.28

A steel bar has the following dimensions: $a = 100 \text{ mm}$, $b = 50 \text{ mm}$, $L = 1500 \text{ mm}$, shown in Fig. 2.28. If an axial force of $F = 80 \text{ kN}$ is applied to the bar, determine the change in its length and the change in the dimensions of its cross-section after the load is applied. Assume that the material behaves elastically, where the Young's modulus for steel is $E = 200 \text{ GPa}$ and Poisson's ratio $\nu = 0.32$.

Solution

The normal stress in the bar is

$$\sigma_x = \frac{F}{A} = \frac{F}{ab} = \frac{80(10^3) \text{ N}}{(0.1 \text{ m})(0.05 \text{ m})} = 16.0 \times 10^6 \text{ Pa} = 16.0 \text{ MPa}.$$

The strain in the x direction is

$$\varepsilon_x = \frac{\sigma_x}{E} = \frac{16 \times 10^6 \text{ Pa}}{200 \times 10^9 \text{ Pa}} = 80 \times 10^{-6}.$$

The axial elongation of the bar then becomes

$$\Delta L_x = \varepsilon_x L = \frac{\sigma_x}{E} L = \frac{FL}{abE} = (80 \times 10^{-6}) \times 1.5 \text{ m} = 120 \mu\text{m}.$$

The next step for
top-performing
graduates

Masters in Management



Designed for high-achieving graduates across all disciplines, London Business School's Masters in Management provides specific and tangible foundations for a successful career in business.

This 12-month, full-time programme is a business qualification with impact. In 2010, our MiM employment rate was 95% within 3 months of graduation*; the majority of graduates choosing to work in consulting or financial services.

As well as a renowned qualification from a world-class business school, you also gain access to the School's network of more than 34,000 global alumni – a community that offers support and opportunities throughout your career.

For more information visit www.london.edu/mm, email mim@london.edu or give us a call on **+44 (0)20 7000 7573**.

* Figures taken from London Business School's Masters in Management 2010 employment report



Using Eq. (2.6) for the determination of Poisson's ratio, where $\nu = 0.32$ as given for steel, the contraction strain in the y and z direction are

$$\varepsilon_y = \varepsilon_z = -\nu\varepsilon_x = -0.32(80 \times 10^{-6}) = -25.6 \mu\text{m/m}.$$

Thus the changes in the dimensions of cross-section are given by

$$\Delta L_y = \varepsilon_y L_y = -\nu\varepsilon_x a = -\nu a \frac{\sigma_x}{E} = -\nu a \frac{F}{abE}$$

$$\Delta L_y = -\frac{F\nu}{bE} = -2.56 \mu\text{m}$$

$$\Delta L_z = \varepsilon_z L_z = -\nu\varepsilon_x b = -\nu b \frac{\sigma_x}{E} = -\nu b \frac{F}{abE}$$

$$\Delta L_z = -\frac{F\nu}{aE} = -1.28 \mu\text{m}.$$

Problem 2.2

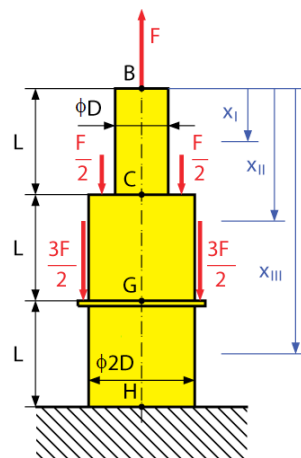


Fig. 2.29


A composite steel bar shown in Fig. 2.29 is made from two segments, BC and CH, having circular cross-section with a diameter of $D_{BC} = D$ and $D_{CH} = 2D$. Determine the diameter D , if we have an allowable stress of $\sigma_{All} = 147 \text{ MPa}$ and the applied load is $F = 20 \text{ kN}$.

Solution

We can divide the bar into three parts (BC, CG and GH) which have constant cross-section area and constant loading.

Stress and Equilibrium for part BC

$$x_I \in \langle 0, L \rangle$$

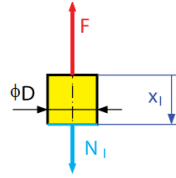

Solution of normal (axial) load N_I


$$\sum F_{ix_I} = 0: \quad F - N_I = 0 \quad \Rightarrow \quad N_I = F = 20 \text{ kN}$$

Stress in the part BC

$$\sigma_I = \frac{N_I}{A_I} = \frac{F}{\frac{\pi D^2}{4}} = \frac{4F}{\pi D^2} = \frac{4 \times 20000 \text{ N}}{\pi D^2} = 25464.8 \frac{1}{D^2}$$

Equilibrium and stress in part CG

$$x_{II} \in \langle L, 2L \rangle$$

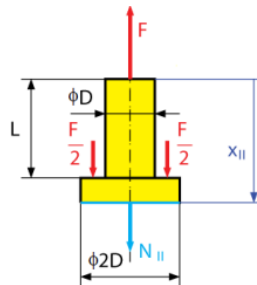

Solution of normal (axial) load N_{II}


$$\sum F_{ix_{II}} = 0: \quad F - \frac{F}{2} - \frac{F}{2} - N_{II} = 0 \quad \Rightarrow \quad N_{II} = 0$$

Stress in part BC

$$\sigma_I = \frac{N_I}{A_I} = \frac{F}{\frac{\pi D^2}{4}} = \frac{4F}{\pi D^2} = \frac{4 \times 20000 \text{ N}}{\pi D^2} = 25464.8 \frac{1}{D^2}$$

Equilibrium of part and stress in part GH

$$x_{III} \in \langle 2L, 3L \rangle$$

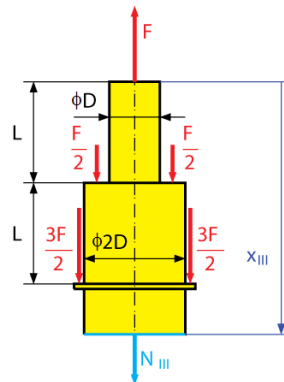

Solution of normal (axial) load N_{III}

$$\sum F_{ix_{III}} = 0: \quad F - \frac{F}{2} - \frac{F}{2} - \frac{3}{2}F - \frac{3}{2}F - N_{III} = 0 \quad \Rightarrow \quad N_{III} = -3F$$

$$N_{III} = -3F = -3 \times 20000 \text{ N} = -90000 \text{ N}$$


STEP INTO A WORLD
OF OPPORTUNITY

www.ecco.com/trainees
trainees@ecco.com



Stress in part CD

$$\sigma_{III} = \frac{N_{III}}{A_{III}} = \frac{-3F}{\frac{\pi(2D)^2}{4}} = -\frac{3F}{\pi D^2} = -\frac{3 \times 20000 \text{ N}}{\pi D^2} = -19098.6 \frac{1}{D^2}$$

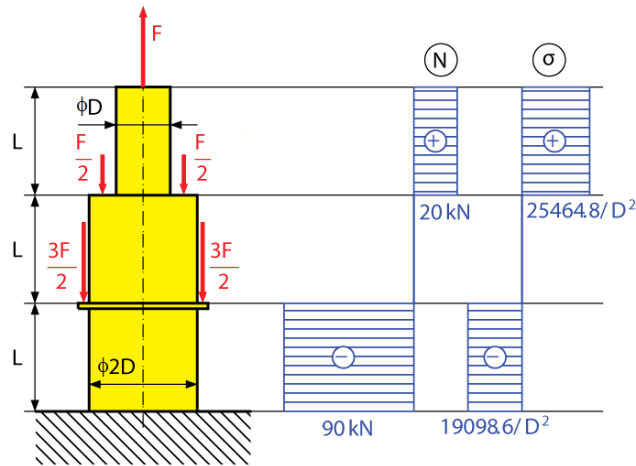

For all parts, draw the diagram of normal force and stress. The maximum stress is in the first part (BC), which we can compare with the allowable stress and obtain the parameter D

$$\sigma_{MAX} = \sigma_I = \frac{4F}{\pi D^2} \leq \sigma_{All} \Rightarrow D \geq \sqrt{\frac{4F}{\pi \sigma_{All}}}$$

$$D \geq \sqrt{\frac{4 \times 20000 \text{ N}}{\pi \cdot 147 \text{ MPa}}} \Rightarrow D \geq 13.2 \text{ mm}$$

Problem 2.3

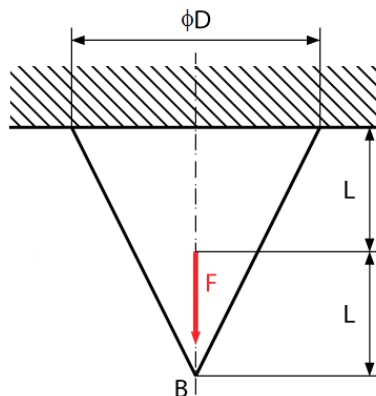


Fig 2.30

Determine the elongation of a conical bar shown in Fig. 2.30 at point B without considering its weight.


Given by maximum cone diameter of D , length L , modulus of elasticity E and applied force F , Determine the maximum stress in the conical bar.

Solution

The problem is divided into two parts.

Equilibrium of the first part

$$x_1 \in \langle 0, L/2 \rangle$$

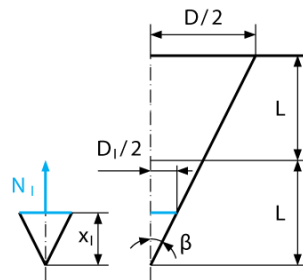

We determine the normal force N_1 and normal stress σ_1 .

Normal force N_1 :

$$\sum F_{ix_1} = 0: \quad N_1(x_1) = 0 \quad \Rightarrow \quad N_1(x_1) = 0$$

Calculate angle β from the geometry of the cone given by diameter D_1 at position x_1

$$\tan \beta = \frac{D/2}{L} = \frac{D_1(x_1)/2}{x_1} \quad \Rightarrow \quad D_1(x_1) = \frac{x_1}{L} D$$

Cross-sectional area (function of position) in the first part is


$$A_1(x_1) = \frac{\pi D_1^2}{4} = \frac{\pi}{4} \left(\frac{x_1}{L} D \right)^2 = \frac{\pi D^2}{4} \frac{x_1^2}{L^2}$$

Normal stress σ_1 is as follows

$$\sigma_1(x_1) = \frac{N_1(x_1)}{A_1(x_1)} = \frac{0}{\frac{\pi D^2 x_1^2}{4L^2}} = 0$$

Equilibrium of the second part


$$x_{II} \in \langle L/2, L \rangle$$

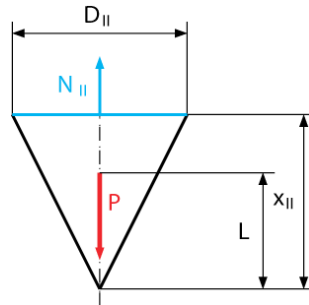

We determine the normal force N_{II} and normal stress σ_{II} .

Normal force N_{II} :

$$\sum F_{ix_{II}} = 0: \quad N_{II}(x_{II}) - F = 0 \quad \Rightarrow \quad N_{II}(x_{II}) = F$$

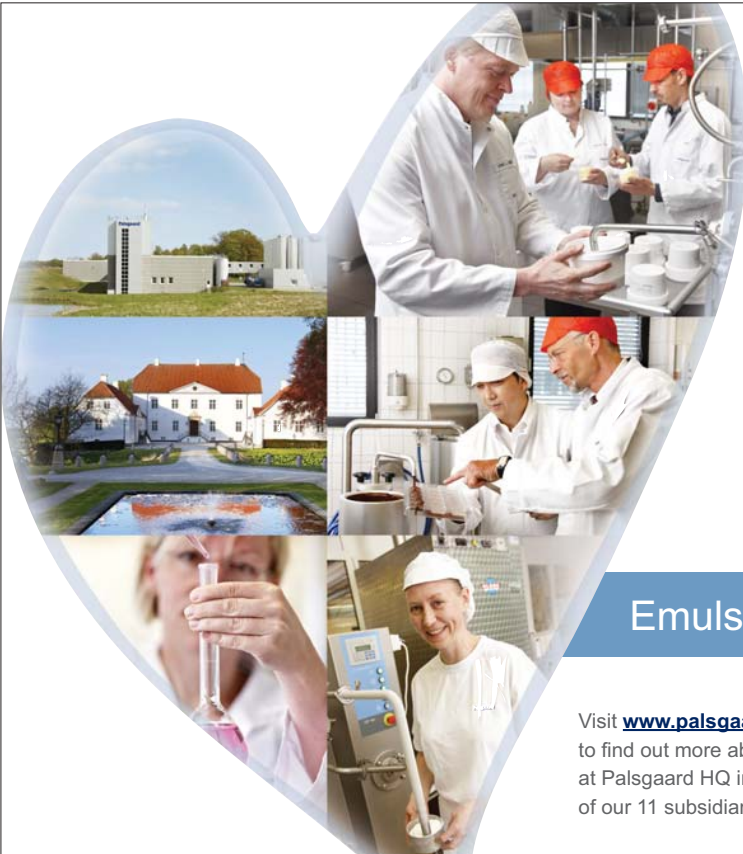

We are experts in emulsifiers and stabilizers for:

- **bakery**
- **confectionery**
- **dairy**
- **ice cream**
- **margarine**
- **fine foods**

and we are constantly looking for new “heart-working” colleagues who are passionate and dedicated to helping food companies around the world develop new and innovating products.

Emulsifiers and stabilizers

Visit www.palsgaard.com to find out more about a career at Palsgaard HQ in Denmark or in one of our 11 subsidiaries around the world.

Palsgaard®
 Heart working people

Palsgaard A/S
 DK-7130 Juelsminde, Denmark
 Phone +45 76 82 76 82
direct@palsgaard.dk



Calculation of angle β from geometry and diameter D_{II} at position x_{II}

$$\tan \beta = \frac{\frac{D}{2}}{\frac{x_{II}}{L}} = \frac{\frac{D_{II}(x_{II})}{2}}{\frac{x_{II}}{L}} \Rightarrow D_{II}(x_{II}) = \frac{x_{II}}{L} D$$

Cross-section area (function of position) in second part is

$$A_{II}(x_{II}) = \frac{\pi D_{II}^2}{4} = \frac{\pi}{4} \left(\frac{x_{II}}{L} D \right)^2 = \frac{\pi D^2}{4} \frac{x_{II}^2}{L^2}$$

Normal stress σ_{II} is then

$$\sigma_{II}(x_{II}) = \frac{N_{II}(x_{II})}{A_{II}(x_{II})} = \frac{F}{\frac{\pi D^2 x_{II}^2}{4L^2}} = \frac{4FL^2}{\pi D^2 x_{II}^2}$$

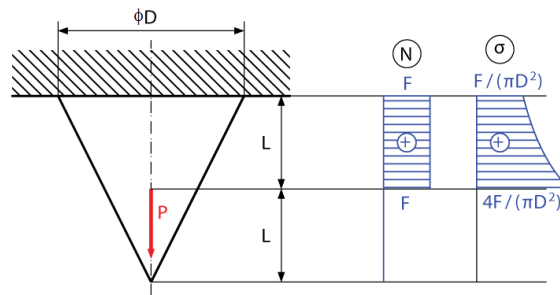


Fig. 2.31

The graphical result of the normal force and stress is shown in the Fig. 2.31.


Elongation is found by summing the elongation of each part using integration, because cross-section area is a function of position in all parts, which is given by

$$\Delta L_B = \Delta L_I + \Delta L_{II} = \int_0^{L/2} \frac{N_I(x_I)}{EA_I(x_I)} dx_I + \int_{L/2}^L \frac{N_{II}(x_{II})}{EA_{II}(x_{II})} dx_{II}$$


$$\Delta L_B = \int_0^{L/2} \frac{0}{EA_I(x_I)} dx_I + \int_{L/2}^L \frac{F}{\frac{\pi D^2 x_{II}^2}{4L^2}} dx_{II}$$

$$\Delta L_B = \frac{4FL^2}{E\pi D^2} \int_{L/2}^L \frac{1}{x_{II}^2} dx_{II} = \frac{4FL^2}{E\pi D^2} \left[-\frac{1}{x_{II}} \right]_{L/2}^L = \frac{4FL^2}{E\pi D^2} \frac{1}{L}$$

$$\Delta L_B = \frac{4FL}{E\pi D^2}$$

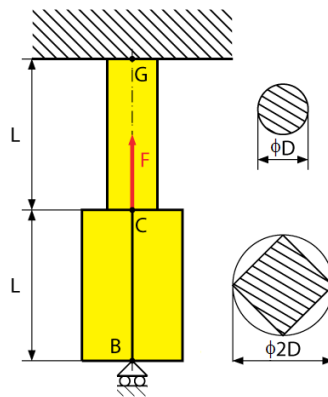Problem 2.4**Fig. 2.32**

A bar BC and CG of length L is attached to rigid supports at B and G. Part BC has a square cross-section and between point C and G the cross section is circular. What are the stresses in portions BC and CG due to the application of load F at point C in Fig. 2.32. The weight of the bar is neglected. Design the parameter D to accommodate for the given allowable stress σ_{All} . length L , modulus of elasticity E and applied force F are known. Problem is statically indeterminate.

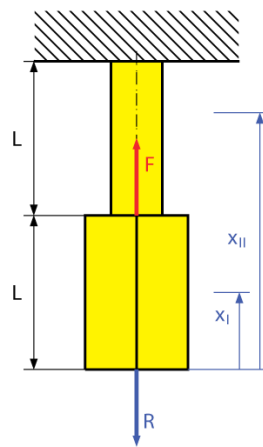
Solution**Fig. 2.33**

At first, we detach the bar at point B and define a reaction at its location, which will be solved from the deformation condition. (See Fig. 2.33).

The solution is divided into two solutions part BC and CG.

Free-body diagram on portion I (part BC):

$$x_I \in \langle 0, L \rangle$$

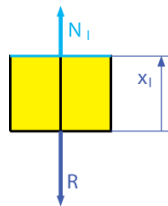

From the equilibrium equation in the first part, we obtain

$$\sum F_{ix_I} = 0: \quad N_I(x_I) - R = 0 \quad \Rightarrow \quad N_I(x_I) = R$$

Solution of cross-section area is given From Pythagoras theorem where we determine the side length of the square:

$$\begin{aligned} (2D)^2 &= a^2 + a^2 \\ A_I = a^2 &\Rightarrow 4D^2 = 2a^2 &\Rightarrow A_I = 2D^2 \\ 2D^2 &= a^2 \end{aligned}$$

**STUDY FOR YOUR MASTER'S DEGREE
IN THE CRADLE OF SWEDISH ENGINEERING**

Chalmers University of Technology conducts research and education in engineering and natural sciences, architecture, technology-related mathematical sciences and nautical sciences. Behind all that Chalmers accomplishes, the aim persists for contributing to a sustainable future – both nationally and globally.

Visit us on **Chalmers.se** or **Next Stop Chalmers** on facebook.

CHALMERS
UNIVERSITY OF TECHNOLOGY




Stress in portion BC is

$$\sigma_I(x_I) = \frac{N_I(x_I)}{A_I(x_I)} = \frac{R}{2D^2}$$

Free-body diagram an portion II (part CG):

$$x_{II} \in \langle L, 2L \rangle$$

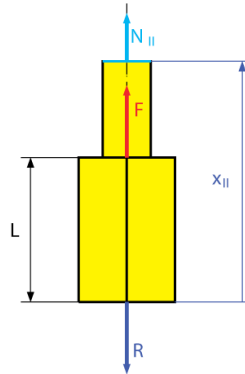

From the equilibrium equation in the second part, we obtain

$$\sum F_{ix_{II}} = 0: \quad N_{II}(x_{II}) + F - R = 0 \quad \Rightarrow \quad N_{II}(x_{II}) = R - F$$

Stress in portion CG is

$$\sigma_{II}(x_{II}) = \frac{N_{II}(x_{II})}{A_{II}(x_{II})} = \frac{R - F}{\frac{\pi D^2}{4}} = \frac{4(R - F)}{\pi D^2}$$

We determine the unknown reaction from the deformation condition, total elongation (movement of point B) is equal to zero:

$$\Delta L_B = 0 \quad \Rightarrow \quad \Delta L_B = \Delta L_I + \Delta L_{II} = 0 \quad \Rightarrow \quad \Delta L_I + \Delta L_{II} = 0,$$

from which we have

$$\begin{aligned} \frac{P_I L_I}{E_I A_I} + \frac{P_{II} L_{II}}{E_{II} A_{II}} &= 0 \quad \Rightarrow \quad \frac{RL}{E 2D^2} + \frac{4(R-F)L}{E \pi D^2} = 0 \\ \pi R + 8(R-F) &= 0 \quad \Rightarrow \quad R = \frac{8F}{\pi + 8} \end{aligned}$$

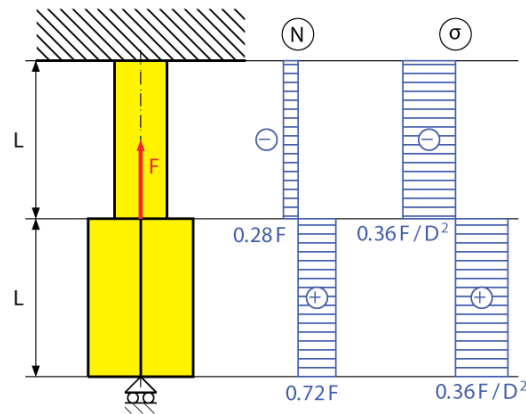


Fig. 2.34

We insert the solved reaction into the result of parts BC and CG,

$$N_I(x_I) = R = \frac{8F}{\pi+8} = 0.72F$$

$$\sigma_I(x_I) = \frac{N_I(x_I)}{A_I(x_I)} = \frac{8F}{(\pi+8)2D^2} = 0.36 \frac{F}{D^2}$$

$$N_{II}(x_{II}) = R - F = \frac{8F}{\pi+8} - F = -\frac{\pi F}{\pi+8} = -0.28F$$

and draw the diagram of normal forces and stresses for both portions, which is shown in the Fig. 2.34

Design of parameter D

The maximum (absolute value) of stresses is the same for both portions, we compare them with the allowable stress and we get the designed parameter D:

$$\sigma_{\text{MAX}} = 0.36 \frac{F}{D^2} \leq \sigma_{\text{All}} \quad \Rightarrow \quad D \geq \sqrt{\frac{0.36F}{\sigma_{\text{All}}}}$$

Problem 2.5

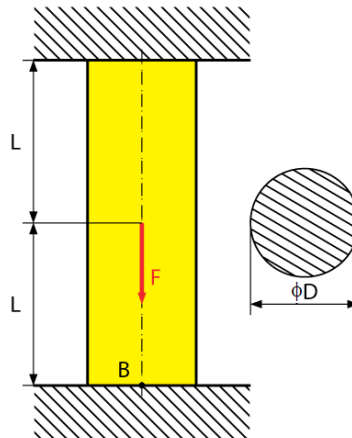
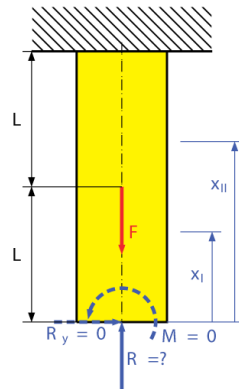


Fig. 2.35

In Fig. 2.35, a bar of length $2L$ with uniform circular cross-section area and made of the same material with a modulus of elasticity E , is subjected to an applied force F . determine the stress in the bar. Consider the weight of bar (density ρ and gravity g are known).

Stafford
associates**Find your next education here!****Click here**bookboon.com/blog/subsites/stafford

Solution**Fig. 2.36**


Problem is statically indeterminate and for the solution we use the deformation condition at point B.

First step of solution is to substitute an unknown reaction at point B (see Fig. 2.36).

Because the problem is in pure tension, the reaction R_y and moment M are zero, reaction R is non-zero.

Solution of this problem is divided into two parts.

$$x_I \in \langle 0, L \rangle$$

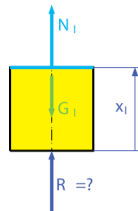

Equilibrium of first part

$$\sum F_{ix_I} = 0: \quad N_I(x_I) + R - G_I = 0 \quad \Rightarrow \quad N_I(x_I) = G_I - R$$

where G_I is gravitational load of first part, defined by


$$G_I = mg = \rho Vg = \rho g A_I x_I$$

Normal force and stress is gathered by

$$N_I(x_I) = \rho g A_I x_I - R$$

$$\sigma_I(x_I) = \frac{N_I(x_I)}{A_I(x_I)} = \frac{\rho g A_I x_I - R}{A_I} = \rho g x_I - \frac{R}{A}$$

$$x_{II} \in \langle L, 2L \rangle$$

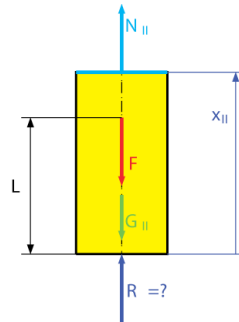

Equilibrium at the second part, is given by

$$\sum F_{ix_{II}} = 0: \quad N_{II}(x_{II}) + F - R - G_{II} = 0 \quad \Rightarrow \quad N_{II}(x_{II}) = F + G_{II} - R$$

Normal force and stress is as follows

$$N_{II}(x_{II}) = F + \rho g A_{II} x_{II} - R = F + \rho g A x_{II} - R$$

$$\sigma_{II}(x_{II}) = \frac{N_{II}(x_{II})}{A_{II}(x_{II})} = \frac{F + \rho g A x_{II} - R}{A} = \frac{F}{A} + \rho g x_{II} - \frac{R}{A}$$

Deformation condition at point A

Total elongation at point A is equal to zero, which is consisting of the first part of the bar ΔL_I and second part ΔL_{II} . For solution of each part we used the integral form because normal force is a function of position. Unknown reaction R after calculation becomes

$$\Delta L_A = \Delta L_I + \Delta L_{II} = 0 \quad \Rightarrow \quad \frac{P_I L_I}{E_I A_I} + \frac{P_{II} L_{II}}{E_{II} A_{II}} = 0$$

$$\int_0^L \frac{(\rho g A x_I - R)L}{EA} dx_I + \int_L^{2L} \frac{(F + \rho g A x_{II} - R)L}{EA} dx_{II} = 0$$

$$2\rho g AL + F = 2R \quad \Rightarrow \quad R = \rho g AL + \frac{F}{2}$$

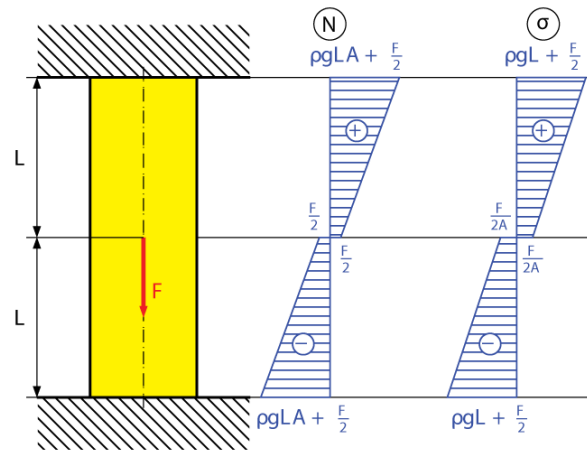


Fig. 2.37

We insert the result of reaction R into the function of normal force and stress for both parts and the diagram for force and stress is shown in Fig. 2.37.

$$N_I(x_I) = \rho g A x_I - \left(\rho g A L + \frac{F}{2} \right) = \rho g A (x_I - L) - \frac{F}{2}$$

$$\sigma_I(x_I) = \frac{N_I(x_I)}{A_I(x_I)} = \frac{\rho g A_I x_I - R}{A_I} = \rho g (x_I - L) - \frac{F}{2A}$$

$$N_{II}(x_{II}) = F + \rho g A x_{II} - R = F + \rho g A x_{II} - \left(\rho g A L + \frac{F}{2} \right) = \frac{F}{2} + \rho g A (x_{II} - L)$$

$$\sigma_{II}(x_{II}) = \frac{N_{II}(x_{II})}{A_{II}(x_{II})} = \frac{F}{2A} + \rho g (x_{II} - L)$$

Problem 2.6

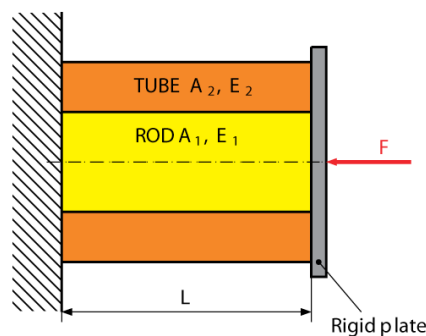
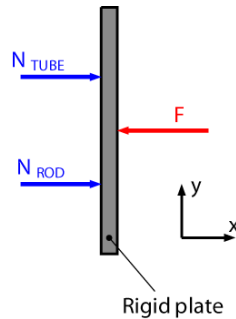


Fig. 2.38

A rod of length L , cross-sectional area A_1 , and modulus of elasticity E_1 has been placed inside a tube with the same length L , but of differing cross-section area A_2 and modulus of elasticity E_2 (Fig. 2.38). What is the deformation of the rod and tube when F is applied to the end of the plate as shown?

Solution

The axial force in the rod and in the tube is denoting by N_{ROD} and N_{TUBE} , respectively. we draw a free-body diagram for the rigid plate in Fig. 2.39:

**Fig. 2.39**

$$\sum F_{ix} = 0: \quad N_{\text{TUBE}} + N_{\text{ROD}} - F = 0 \quad \Rightarrow \quad N_{\text{TUBE}} + N_{\text{ROD}} = F \quad (\text{a})$$

The problem is statically indeterminate. However, the geometry of the problem shows that the deformation ΔL_{ROD} and ΔL_{TUBE} of the rod and tube must be equal:

$$\Delta L_{\text{TUBE}} = \Delta L_{\text{ROD}} \quad \Rightarrow \quad \frac{N_{\text{TUBE}} L_{\text{TUBE}}}{E_{\text{TUBE}} A_{\text{TUBE}}} = \frac{N_{\text{ROD}} L_{\text{ROD}}}{E_{\text{ROD}} A_{\text{ROD}}}$$

$$N_{\text{TUBE}} = N_{\text{ROD}} \frac{E_{\text{TUBE}} A_{\text{TUBE}}}{E_{\text{ROD}} A_{\text{ROD}}} \quad (\text{b})$$


Equation (a) and (b) can be solved simultaneously for N_{ROD} and N_{TUBE} by:

$$N_{\text{ROD}} \frac{E_{\text{TUBE}} A_{\text{TUBE}}}{E_{\text{ROD}} A_{\text{ROD}}} + N_{\text{ROD}} = F$$

$$N_{\text{ROD}} \left(\frac{E_{\text{TUBE}} A_{\text{TUBE}}}{E_{\text{ROD}} A_{\text{ROD}}} + 1 \right) = F$$

$$N_{\text{ROD}} = \frac{F}{\left(\frac{E_{\text{TUBE}} A_{\text{TUBE}}}{E_{\text{ROD}} A_{\text{ROD}}} + 1 \right)}$$


$$N_{\text{TUBE}} = \frac{E_{\text{TUBE}} A_{\text{TUBE}}}{E_{\text{ROD}} A_{\text{ROD}}} \frac{F}{\left(\frac{E_{\text{TUBE}} A_{\text{TUBE}}}{E_{\text{ROD}} A_{\text{ROD}}} + 1 \right)}$$

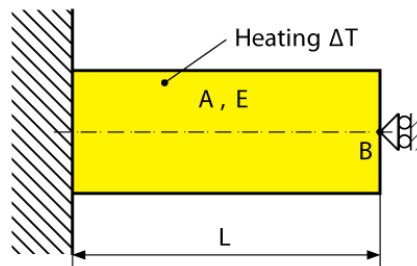Problem 2.7**Fig. 2.40**

Determine the value of stress in the steel bar shown on Fig. 2.40 when the temperature change of the bar is $\Delta T = 30\text{ }^{\circ}\text{C}$. Assume a value of $E = 200\text{ GPa}$ and $\alpha = 12 \times 10^{-6}\text{ }1/^{\circ}\text{C}$ for steel.

Solution

We first determine the reaction at the support. Since the problem is statically indeterminate, we detach the bar from its support at B.

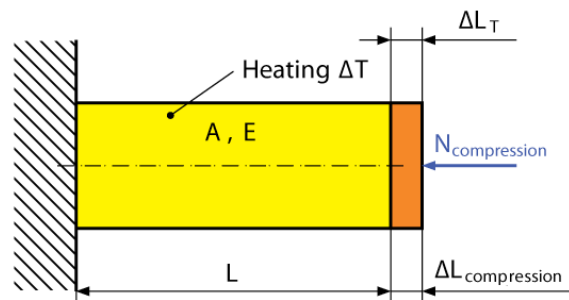**Fig. 2.41**

The corresponding deformation from temperature exchange (Fig. 2.41) is

$$\Delta L_T = \alpha \Delta T L$$

Applying the unknown force $N_{\text{compression}}$ at the end of the bar at B (Fig. 2.41). We use eq. (2.15) to express the corresponding deformation $\Delta L_{\text{compression}}$

$$\Delta L_{\text{compression}} = \frac{N_{\text{compression}} L}{EA}$$

Total deformation of the bar must be zero at point B, from which we have the following deformation condition

$$\Delta L_{\text{compression}} = \Delta L_T,$$

from this we obtain $N_{\text{compression}}$

$$N_{\text{compression}} = \alpha \Delta T EA.$$

Stress in the bar is then given by

$$\sigma = \frac{N_{\text{compression}}}{A} = \frac{\alpha \Delta T EA}{A} = \alpha \Delta T E = 12 \times 10^{-6} \text{ } 1/^{\circ}\text{C} \times 30 \text{ } ^{\circ}\text{C} \times 200 \times 10^9 \text{ Pa} = 72 \text{ MPa}.$$



STUDY.
The stuff you'll need to make a good living




PLAY.
The stuff that makes life worth living

NORWAY.
YOUR IDEAL STUDY DESTINATION.

WWW.STUDYINNORWAY.NO
FACEBOOK.COM/STUDYINNORWAY



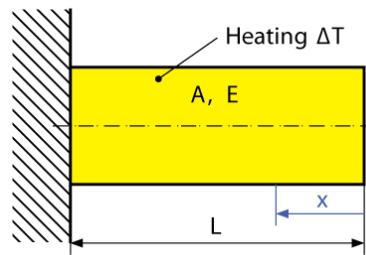


Problem 2.8**Fig. 2.42**

Determine the stress of the aluminum bar $L = 500 \text{ mm}$ shown in Fig. 2.42. when its temperature changes by $\Delta T = 50 \text{ }^{\circ}\text{C}$. Use the value $E = 70 \text{ GPa}$ and $\alpha = 22.2 \times 10^{-6} \text{ }^{\circ}\text{C}^{-1}$ for aluminum.

Solution

We determine the elongation of the bar from temperature exchange from the following equation

$$x \in \langle 0, L \rangle$$

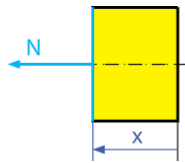**Fig. 2.43**


$$\Delta L = \Delta L_T = \alpha \Delta T L = 22.2 \times 10^{-6} \text{ }^{\circ}\text{C}^{-1} \times 40 \text{ }^{\circ}\text{C} \times 500 \text{ mm} = 0.444 \text{ mm}$$

We divide the bar into one component part shown in Fig. 2.43. From equilibrium equation in this part we find the unknown normal force:


$$\sum F_{ix} = 0: \quad N(x) = 0$$

Stress in the aluminum bar we describe by

$$\sigma = \frac{N}{A} = \frac{0}{A} = 0 \text{ Pa}$$

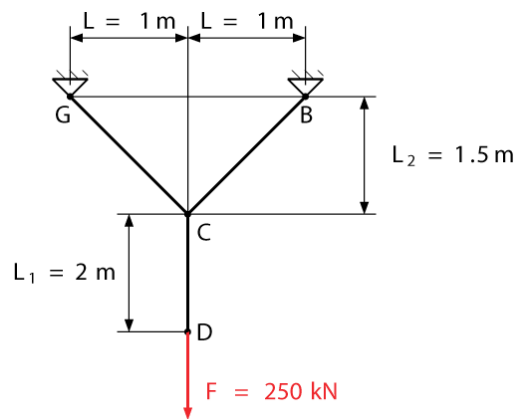Problem 2.9**Fig. 2.44**

The linkage in Fig. 2.44 is made of three 304 stainless members connected together by pins, each member has a cross-sectional area of $A = 1000 \text{ mm}^2$. If a vertical force $F = 250 \text{ kN}$ is applied to the end of the member at D, Determine the stresses of all members and the maximum stress σ_{MAX} .

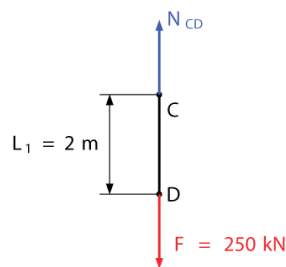Solution**Fig. 2.45**

First we disconnected the member CD and draw a free-body diagram (shown in Fig. 2.45) We then solve for the force N_{CD} by the following equilibrium equation

$$\sum F_{iy} = 0: \quad N_{\text{CD}} - F = 0 \quad \Rightarrow \quad N_{\text{CD}} = F = 250 \text{ kN}$$

Other normal forces N_{AC} and N_{BC} we determined from equilibrium at point C (shown in Fig. 2.46), given by:

$$\tan \alpha = \frac{L}{L_2} = \frac{1.0 \text{ m}}{1.5 \text{ m}} = 0.666 \quad \Rightarrow \quad \alpha = 33.69^\circ$$

In the x direction

$$\sum F_{ix} = 0: \quad -N_{GC} \sin \alpha + N_{BC} \sin \alpha = 0 \quad \Rightarrow \quad -N_{GC} + N_{BC} = 0$$

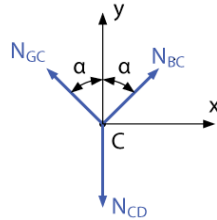


Fig. 2.46

$$N_{BC} = N_{GC}$$

In the y direction

$$\sum F_{iy} = 0: \quad N_{GC} \cos \alpha + N_{BC} \cos \alpha - N_{CD} = 0$$

$$2N_{BC} \cos \alpha = N_{CD} = F \quad \Rightarrow \quad N_{BC} = \frac{F}{2 \cos \alpha} = \frac{250 \text{ kN}}{2 \cos 33.69^\circ} = 150.23 \text{ kN}$$

$$N_{GC} = N_{BC} = 150.23 \text{ kN}$$

Stresses in the members are

$$\sigma_{GC} = \frac{N_{GC}}{A} = \frac{150.23 \cdot 10^3 \text{ N}}{1000 \text{ mm}^2} = 150.23 \text{ MPa}$$

$$\sigma_{BC} = \frac{N_{BC}}{A} = \frac{150.23 \cdot 10^3 \text{ N}}{1000 \text{ mm}^2} = 150.23 \text{ MPa}$$

$$\sigma_{CD} = \frac{N_{CD}}{A} = \frac{250 \cdot 10^3 \text{ N}}{1000 \text{ mm}^2} = 250 \text{ MPa}$$

Maximum value of stress is at link CD

$$\sigma_{\text{MAX}} = \sigma_{CD} = 250 \text{ MPa}$$

Problem 2.10

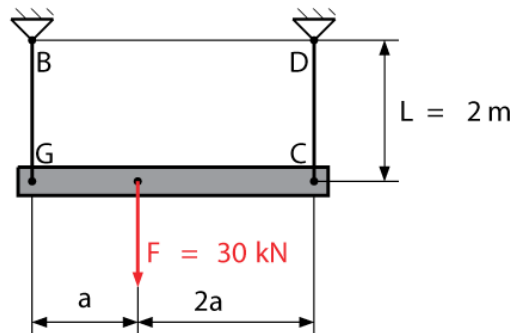


Fig. 2.47


The assembly consists of two titanium rods and a rigid beam AC in Fig. 2.47. The cross section area is $A_{GB} = 60 \text{ mm}^2$ and $A_{CD} = 45 \text{ mm}^2$. The force is applied at $a = 0.5 \text{ m}$. Determine the stress at rod GB and CD; if the vertical force is equal to $F = 30 \text{ kN}$.

Free online Magazines



Click here to download 
SpeakMagazines.com

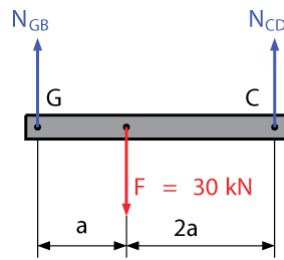

Solution**Fig. 2.48**

The unknown normal forces in the titanium rod are found from the equilibrium equation of rigid beam GC in Fig. 2.48, given by

$$\sum F_{iy} = 0: \quad N_{GB} + N_{CD} - F = 0$$

$$\sum M_{iB} = 0: \quad N_{CD} 3a - Fa = 0 \quad \Rightarrow \quad N_{CD} = \frac{F}{3} = \frac{30 \text{ kN}}{3} = 10 \text{ kN}$$


$$N_{GB} = F - N_{CD} = 30 \text{ kN} - 10 \text{ kN} = 20 \text{ kN}$$

$$N_{GB} = 20 \text{ kN}$$

Stress in rod AB and CD is given by the following

$$\sigma_{GB} = \frac{N_{GB}}{A_{GB}} = \frac{20000 \text{ N}}{60 \text{ mm}^2} = 333.3 \text{ MPa}$$

$$\sigma_{CD} = \frac{N_{CD}}{A_{CD}} = \frac{10000 \text{ N}}{45 \text{ mm}^2} = 222.2 \text{ MPa}$$

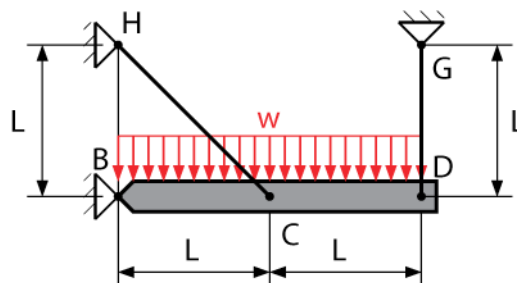Problem 2.11**Fig. 2.49**

The rigid bar BD is supported by two links AC and CD in Fig. 2.49. Link CH is made of aluminum ($E_{CH} = 68.9 \text{ GPa}$) and has a cross-section area $A_{CH} = 14 \text{ mm}^2$; link DG is made of aluminum ($E_{DG} = 68.9 \text{ GPa}$) and has a cross-section of $A_{DG} = 2 A_{CH} = 280 \text{ mm}^2$. For the uniform load $w = 9 \text{ kN/m}$, determine the deflection at point D and stresses in the link CH and DG.

Solution

Free body diagram of rigid bar BD

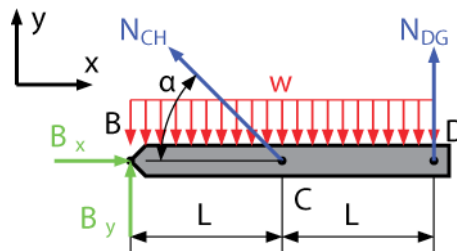


Fig. 2.50

Equilibrium equation of moment at point B in the bar BC (Fig. 2.50), is expressed as

$$\sum M_{iB} = 0: \quad N_{CH} L \sin \alpha + N_{DG} 2L - w 2L L = 0$$

$$\Rightarrow \quad N_{CH} \frac{\sqrt{2}}{2} + 2N_{DG} = 2wL, \quad (a)$$

where

$$\tan \alpha = \frac{L}{L} = 1 \quad \Rightarrow \quad \alpha = 45^\circ$$

in equation (a) we have two unknowns. We need a second equation for the solution of normal forces in the links from the deformation condition in Fig. 2.51, from the similar triangles

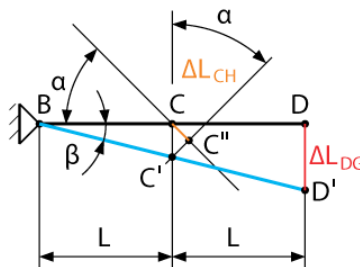


Fig. 2.51

$$\triangle BDD' \approx \triangle BCC'$$

$$\tan \beta = \frac{DD'}{BD} = \frac{CC'}{BC} \Rightarrow \frac{\Delta L_{CH}}{L \sin \alpha} = \frac{\Delta L_{DG}}{2L}$$

In these triangles the angle β are the same from which we have the following equation:

$$\sin \alpha = \frac{\Delta L_{CH}}{CC'} \Rightarrow CC' = \frac{\Delta L_{CH}}{\sin \alpha}$$

$$\Delta L_{CH} = \frac{N_{CH} L_{CH}}{E_{CH} A_{CH}} = \frac{N_{CH} \sqrt{2} L}{EA}$$

$$\Delta L_{DG} = \frac{N_{DG} L_{DG}}{E_{DG} A_{DG}} = \frac{N_{DG} L}{2EA}$$

$$\frac{\Delta L_{CH}}{L \sin \alpha} = \frac{\Delta L_{DG}}{2L} \Rightarrow \frac{N_{CH} \sqrt{2} L}{EA \sqrt{2}} = \frac{N_{DG} L}{2EA} \Rightarrow N_{CH} = \frac{N_{DG}}{4} \quad (b)$$

I joined MITAS because
I wanted **real responsibility**

The Graduate Programme
for Engineers and Geoscientists
Maersk.com/Mitas



Month 16

I was a construction
supervisor in
the North Sea
advising and
helping foremen
solve problems

Real work
International opportunities
Three work placements







Solving for the system of equations (a) and (b), we get

$$\frac{N_{DG}}{4} \frac{\sqrt{2}}{2} + 2N_{DG} = 2wL \Rightarrow N_{DG} = \frac{2wL}{\left(\frac{\sqrt{2}}{8} + 2\right)} = 0.92wL$$

$$N_{DG} = 0.92wL = 0.92 \cdot 300 \text{ N/m} \cdot 1 \text{ m} = 276 \text{ N}$$

$$N_{CH} = \frac{N_{DG}}{4} = \frac{wL}{2\left(\frac{\sqrt{2}}{8} + 2\right)} = \frac{0.92wL}{4} = 0.23wL$$

$$N_{CH} = 0.23wL = 0.23 \cdot 300 \text{ N/m} \cdot 1 \text{ m} = 69 \text{ N}$$

Stress in link CH is

$$\sigma_{CH} = \frac{N_{CH}}{A_{CH}} = \frac{69 \text{ N}}{14 \text{ mm}^2} = 4.93 \text{ MPa}$$

Stress in link DG is

$$\sigma_{DG} = \frac{N_{DG}}{A_{DG}} = \frac{276 \text{ N}}{28 \text{ mm}^2} = 9.86 \text{ MPa}$$

Deflection of point D is given by the following

$$\Delta L_{DG} = \frac{N_{DG} L_{DG}}{E_{DG} A_{DG}} = \frac{0.92wL L}{2EA} = \frac{0.92 \cdot 300 \text{ N/m} \cdot (1 \text{ m})^2}{2 \cdot 68.9 \cdot 10^9 \text{ Pa} \cdot 14 \cdot 10^{-6} \text{ m}^2}$$

$$\Delta L_{DG} = 1.43 \cdot 10^{-4} \text{ m} = 0.143 \text{ mm}$$

Unsolved problems

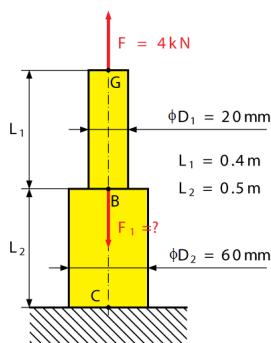


Fig. 2.52

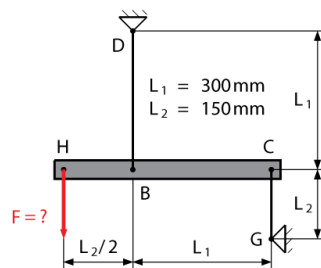


Fig. 2.53

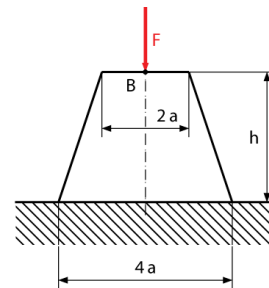


Fig. 2.54

Problem 2.12

Both portions of rod GBC in Fig. 2.52 are made of aluminum for which $E = 70 \text{ GPa}$. Knowing that the magnitude of F is 4 kN , determine (a) the value of F_1 so that the deflection at point A is zero, (b) the corresponding deflection of point B, (c) the value of stress for each portion.

$$[F_1 = 32.8 \text{ kN}; \Delta L_B = 0.073 \text{ mm}; \sigma_{GB} = 12.73 \text{ MPa}; \sigma_{BC} = 10.19 \text{ MPa}]$$

Problem 2.13




Link DB in Fig. 2.53 is made of aluminum ($E = 72 \text{ GPa}$) and has a cross-sectional area of 300 mm^2 . Link CG is made of brass ($E = 105 \text{ GPa}$) and has a cross-sectional area of 240 mm^2 . Knowing that they support rigid member HBC, determine the maximum force F that can be applied vertically at point H, if the deflection of H cannot exceed 0.35 mm .

$$[F = 16.4 \text{ kN}]$$

Problem 2.14

In Fig 2.54 a vertical load F is applied at the center B of the upper section of a homogeneous conical frustum with height h , minimum radius a , and maximum radius $2a$. Young's modulus for the material is denoted by E and we can neglect the weight of the structure. determine the deflection of point B.

$$\left[\Delta L_B = -\frac{F h}{2E \pi a^2} \right]$$

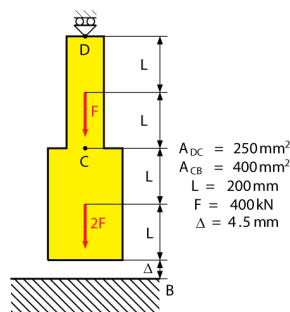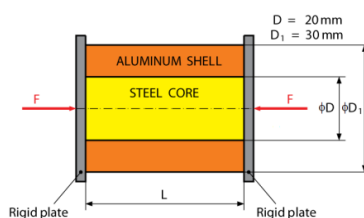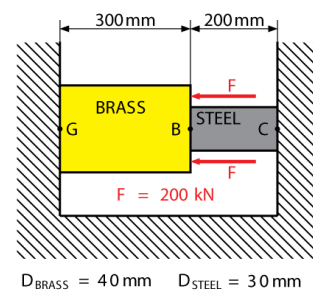**Fig. 2.55****Fig. 2.56****Fig. 2.57****Problem 2.15**

Determine the reaction at D and B for a steel bar loaded according to Fig. 2.55, assume that a 4.50 mm clearance exists between the bar and the ground before the load is applied. The bar is steel ($E = 200 \text{ GPa}$),

$$[R_D = 430.8 \text{ kN}, R_B = 769.2 \text{ kN}]$$

Problem 2.16

Compressive centric force of $N = 1000 \text{ N}$ is applied at both ends of the assembly shown in Fig 2.56 by means of rigid end plates. Knowing that $E_{\text{STEEL}} = 200 \text{ GPa}$ and $E_{\text{ALUMINUM}} = 70 \text{ GPa}$, determine (a) normal stresses in the steel core and the aluminum shell, (b) the deflection of the assembly.

$$[\sigma_{\text{ALUMINUM}} = 3.32 \text{ MPa}; \sigma_{\text{STEEL}} = 9.55 \text{ MPa}; \Delta L = 4.74 \times 10^{-3} \text{ mm}]$$

Problem 2.17

Two cylindrical rods in Fig. 2.57, one made of steel ($E_{\text{STEEL}} = 200 \text{ GPa}$) and the other of brass ($E_{\text{BRASS}} = 105 \text{ GPa}$), are joined at B and restrained by supports at G and C. For the given load, determine (a) the reaction at G and C, (b) the deflection of point B.

$$[R_G = 134 \text{ kN}; R_C = 266 \text{ kN}; \Delta L_B = -0.3 \text{ mm}]$$

Need help with your dissertation?


Get in-depth feedback & advice from experts in your topic area. Find out what you can do to improve the quality of your dissertation!

Get Help Now



Go to www.helpmyassignment.co.uk for more info

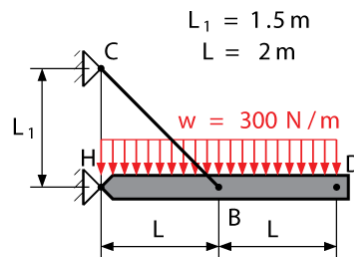

Problem 2.18**Fig. 2.58**

The rigid bar HBC is supported by a pin connection at the end of rod CB which has a cross-sectional area of 20 mm^2 and is made of aluminum ($E = 68.9 \text{ GPa}$). Determine the vertical deflection of the bar at point D in Fig. 2.58 when the following distributed load $w=300\text{N/m}$ is applied.

$$[\Delta L_B = 12.1 \text{ mm}]$$

Problem 2.19**Fig. 2.59**

The bar has length L and cross-sectional area A . (see Fig. 2.59) Determine its elongation due to the force F and its own weight. The material has a specific weight γ (weight / volume) and a modulus of elasticity E .

$$\left[\Delta L = \frac{\gamma L^2}{2 E} + \frac{F L}{E A} \right]$$

3 Torsion

3.1 Introduction

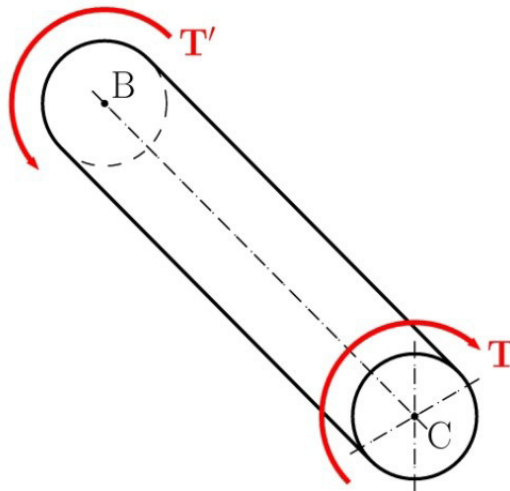


Fig. 3.1 Member in torsion

Question:

What do Skype and Spotify have in common with color screen graphics and the computer mouse?

– They are all Swedish inventions.

STUDYINSWEDEN.SE



Be innovative. Study in Sweden



In the previous chapter we discussed axially loaded members and we analyzed the stresses and strains in these members, but we only considered the internal force directed along the axis of each member without observing any other internal force. Now we are going to analyse stresses and strains in members subjected to *twisting couples* or *torques* T and T' , see Fig. 3.1. Torques have a common magnitude and opposite sense and can be represented either by curved arrows or by couple vectors, see Fig. 3.2.

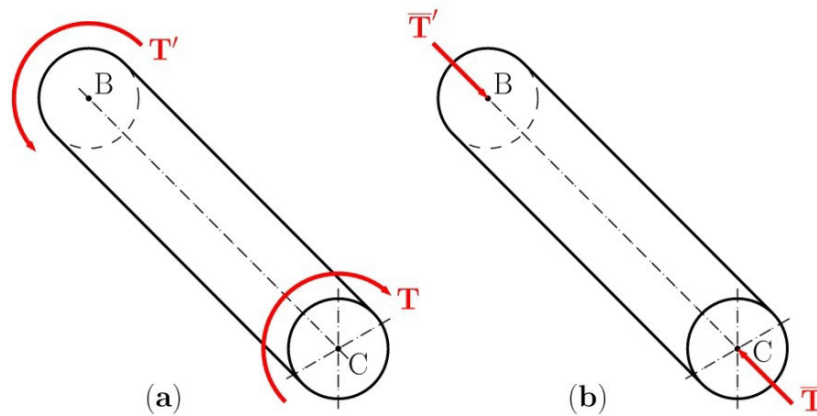


Fig. 3.2 Alternative representations of torques

Members in torsion are encountered in many engineering applications and are primarily used to transmit power from one point to another. These shafts play important roles in the automotive and power industry. Some applications are presented in Fig. 3.3.

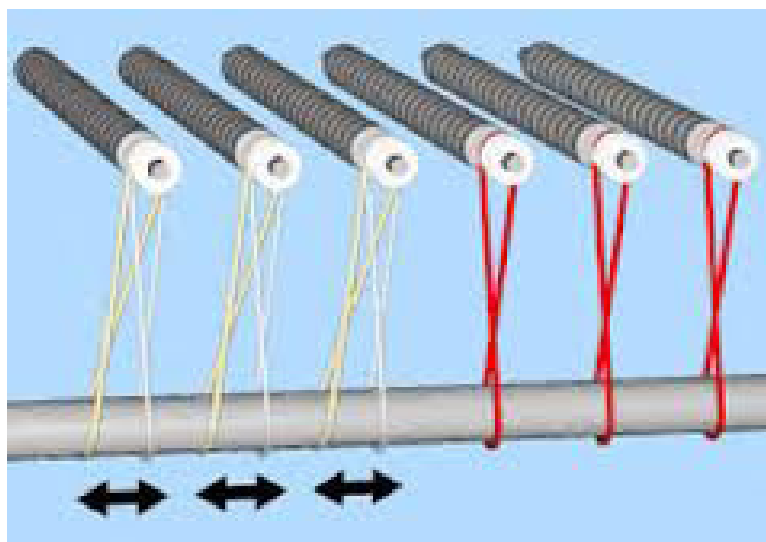


Fig. 3.3 Transmitting shafts, [<http://www.directindustry.com>]

There is a parallelism between an axially loaded member and a member in torsion. Both vectors of applied force $\bar{F}$ and applied torque $\bar{T}$ act in the direction of the member axes, see Fig. 3.4. Further on, will see the results of a deformation analysis speak more about this parallelism.

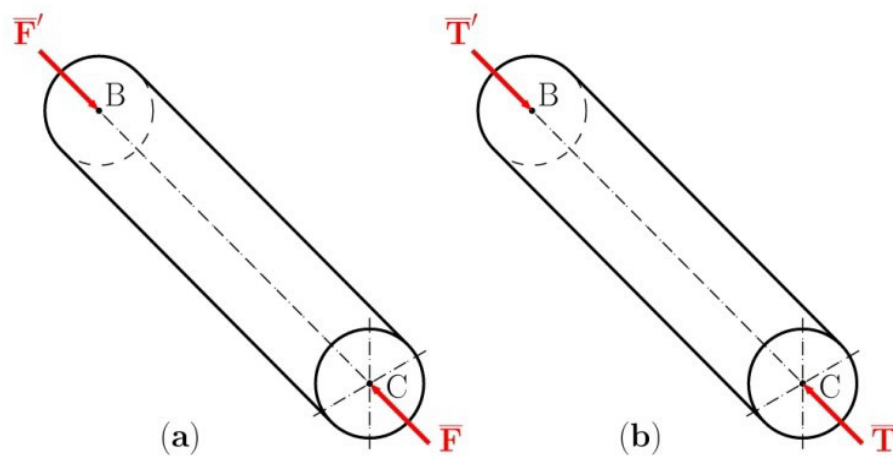


Fig. 3.4 Parallelism

This chapter contains two different approaches in solving torsion problems. Firstly we will present the theory for members with circular cross-sectional areas (circular members in short) and secondly we will extend our knowledge of this theory for application on non-circular members.

3.2 Deformation in a Circular Shaft

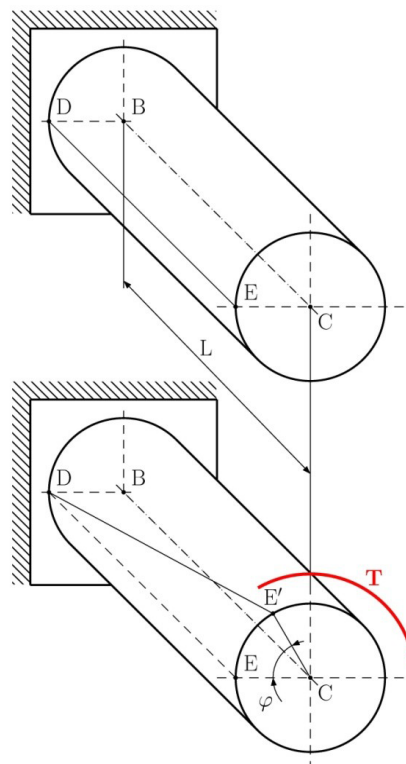


Fig. 3.5

Let us consider a circular shaft fixed to a support at point B while the other end is free, see Fig. 3.5. The shaft is of length L with constant circular cross-sectional area A . If the torque T is applied at point C (free end of shaft), then the shaft will twist, i.e. the free end will rotate about the shaft axis through *the angle of twist* φ and the shaft axis remains straight after applying the load.

Before applying the load, we can draw a square mesh over the cylindrical surface of the shaft as well as varying diameters on the front circular surface of the shaft, see Fig. 3.6(a). After applying the load and under the assumption of a small angle of twist (less than 5°) we can observe the distortion in Fig. 3.6(b):

1. All surface lines on the cylindrical part rotate through the same angle γ .
2. The frontal cross-sections remain in the original plane and the shape of every circle remains undistorted as well.
3. Diameters on the front face remain straight.
4. The distances between concentric circles remain unchanged.



**THE BEST MASTER
IN THE NETHERLANDS**

Master of Science in Management

Kickstart your career. Start your MSc in Management in September, graduate within 16 months and join 15,000 alumni from more than 80 countries.

Are you ready to take the challenge? Register for our MSc in Management Challenge and compete to win 1 of 3 partial-tuition revolving scholarships worth €10,000!

www.nyenrode.nl/msc

NYENRODE
BUSINESS UNIVERSITEIT
A REWARD FOR LIFE

BEST MASTERS
KEUZEGIDS MASTERS 2012

*Keuzegids Higher Education Masters 2012, in the category of business administration



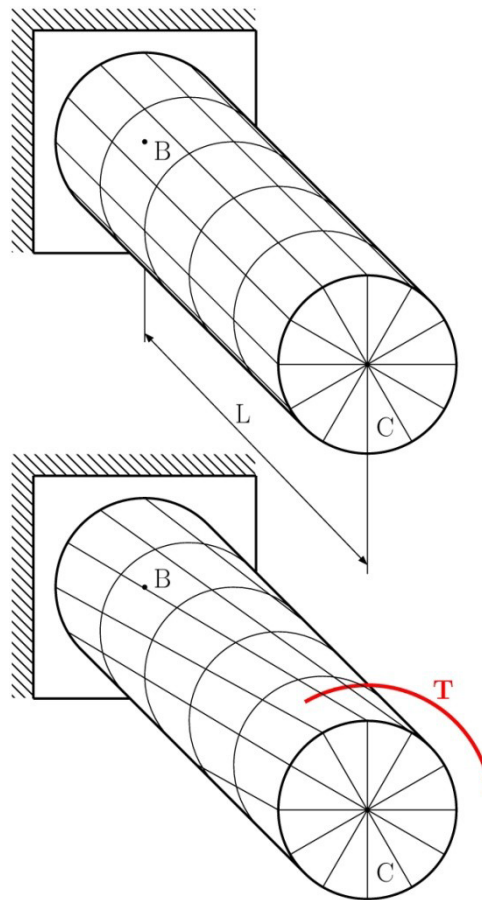


Fig. 3.6

These experimental observations allow us to conclude the following hypotheses:

1. All cross-sectional areas remain in the original plane after deformation.
2. Diameters in all cross-sections remain straight.
3. The distances between any arbitrary cross-sections remain unchanged.

The acceptability of these hypotheses is proven by experimental results. The aforementioned hypotheses result in no strain along the member axis. Applying equation (2.5) for isotropic material, we get

$$\varepsilon_x = 0 \Rightarrow \varepsilon_y = \varepsilon_z = 0 \quad (3.1)$$

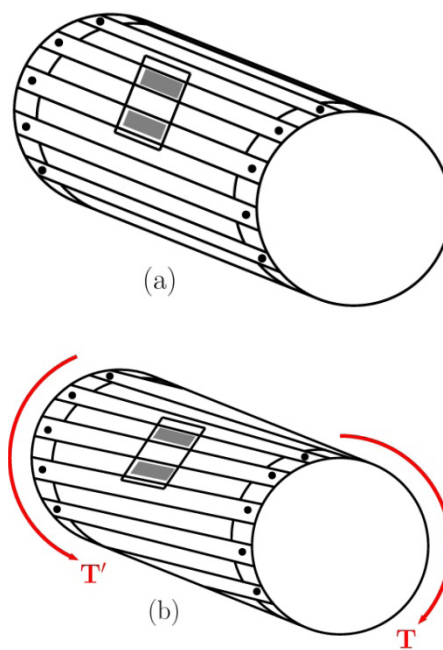
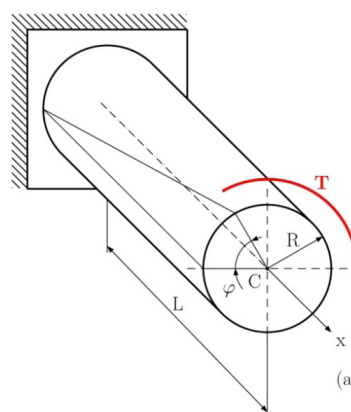


Fig. 3.7

Using equations of elasticity (2.10) we have $\sigma_x = 0$. Equation (3.1) means that the edge dimensions of the unit cube are unchanged, but the shape of unit cube is changing. This can be proven with a small experiment. Let us imagine a circular member composed of two wooden plates which represent the faces on the front of the member. Now consider several wooden slats that are nailed to these plates and make up the cylindrical surface of the member, see Fig. 3.7. Let us make two markers on each neighbouring slat, see Fig. 3.7(a). These markers represent the top surface of the unit cube. After applying a load, the markers will slide relative to each other, see Fig. 3.7(b). The square configuration will then be deformed into a rhombus which proves the existence of a shearing strain.



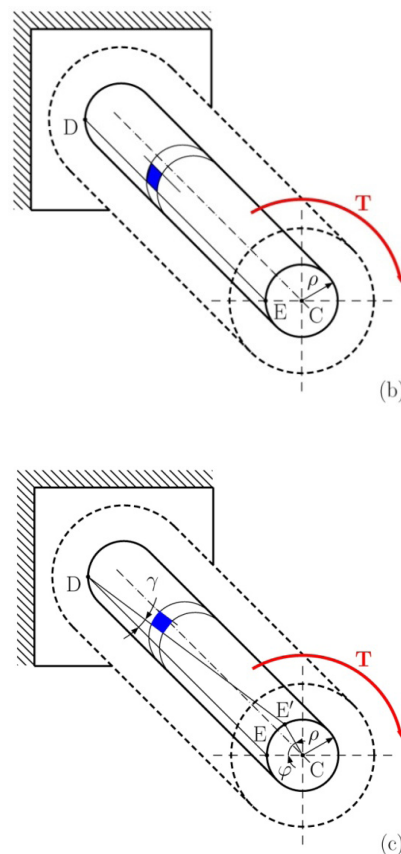


Fig. 3.8

Turning a challenge into a learning curve. Just another day at the office for a high performer.

Accenture Boot Camp – your toughest test yet

Choose Accenture for a career where the variety of opportunities and challenges allows you to make a difference every day. A place where you can develop your potential and grow professionally, working alongside talented colleagues. The only place where you can learn from our unrivalled experience, while helping our global clients achieve high performance. If this is your idea of a typical working day, then Accenture is the place to be.

It all starts at Boot Camp. It's 48 hours that will stimulate your mind and enhance your career prospects. You'll spend time with other students, top Accenture Consultants and special guests. An inspirational two days

packed with intellectual challenges and activities designed to let you discover what it really means to be a high performer in business. We can't tell you everything about Boot Camp, but expect a fast-paced, exhilarating

and intense learning experience. It could be your toughest test yet, which is exactly what will make it your biggest opportunity.

Find out more and apply online.

Visit [accenture.com/bootcamp](https://www.accenture.com/bootcamp)

• Consulting • Technology • Outsourcing

accenture
High performance. Delivered.



We can now determine the shearing strain distribution in a circular shaft, see Fig. 3.5, and which has been twisted through the angle φ , see Fig. 3.8(a). Let us detach the inner cylinder of radius ρ , $\rho \in (0, R)$ from the shaft. Now let's consider a small square element on its surface formed by two adjacent circles and two adjacent straight lines traced on the surface of the cylinder before any load is applied, see Fig. 3.8(b). Now subjecting the shaft to the torque T , the square element becomes deformed into a rhombus, see Fig. 3.8(c). Recalling that, in section 2.5, the angular change of element represents the shearing strain. This angular change must be measured in radians.

From Fig. 3.8(c) one can determine the length of arc EE' using basic geometry: $EE' = L\gamma$ or $EE' = \rho\varphi$.

Then we can derive

$$\gamma = \frac{\rho\varphi}{L} \quad (3.2)$$

where γ , φ are both considered to be in radians. From equation (3.2) it is clear for a given point on the shaft that the shearing strain varies linearly with the distance ρ from the shaft axis.

Due to the definition of inner radius ρ the shearing strain reaches its maximum on the outer surface of the shaft, where $\rho = R$. Then we get

$$\gamma_{max} = \frac{R\varphi}{L} \quad (3.3)$$

Using equations (3.2) and (3.3) we can eliminate the angle of twist. Then we can express the shearing strain γ at an arbitrary distance from the shaft axis by the following:

$$\gamma = \frac{\rho}{R} \gamma_{max} \quad (3.4)$$

3.3 Stress in the Elastic Region

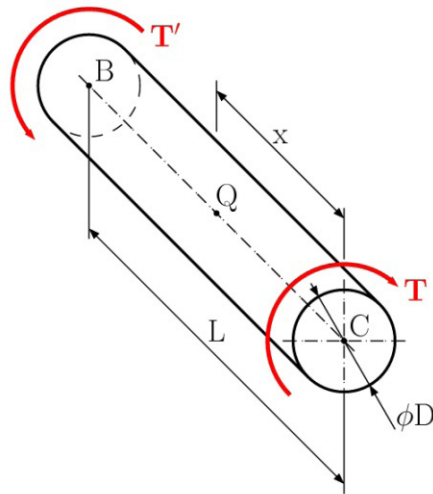


Fig. 3.9

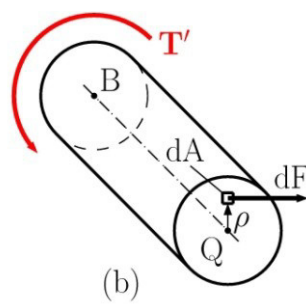
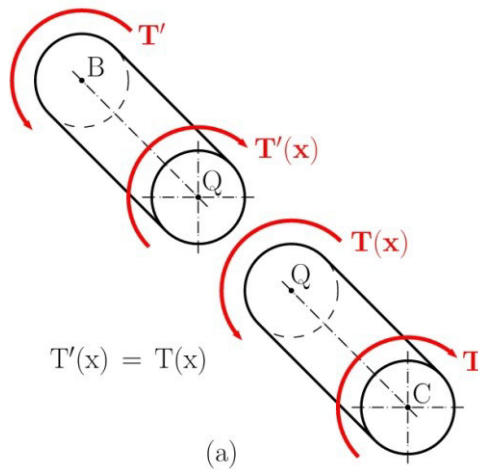


Fig. 3.10

Let us consider a section BC of the circular shaft with constant diameter D along its length L , subjected to torques T and T' at its ends, see Fig. 3.9. Applying the method of sections, we can divide the shaft into two arbitrary portions BQ and QC at any arbitrary point Q. In order to satisfy conditions of equilibrium for each part separately, we need to represent the removed part with internal forces. In our case, from the equilibrium equations, we get non-zero values only for the torque $T(x)$, see Fig. 3.10(a). This torque represents the resultant of all elementary shearing forces dF exerted on a section at point Q, see Fig. 3.10 (b). If the portion BQ is twisted, we can write

$$\int \rho dF = T_{(x)} \quad (3.5)$$

where ρ is the perpendicular distance from the force dF to the shaft axis. The shearing force dF can be expressed as follows $dF = \tau dA$, then substituting into equation (3.5) we get

$$\int \rho \tau dA = T_{(x)} \quad (3.6)$$

Recalling Hooke's law from Section 2.5 we can write

$$\tau = G\gamma \quad (3.7)$$

SIMPLY CLEVER


We will turn your CV into an opportunity of a lifetime



Do you like cars? Would you like to be a part of a successful brand?
We will appreciate and reward both your enthusiasm and talent.
Send us your CV. You will be surprised where it can take you.

Send us your CV on
www.employerforlife.com



and applying equation (3.4) we get

$$G\gamma = \frac{\rho}{R} G\gamma_{max} \quad (3.8)$$

or

$$\tau = \frac{\rho}{R} \tau_{max} \quad (3.9)$$

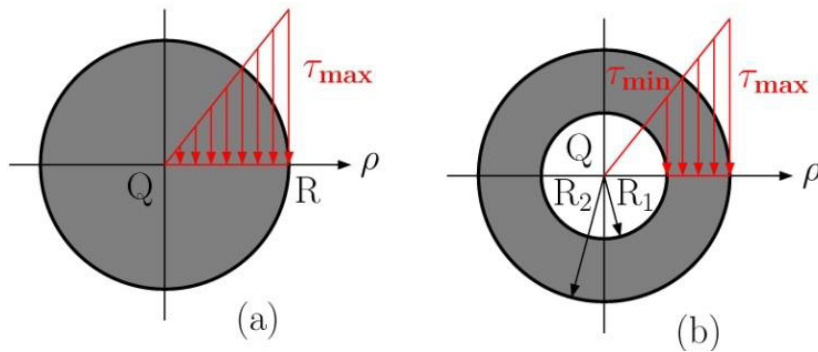


Fig. 3.11

This equation shows that the shearing stress also varies linearly with the distance ρ from the shaft axis, as long as the yield stress is not exceeded. The distribution functions of shearing stress are presented in Fig. 3.11(a), for a solid circle, and in Fig. 3.11(b) for a hollow circle ($\rho \in \langle R_1, R_2 \rangle$). For the latter case we can write

$$\tau_{min} = \frac{R_1}{R_2} \tau_{max} \quad (3.10)$$

The integral equation (3.6) determines the relationship between the resultant of internal forces $T(x)$ and the shearing stress τ . Substituting τ from equation (3.9) into (3.6) we get

$$T_{(x)} = \frac{\tau_{max}}{R} \int \rho^2 dA \quad (3.12)$$

The integral in the last member represents the polar moment of inertia J with respect to its centre O , for more detail see Appendix A. Then we have

$$T_{(x)} = \frac{\tau_{max}}{R} J \quad \text{or} \quad \tau_{max} = \frac{T_{(x)}}{J} R \quad (3.13)$$

Substituting equation (3.9) into (3.13) we get

$$\tau = \frac{T_{(x)}}{J} \rho \quad (3.14)$$

3.4 Angle of Twist in the Elastic Region

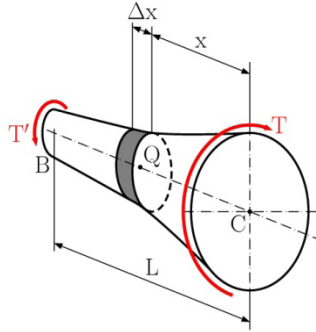


Fig. 3.12

When observing the deformation of a circular shaft subjected to a torque T , see Fig. 3.12, we can see the rotation of the free end C , about the shaft's axis or angle of twist φ . The entire shaft remains in the elastic region after applying the load. The considered shaft has a constant, circular cross-section with a maximum radius R , and a length of L . Now we can recall equation (3.3) where the maximum shearing strain γ_{max} and the angle of twist are related by the following

$$\gamma_{max} = \frac{R\varphi}{L} \quad (3.3)$$

We are assuming that there is elastic response, therefore we can apply Hooke's law for simple shear $\gamma_{max} = \tau_{max} / G$. After substituting equation (3.13) into Hooke's law, and knowing that $T(x) = T$ along the whole axis of the shaft, we get

$$\gamma_{max} = \frac{T(x)}{GJ} R = \frac{T}{GJ} R \quad (3.15)$$

Equating the right-hand members of equations (3.3) and (3.15), and solving for φ we have

$$\varphi = \frac{T(x)L}{GJ} = \frac{TL}{GJ} \quad (3.16)$$

The obtained formula shows that the angle of twist is proportional to the applied torque within the elastic region. If we compare the results of equation (2.15) from chapter 2, one can conclude the following parallelism: $\Delta L \triangleq \varphi$, $N(x) \triangleq T(x)$, $E \triangleq G$, $A \triangleq J$. This equation is valid only if the shaft is made of homogenous material (constant G), has a uniform cross-sectional area (constant J), and is loaded at its ends.

If the shaft is composed from several different parts, each individually satisfying the validity of equation (3.16), we can extend formula (3.16) using the principles of superposition as follows:


$$\varphi = \sum_{i=1}^n \varphi_i = \sum_{i=1}^n \frac{T_i(x) L_i}{G_i J_i} \quad (3.17)$$

where $T_{i(x)}$, G_i , J_i , L_i is the internal torque, shear modulus, polar moment of inertia and length corresponding to the part i respectively.

In the case of variable cross-sectional area along the shaft, as in Fig.3.12, the strain depends on the position of the arbitrary point Q, therefore we must apply a similar equation to (2.2) for the computation of the shearing strain. After some mathematical manipulation the total angle of twist of the member is

$$\varphi = \int_{(L)} \frac{T_{(x)}}{GJ} dx \quad (3.18)$$

3.5 Statically indeterminate Shafts

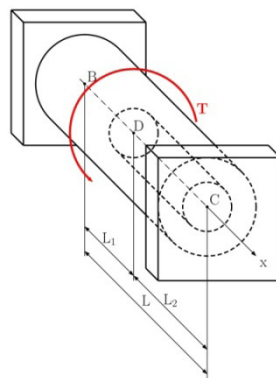

Brain power



By 2020, wind could provide one-tenth of our planet's electricity needs. Already today, SKF's innovative know-how is crucial to running a large proportion of the world's wind turbines.

Up to 25 % of the generating costs relate to maintenance. These can be reduced dramatically thanks to our systems for on-line condition monitoring and automatic lubrication. We help make it more economical to create cleaner, cheaper energy out of thin air.

By sharing our experience, expertise, and creativity, industries can boost performance beyond expectations. Therefore we need the best employees who can meet this challenge!

The Power of Knowledge Engineering

Plug into The Power of Knowledge Engineering.
Visit us at www.skf.com/knowledge





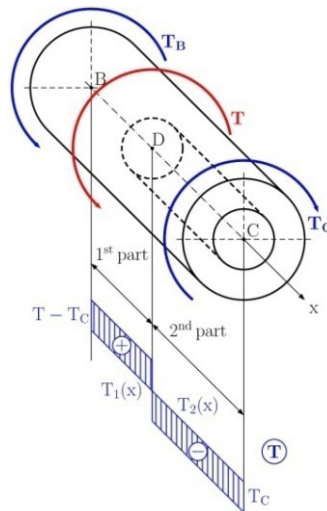


Fig. 3.13

Until now, we have discussed statically determinate problems. But there are some situations, where the internal torques can not be determined using statics alone. For simplicity, let us consider a simple problem, see Fig. 3.13. In this case we cannot solve the problem through equilibrium equations from statics alone. The main difficulty in this problem is that the number of unknown reactions is greater than the number of equilibrium equations. From a mathematical point of view, the problem is ill-conditioned. For our case we obtain one equilibrium equation to be

$$\sum T_x = 0 : T_C - T + T_B = 0 \quad (3.18)$$

This problem is statically indeterminate. To overcome this difficulty we must use the same approach as in Chapter 2, Section 2.7, i.e. to add deformation conditions. In our case the angle of twist at point C is equal to zero, and corresponds to the total angle of twist

$$\varphi = \varphi_C = \sum_{i=1}^2 \varphi_i = 0 \quad (3.19)$$

Using equation (3.17) we obtain

$$\varphi = \sum_{i=1}^2 \varphi_i = \varphi_1 + \varphi_2 = \frac{T_{1(x)} L_1}{G J_1} + \frac{T_{2(x)} L_2}{G J_2} = 0 \quad (3.20)$$

Both internal torques $T_{1(x)} = T - T_C$, $T_{2(x)} = T_C$ are functions of unknown reaction T_C . Solving equation (3.20) we obtain the value of reaction $T_C = \frac{J_2 L_1}{(J_2 L_1 + J_1 L_2)} T$. We can then continue by solving in the usual way (for statically determinate problems).

3.6 Design of Transmission Shafts

In designing transmission shafts the principal specifications that must be satisfied are the power to be transmitted and the velocity of rotation. Our task now is to select the material and the type and the size of cross-section to satisfy the strength condition, i.e. the maximum shearing stress will not exceed the allowable shearing stress $\tau_{max} \leq \tau_{All}$, when the shaft is transmitting the required power at the specified velocity. Recalling elementary physics we have

$$P = T\omega = 2\pi fT \quad (3.21)$$

Where P is the transmitted power, ω is the angular velocity, and f is the frequency of rotation. Solving equation (3.21) for T obtains the torque exerted on our shaft which is transmitting the required power P at a frequency of rotation f ,

$$T = \frac{P}{2\pi f} \quad (3.22)$$

Now we can apply the strength condition using equation (3.13) as follows

$$\tau_{max} = \frac{T}{J}R \leq \tau_{all} \quad (3.23)$$

Substituting equation (3.22) into (3.23) we get

$$\frac{P}{2\pi fJ}R \leq \tau_{all} \quad \text{or} \quad \frac{J}{R} \geq \frac{P}{2\pi f \tau_{All}} \quad (3.24)$$

The value J/R represents the allowable minimum. This variable is known as *the section modulus* and can be found in any common section standards.

3.7 Torsion of Non-Circular Members

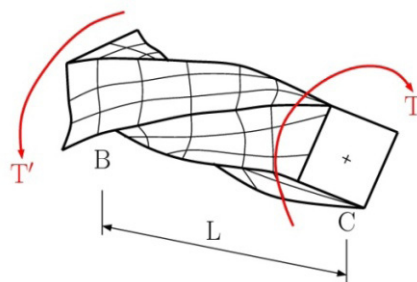


Fig. 3.14

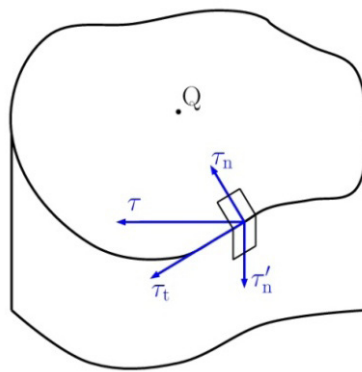


Fig. 3.15

All previous formulas have been derived upon the axisymmetry of deformed members. Let us now consider the shaft with square cross-section, see Fig. 3.14. Experimental results show that the cross-section of this type warped out of their original plane. Therefore we cannot apply relations which are otherwise valid for circular members. For example, for a circular shaft the shearing stress varies linearly along the distance from the axis. Therefore, one could expect that the maximum stresses are at the corners of the square cross-sections but they are actually equal to zero. For this reason, we can consider a torsionally loaded bar, with an arbitrary non-circular cross-section, see Fig. 3.15. The shearing stress acts in an arbitrary direction on the contour of the cross-section. This stress τ has two components: a normal component τ_n and the tangential component τ_t . Due to the shear law, component τ_n must exist. But there is no load in that direction and therefore this stress is equal to zero and subsequently $\tau_n = \tau'_n = 0$. The result means that in the vicinity of contour, the shearing stress is in the direction of tangent to the contour.

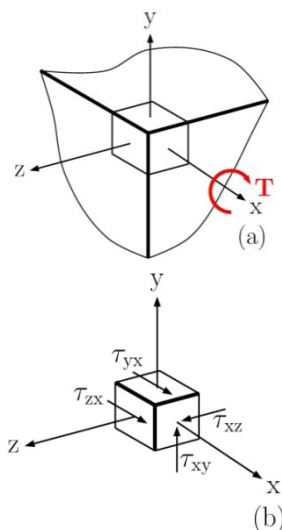


Fig. 3.16

Now let us consider a small unit cube at the corner of a square cross-section, see Fig. 3.16(a). The corner is the intersection point of two contour lines. Therefore at the corner we have two tangential components τ_{xy} and τ_{xz} , see Fig. 3.16(b). According to the shear law, other shearing components, τ_{yx} and τ_{zx} , must exist. Both are on the free surface, and there is no load in the x -axis direction. We can then write

$$\tau_{yx} = 0 \quad \text{and} \quad \tau_{zx} = 0 \quad (3.25)$$

and it follows that

$$\tau_{xy} = 0 \quad \text{and} \quad \tau_{xz} = 0 \quad (3.26)$$

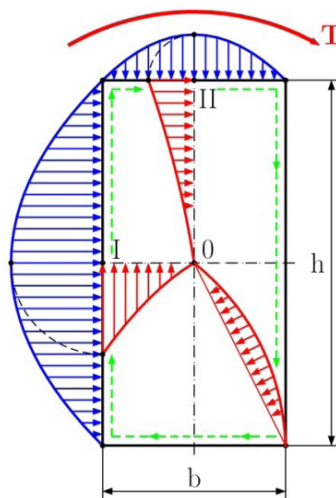


Fig. 3.17

Let us imagine a small experiment, let's twist a bar with square cross-section and made of a rubber-like material. We can verify very easily, that there are no stresses and deformations along the edges of the bar and the largest deformations and stresses are along the centrelines of the bars faces.

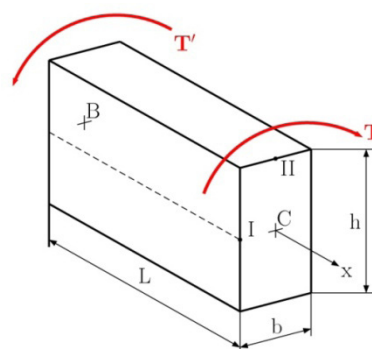


Fig. 3.18

Applying the methods of mathematical theory of elasticity for the bar with rectangular cross-section $b \times h$, we will get the stress distribution functions presented in Fig. 3.17. The corner stresses are equal to zero. We can find the two local stresses which are largest at point I and II (Roman numerals). Denoting L as the length of the bar, b and h as the narrow and wide side of bar cross-section respectively and T as the applied torque, see Fig. 3.18, we have

$$\tau_I = \tau_{max} = \frac{T}{\alpha h b^2} \quad \text{and} \quad \tau_{II} = \beta \tau_{II} \quad (3.27)$$

The coefficient α, β depend only upon the ratio h/b . The angle of twist can be expressed as

$$\varphi = \frac{TL}{\gamma G h b^3} \quad (3.28)$$

The coefficient γ also depends only upon the ratio h/b . All coefficients α, β, γ are presented in the following Tab. 3.1.

h/b	1,00	1,50	1,75	2,00	2,50	3,00	4,00	6,00	8,00	10,00	∞
α	0,208	0,231	0,239	0,246	0,258	0,267	0,282	0,299	0,307	0,313	0,333
β	1,000	0,859	0,820	0,795	0,776	0,753	0,745	0,743	0,742	0,742	0,742
γ	0,141	0,196	0,214	0,229	0,249	0,263	0,281	0,299	0,307	0,313	0,333

Tab. 3.1



What do you want to do?

No matter what you want out of your future career, an employer with a broad range of operations in a load of countries will always be the ticket. Working within the Volvo Group means more than 100,000 friends and colleagues in more than 185 countries all over the world. We offer graduates great career opportunities – check out the Career section at our web site www.volvogroup.com. We look forward to getting to know you!

VOLVO
AB Volvo (publ)
www.volvogroup.com

VOLVO TRUCKS | RENAULT TRUCKS | MACK TRUCKS | VOLVO BUSES | VOLVO CONSTRUCTION EQUIPMENT | VOLVO PENTA | VOLVO AERO | VOLVO IT
VOLVO FINANCIAL SERVICES | VOLVO 3P | VOLVO POWERTRAIN | VOLVO PARTS | VOLVO TECHNOLOGY | VOLVO LOGISTICS | BUSINESS AREA ASIA



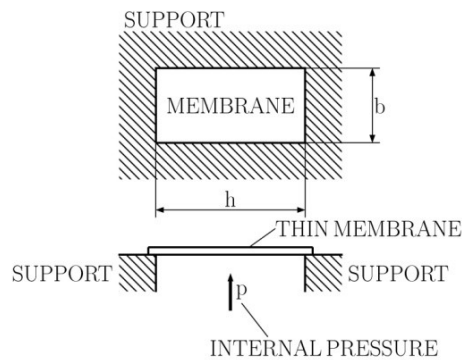


Fig. 3.19

The stress distribution function over the non-circular cross-section can be visualised by the *membrane analogy*. Firstly, what does this analogy mean? Two processes are analogous if both can be describe by the same type of equations. In our case we have the twisting of a non-circular bar and the deformation of a thin membrane subjected to internal pressures, see Fig. 3.19. Both processes are determined by the same type of differential equations. Secondly, we need to determine the analogous variables. In our case we have

$$\begin{aligned}
 T &\triangleq \text{volume bouded by the deformed membrane and horizontal plane} \\
 \text{value of shearing strain} &\triangleq \text{tangent of maximum slope} \\
 \text{direction of shearing strain} &\triangleq \text{horizontal tangent}
 \end{aligned}
 \tag{3.29}$$

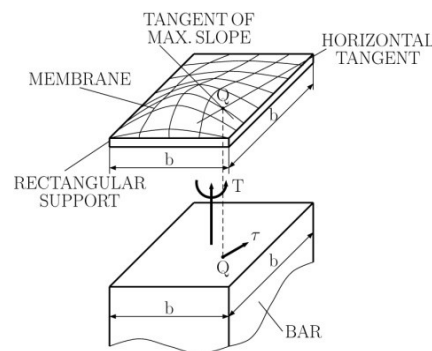


Fig. 3.20

The graphical representation of these equations is presented in Fig. 3.20.

The membrane analogy can be efficiently applied for members whose cross-section can be unrolled into the basic rectangle $b \times h$, see Fig. 3.21. Another application of the membrane analogy is for members with cross-sections composed from several rectangles, see Fig. 3.22. These cross-sections cannot be unrolled into one simple rectangle $b \times h$. For this case we can assume that the total volume of deformed membrane is equal to the sum of individually deformed membranes, see Fig. 3.23. If the torque is analogous to the membrane volume, and then we can write

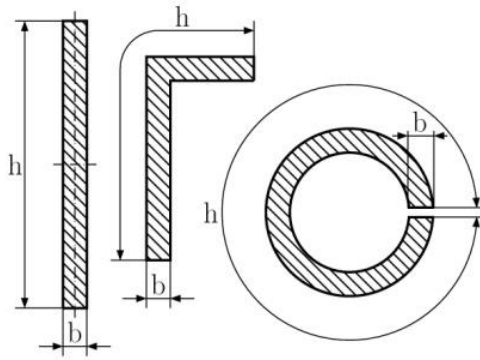


Fig. 3.21

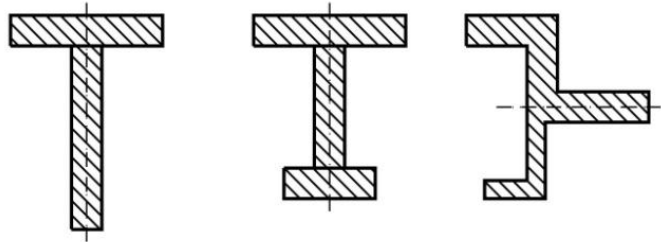


Fig. 3.22

$$\begin{aligned} T &\doteq T_1 + T_2 + \cdots + T_n \\ \varphi &= \varphi_1 = \varphi_2 = \cdots = \varphi_n \end{aligned} \quad (3.30)$$

After simple mathematical manipulations of these equations we determine that the total torsional stiffness is equals to the sum of individual torsional stiffness' of each rectangle, i.e.

$$\gamma h b^3 = \sum_{i=1}^n \gamma_i h_i b_i^3 \quad (3.31)$$

subsequently the largest stress corresponding to each rectangle can be found by

$$\tau_i = \frac{T_i}{\alpha_i h_i b_i^2} \quad (3.33)$$

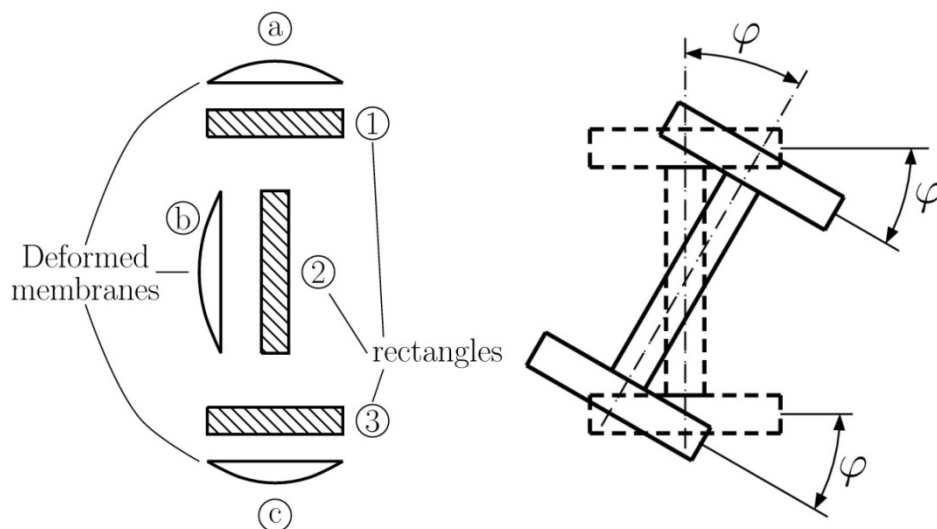


Fig. 3.23

3.8 Thin-Walled hollow Members

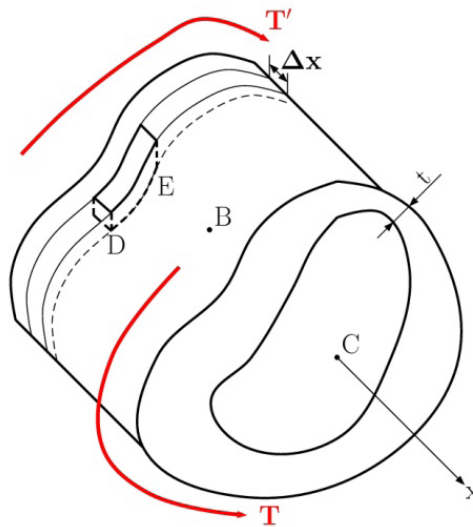
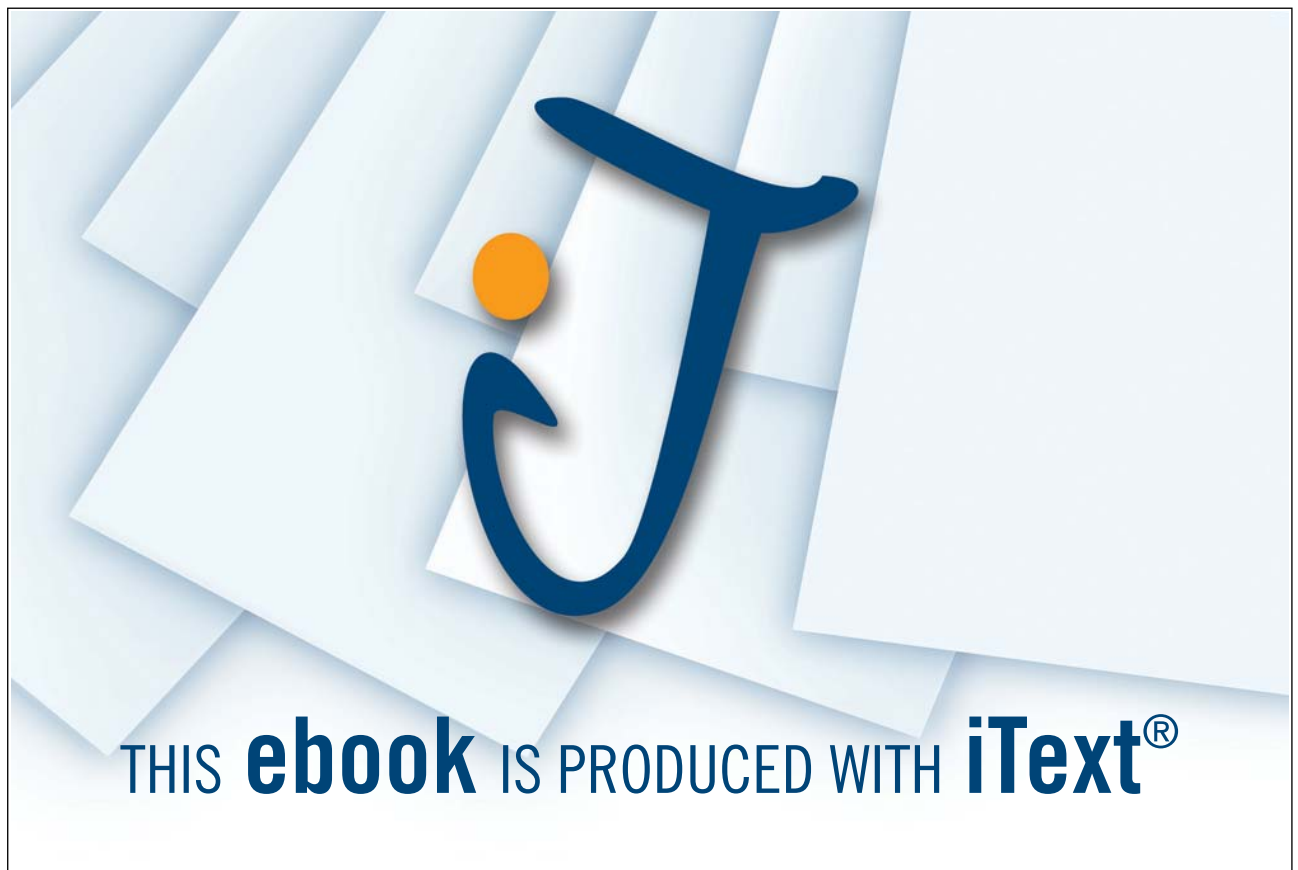


Fig. 3.24

In the previous section we discussed members with open non-circular cross-sections subjected to torsional loading. The results obtained in the previous section required advanced theory of elasticity. For thin-walled hollow members we can apply some simple computations to obtain results.



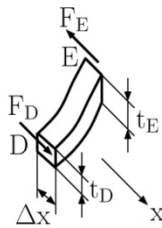


Fig. 3.25

Let us consider the thin-walled hollow member of non-circular cross-section, see Fig. 3.24. The wall thickness varies within the transverse section and remains very small in comparison to other dimensions. Let us detach a small coloured portion DE. This portion is bounded by two parallel transverse sections by the distance Δx and two parallel longitudinal planes. Focusing on the equilibrium of part DE in the longitudinal direction x , the shear law says that the shear forces F_D , F_E are exerted on faces D and E, see Fig. 3.25. We then get the corresponding equation

$$\sum F_x = 0 : F_D - F_E = 0 \quad (3.34)$$

The longitudinal shear forces F_D , F_E are acting on the small faces of areas $\Delta x t_D$ and $\Delta x t_E$. Thus we can express the force as a product of shearing stress and area, i.e.

$$F_D = \tau_D A_D = \tau_D \Delta x t_D, \quad F_E = \tau_E A_E = \tau_E \Delta x t_E \quad (3.35)$$

Substituting equation (3.35) into (3.34) we get

$$\tau_D \Delta x t_D - \tau_E \Delta x t_E = 0$$

or (3.36)

$$\tau_D t_D = \tau_E t_E$$

Since the selection of portion DE is arbitrary, and then the product τt is constant throughout the member. Denoting this product by q we get

$$q = \tau t = \text{constant} \quad (3.37)$$

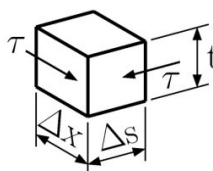


Fig. 3.26

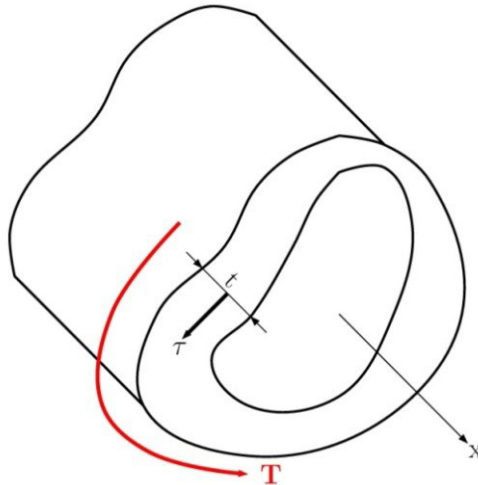


Fig. 3.27

This new variable describes the shear flow in the member. The direction of shearing stress is determined by the direction of shear forces and the application of the shear law as one can see in Fig. 3.26 and Fig. 3.27.

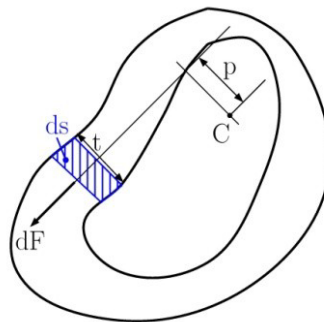


Fig. 3.28

Now let us consider a small element ds which is a portion of the wall section, see Fig. 3.28. The corresponding area is $dA = tds$. The resultant of shearing stresses exerted within this area is denoting by dF or

$$dF = \tau dA = \tau t ds = q ds \quad (3.38)$$

The moment dM_C of this force about the arbitrary point C is

$$dM_C = p dF = p q ds = q p ds \quad (3.39)$$

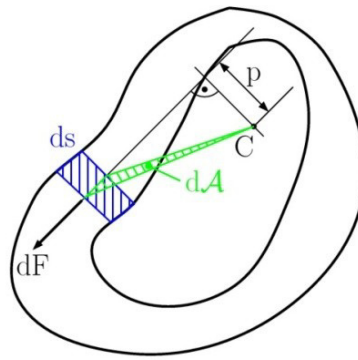


Fig. 3.29

Where p is the distance of C to the action line of dF . The action line passes through the centre of this element and the product pds represents the doubled area dA , see Fig. 3.29. We then have

$$dM_c = q2dA \quad (3.40)$$

In a mathematical point of view, the integral of moments around the wall section represents the resulting moment that is in equilibrium with the applied torque T . Thus we have

$$T = \oint dM_c = \oint q2dA \quad (3.41)$$

Teach with the Best. Learn with the Best.

Agilent offers a wide variety of affordable, industry-leading electronic test equipment as well as knowledge-rich, on-line resources—for professors and students.

We have 100's of comprehensive web-based teaching tools, lab experiments, application notes, brochures, DVDs/CDs, posters, and more.



See what Agilent can do for you.
www.agilent.com/find/EDUstudents
www.agilent.com/find/EDUeducators

© Agilent Technologies, Inc. 2012

u.s. 1-800-829-4444 canada: 1-877-894-4414

Anticipate — Accelerate — Achieve



Agilent Technologies



Since the shear flow is constant, we get

$$T = q \oint 2d\mathcal{A} = q2\mathcal{A} \quad (3.42)$$

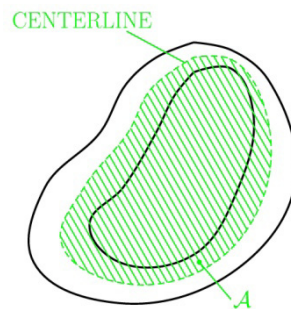


Fig. 3.30

Where $\mathcal{A}$ is the area bounded by the centreline of the section, see Fig. 3.30. From the previous equation we can easily derive the formula for calculating the shearing stress

$$\tau = \frac{T}{2t\mathcal{A}} \quad (3.43)$$

The corresponding angle of twist can be derived by using the method of strain energy, see Appendix A.4.2. We then get

$$\varphi = \frac{TL}{4\mathcal{A}^2G} \oint \frac{ds}{t} \quad (3.44)$$

If the section can be built from several parts of constant thicknesses it is known to be piecewise constant, equation (3.44) can then be simplified

$$\varphi = \frac{TL}{4\mathcal{A}^2G} \sum_{i=1}^n \frac{\Delta s_i}{t_i} \quad (3.45)$$

3.9 Examples, Solved and Unsolved Problems

Problem 3.1

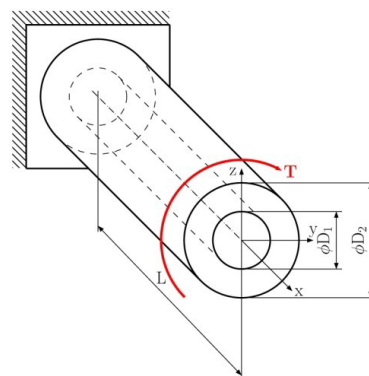


Fig. 3.31

For the steel shaft with applied torque $T = 2400 \text{ Nm}$ shown in Fig. 3.31 ($G = 77 \text{ GPa}$), determine (a) the maximum and minimum shearing stress in the shaft, (b) the angle of twist at the free end. The shaft has the following dimensions: $L = 500 \text{ mm}$, $D_1 = 40 \text{ mm}$, $D_2 = 50 \text{ mm}$.

Solution

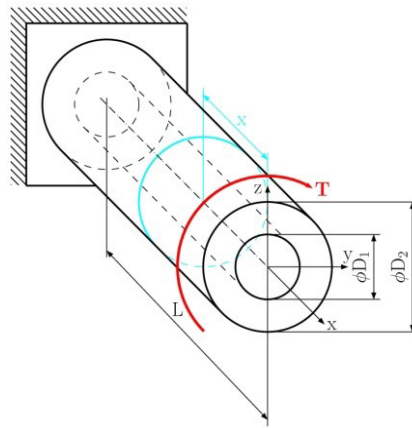


Fig. 3.32

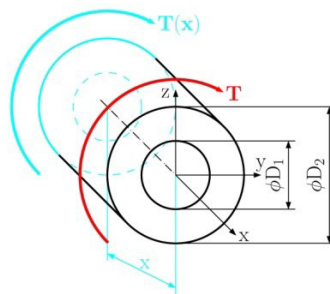


Fig. 3.32

The shaft in Fig. 3.32 consists of one portion, which has uniform cross-section area and constant internal torque. From the free body diagram in Fig. 3.33 we find that:

$$\sum M_{ix} = 0: T(x) + T = 0$$

$$T(x) = -T = -2400 \text{ Nm}$$

The polar moment of inertia (see Appendix A.2) is

$$J = J_{\text{FULL}} - J_{\text{HOLE}} = \frac{\pi D_{\text{FULL}}^4}{32} - \frac{\pi D_{\text{HOLE}}^4}{32}$$

$$J = \frac{\pi (50 \text{ mm})^4}{32} - \frac{\pi (40 \text{ mm})^4}{32} = 362265 \text{ mm}^4$$

Maximum shearing stress. On the outer surface, we have

$$\tau_{\max} = \frac{T}{J} \rho_{\max} = \frac{T}{J} \frac{D_{\text{FULL}}}{2} = \frac{2400 \times 10^3 \text{ N}\cdot\text{mm}}{362265 \text{ mm}^4} \times \frac{50 \text{ mm}}{2}$$

$$\tau_{\max} = 165.5 \text{ MPa.}$$

Minimum shearing stress. The stress is proportional to its distance from the axis of the shaft

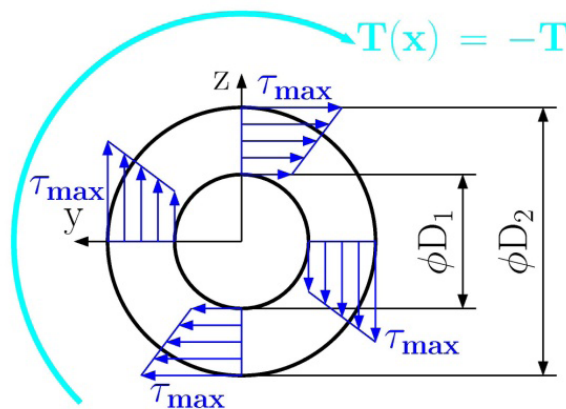


Fig. 3.34



Find and follow us: <http://twitter.com/bioradscareers>
www.linkedin.com/groupsDirectory, search for Bio-Rad Life Sciences Careers
<http://bio-radlifesciencescareersblog.blogspot.com>



Your Profession is Your Passion. Pass it On.

John Randall, PhD
 Senior Marketing Manager, Bio-Plex Business Unit

Bio-Rad is a longtime leader in the life science research industry and has been voted one of the Best Places to Work by our employees in the San Francisco Bay Area. Bring out your best in one of our many positions in research and development, sales, marketing, operations, and software development. Opportunities await — share your passion at Bio-Rad!

www.bio-rad.com/careers

BIO-RAD



$$\frac{\tau_{\min}}{\tau_{\max}} = \frac{\frac{D_1}{2}}{\frac{D_2}{2}} = \frac{D_1}{D_2} \Rightarrow \tau_{\min} = \tau_{\max} \frac{D_1}{D_2}$$

$$\tau_{\min} = 165.6 \text{ MPa} \frac{40 \text{ mm}}{50 \text{ mm}} = 132.5 \text{ MPa}$$

Another way to determine this is by:

$$\tau_{\min} = \frac{T}{J} \rho_{\min} = \frac{T}{J} \frac{D_{\text{HOLE}}}{2} = \frac{2400 \times 10^3 \text{ N}\cdot\text{mm}}{362265 \text{ mm}^4} \times \frac{40 \text{ mm}}{2}$$

$$\tau_{\min} = 132.5 \text{ MPa}.$$

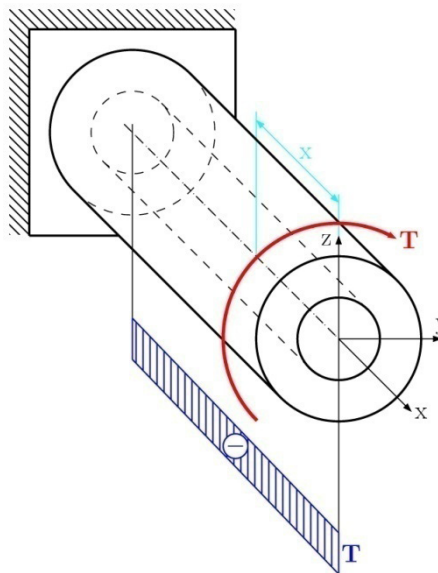


Fig. 3.35

Graphically we can show shearing stress in Fig. 3.34 and the diagram of torque along the length of the shaft is shown in Fig. 3.35.

Angle of twist.

Using Eq. (3.16) and recalling that $G = 77 \text{ GPa}$ for the shaft we obtain

$$\varphi = \frac{T L}{G J} = \frac{2400 \times 10^3 \text{ N}\cdot\text{mm} \times 500 \text{ mm}}{77 \times 10^3 \text{ N/mm}^2 \times 362265 \text{ mm}^4}$$

$$\varphi = 0.043 \text{ rad} = 2.465^\circ$$

Problem 3.2

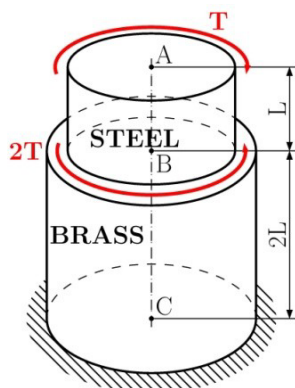


Fig. 3.36

The vertical shaft AC is attached to a fixed base at C and subjected to a torque T shown in Fig. 3.36. Determine the maximum shearing stress for each portion of the shaft and the angle of twist at A. Portion AB is made of steel for which $G = 77 \text{ GPa}$ with a diameter of $D_{\text{STEEL}} = 30 \text{ mm}$. Portion BC is made of brass for which $G = 37 \text{ GPa}$ with a diameter of $D_{\text{BRASS}} = 50 \text{ mm}$. Parameter L is equal to 100 mm

Solution

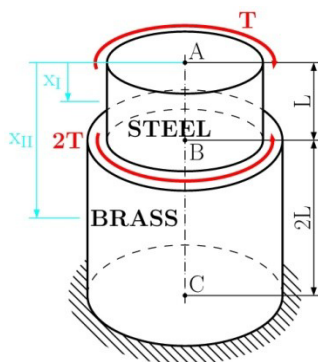


Fig. 3.37

The complete shaft consists of two portions, AB and BC (see Fig. 3.37), each with uniform cross-section and constant internal torque.

$$x_I \in \langle 0, L \rangle$$

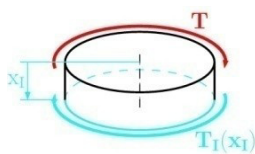


Fig. 3.38

Solution of portion AB

Passing a section through the shaft between A and B and using the free body diagram shown Fig. 3.38, we find

$$\sum M_{ixl} = 0: T_I(x) + T = 0 \quad T_I(x) = -T$$

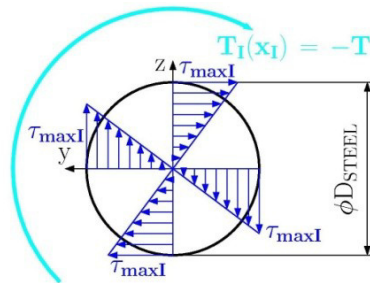


Fig. 3.38

The maximum shearing stress is on the outer surface, we have

$$\tau_{\max I} = \frac{|T|}{J} \rho_{\max I} = \frac{|T|}{J} \frac{D_{\text{STEEL}}}{2} = \frac{|T|}{\frac{\pi D_{\text{STEEL}}^4}{32}} \frac{D_{\text{STEEL}}}{2}$$

$$\tau_{\max I} = \frac{16 T}{\pi D_{\text{STEEL}}^3} = \frac{16 T}{\pi (30 \text{ mm})^3} = 1.886 \times 10^{-4} T$$



ericsson.
com

Shaping tomorrow's world – today

Our business is at the heart of a connected world – a world where communication is empowering people, business and society. Our networks, telecom services and multimedia solutions are shaping tomorrow. And this might just be your chance to shape your own future.

It's a people thing

We are looking for high-caliber people who can see the opportunities, people who can bring knowledge, energy and vision to our organization. In return we offer the chance to work with cutting-edge technology, personal and professional development, and the opportunity to make a difference in a truly global company.

We are currently recruiting both new graduates and experienced professionals in four areas: **Software, Hardware, Systems and Integration & Verification.**

Are you ready to shape your future? Begin by exploring a career with Ericsson. Visit www.ericsson.com/join-ericsson



Diagram of the shearing stress across the cross-section area is shown in Fig. 3.39.

Solution of portion BC

$$x_{II} \in \langle L, 2L \rangle$$

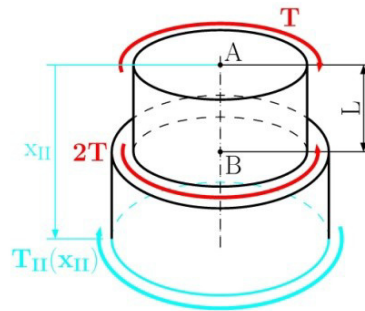


Fig. 3.40

Now passing a section between B and C (see Fig. 3.40) we obtain

$$\sum M_{ixII} = 0: T_{II}(x) + T - 2T = 0 \quad T_{II}(x) = T$$

Again, the maximum shearing stress is on the outer surface, found by the following

$$\tau_{\max II} = \frac{|T_{II}|}{J} \rho_{\max II} = \frac{|T|}{J} \frac{D_{II}}{2} = \frac{|T|}{\frac{\pi D_{BRASS}^4}{32}} \frac{D_{BRASS}}{2}$$

$$\tau_{\max II} = \frac{16 T}{\pi D_{BRASS}^3} = \frac{16 T}{\pi (50 \text{ mm})^3} = 4.074 \times 10^{-5} T$$

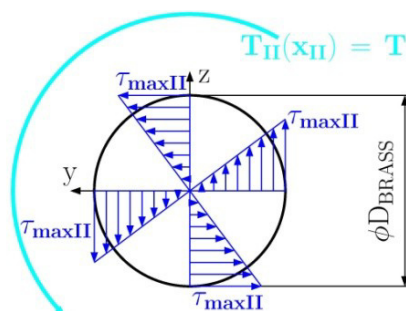


Fig. 3.41

Graphically, the shearing stress is shown in Fig. 3.41.

When we compare the results from both portions the maximum shearing stress is in portion AB, which compares with the allowable stress. From this inequality, we have the unknown torque T .

$$\tau_{\max} = \tau_{\max I} \leq \tau_{\text{All}}$$

$$\tau_{\max I} = \frac{16 T}{\pi D_{\text{STEEL}}^3} \leq \tau_{\text{All}} \Rightarrow T \leq \frac{\tau_{\text{All}} \pi D_{\text{STEEL}}^3}{16}$$

$$T \leq \frac{\tau_{\text{All}} \pi D_{\text{STEEL}}^3}{16} = \frac{150 \text{ MPa} \times \pi \times (30 \text{ mm})^3}{16} = 795215,6 \text{ Nmm}$$

$$T \leq 795215,6 \text{ Nm}$$

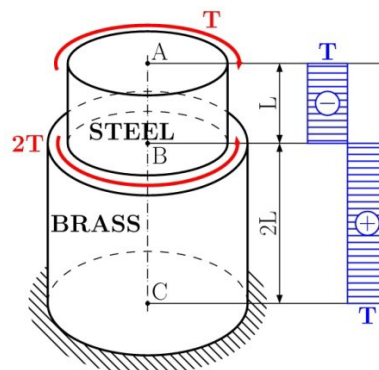


Fig. 3.42

Choosing the torque $T = 795 \text{ kNm}$. We can graphically represent the torque along the length of shaft in Fig. 3.42.

Angle of twist

Using Eq. (3.17), we have

$$\varphi = \sum_i \frac{T_i L_i}{J_i G_i}$$

$$\varphi_A = \frac{T_{AB} L_{AB}}{J_{AB} G_{AB}} + \frac{T_{BC} L_{BC}}{J_{BC} G_{BC}}$$

$$\varphi_A = \frac{T_{AB} L_{AB}}{\frac{\pi D_{\text{STEEL}}^4}{32} G_{AB}} + \frac{T_{BC} L_{BC}}{\frac{\pi D_{\text{BRASS}}^4}{32} G_{BC}}$$

$$\varphi_A = \frac{32 T_{AB} L_{AB}}{\pi D_{\text{STEEL}}^4 G_{AB}} + \frac{32 T_{BC} L_{BC}}{\pi D_{\text{BRASS}}^4 G_{BC}} = -9.48 \text{ rad}$$

Problem 3.3

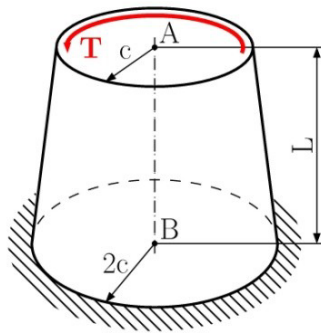


Fig 3.43

A torque T is applied as shown in Fig. 3.43 to a solid tapered shaft AB . Determine the maximum shearing stress and show, by integration, that the angle of twist at A is

$$\phi_A = \frac{7 T L}{12 \pi G c^4}.$$

The radius c , length L , modulus of rigidity G and applied torque T , are given.

SGE-ARCHBIN = 1x24-and, 50/64-and -cpm-c=0.7 -hard-1 -mem-free=1.5G -V SGE-MEM

data/komun/arc 2019-01-02

Cell=pab

Queries = deling, bulle, (p)right, product, intalsive ...

projects = delin...

Prod

DCU +3360

100g +800,000

VS

Shadow

AND2

AM

AM

The D. E. Shaw group is hiring.

You can do the math.

Meet us on-campus this semester.

Check out www.deshaw.com for more info.

DE Shaw & Co

NJ2 NJ3

VS

NST NST

VS


NJN NJC

+4 1000

+4 1000



Solution

$$x_I \in \langle 0, L \rangle$$

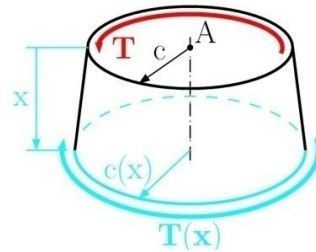**Fig 3.44**

We only have one part so from free body diagram (see Fig. 3.44), we find

$$\sum M_{ix} = 0: \quad T(x) - T = 0 \quad \Rightarrow \quad T(x) = T$$

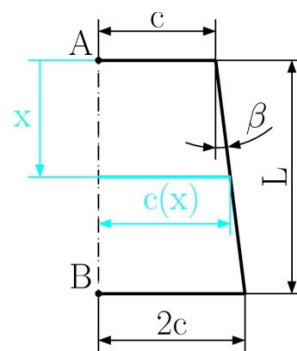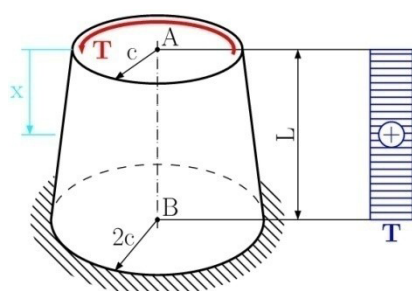**Fig 3.45****Fig 3.46**

The maximum of shearing is on the outer surface. The radius $c(x)$ at location x is found from similarity of triangles, Fig. 3.45.

$$\tan \beta = \frac{c}{L} = \frac{c(x) - c}{x} \quad \Rightarrow \quad c(x) = c \left(1 + \frac{x}{L} \right),$$

The diameter $D(x)$ at location x is

$$D(x) = 2 c(x) \Rightarrow D(x) = 2 c \left(1 + \frac{x}{L} \right).$$

Moment of inertia at location x is

$$J(x) = \frac{\pi D(x)^4}{32} = \frac{\pi \left[2c \left(1 + \frac{x}{L} \right) \right]^4}{32}.$$

The maximum shearing stress at position x on the outer surface is

$$\tau_{\max}(x) = \frac{|T|}{J(x)} \rho_{\max} = \frac{|T|}{J(x)} \frac{D(x)}{2} = \frac{16 T}{\pi \left[2c \left(1 + \frac{x}{L} \right) \right]^3}$$

Angle of twist is determined from the definition of the angle of twist Eq. (3.18), and we have

$$\varphi = \int_0^L \frac{T(x)}{G J(x)} dx = \int_0^L \frac{32 T}{G \pi \left[2c \left(1 + \frac{x}{L} \right) \right]^4} dx = \frac{32 T}{G \pi 16 c^4} \int_0^L \frac{1}{\left(1 + \frac{x}{L} \right)} \varphi = \frac{7}{12} \frac{T L}{G \pi c^4}.$$

In the fig. 3.46 is a graph of the torque along length L .

Problem 3.4

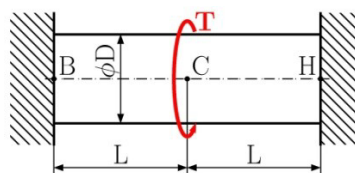


Fig. 3.47

A circular shaft BH is attached to fixed supports at both ends with a torque T applied at the midsection (Fig. 3.47). Determine the torque exerted on the shaft by each of the supports and determine the maximum shearing stress.

The length L , modulus of rigidity G and applied torque T , are given.

Solution


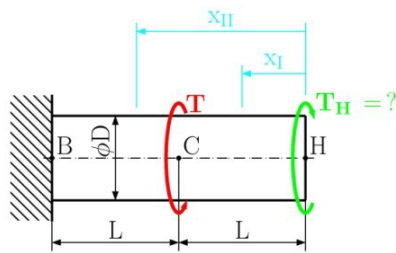


Fig. 3.48

The problem is statically indeterminate. The support at point H is replaced by an unknown support reaction T_H (horizontal and vertical reactions are equal to zero, because this is a problem of pure torsion). The solution is divided into two part (see Fig. 3.48).

Free-body diagram on portion I (part HC):

$$x_I \in \langle 0, L \rangle$$

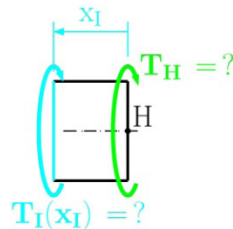

It's only an opportunity if you act on it

IKEA.SE/STUDENT

© Inter IKEA Systems B.V. 2009




From the equilibrium equation of the first part, we obtain

$$\sum M_{ix_I} = 0: \quad T_I(x_I) + T_H = 0 \quad \Rightarrow \quad T_I(x_I) = -T_H$$

Free-body diagram portion II (part CB):

$$x_{II} \in \langle L, 2L \rangle$$

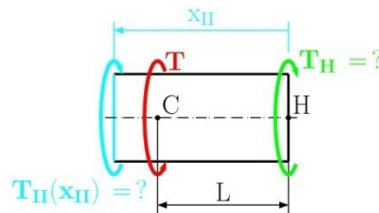

From the equilibrium equation of the second part, we obtain

$$\sum M_{ix_{II}} = 0: \quad T_{II}(x_{II}) - T + T_H = 0 \quad \Rightarrow \quad T_{II}(x_{II}) = -T_H - T$$

The unknown reaction is determined from the deformation condition, that the total angle of twist of shaft BH must be zero, since both of its ends are restrained. j_1 and j_2 denote the angle of twist for portions AC and CB respectively, we write

$$\varphi_H = 0 \quad \Rightarrow \quad \varphi_H = \varphi_I + \varphi_{II} = 0 \quad \Rightarrow \quad \varphi_I + \varphi_{II} = 0,$$

from which we have

$$\frac{T_I L_I}{G_I J_I} + \frac{T_{II} L_{II}}{G_{II} J_{II}} = 0,$$

where $G_I = G_{II} = G$, $J_I = J_{II} = J$ and $L_I = L_{II} = L$ because both parts of shaft are made from same material, have the same cross-section area, and the same length. Then solving for T_H , we have

$$T_I(x_I) + T_{II}(x_{II}) = 0 \quad \Rightarrow \quad -T_H - T_H + T = 0 \quad \Rightarrow \quad T_H = \frac{T}{2}$$

Substituting the results for each part, we obtain

$$T_I(x_I) = -T_H = \frac{T}{2} \quad T_{II}(x_{II}) = -T_H - T = -\frac{T}{2} - T = -\frac{3T}{2}$$

The diagram of torque is shown in Fig. 3.49.

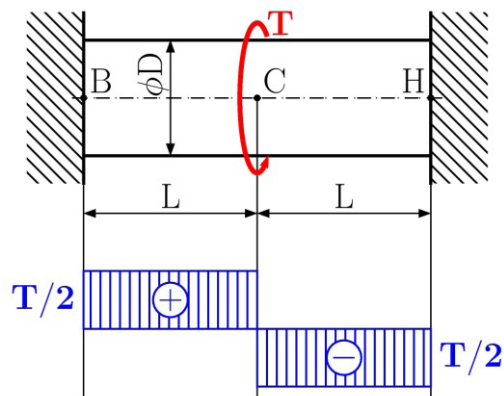


Fig. 3.49

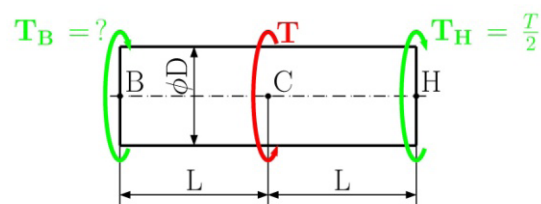


Fig. 3.50

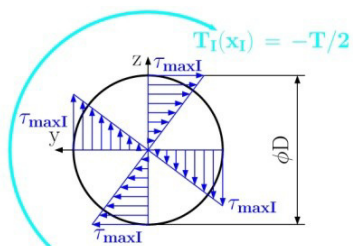


Fig. 3.51

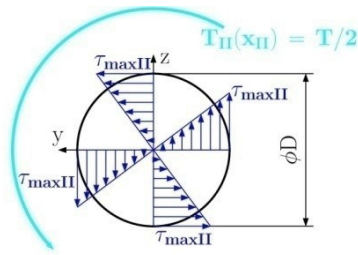


Fig. 3.52

Reaction at point B.

Drawing a free-body diagram of the shaft and denoting the torques exerted by supports T_B and T_H , (see Fig. 3.50) we obtain the equilibrium equation

$$\sum M_{ix_1} = 0: \quad T_B + T_H - T = 0 \quad \Rightarrow \quad T_B = T - T_H = \frac{T}{2}$$

The maximum shearing stress at part HC (outer surface) is

$$\tau_{1\max} = \frac{|T_1|}{J_1} \rho_{\max 1} = \frac{\left| \frac{T}{2} \right| D}{\frac{\pi D^4}{32} \cdot 2} = \frac{16 T}{2 \pi D^3} = \frac{8 T}{\pi D^3}$$



REDEFINE YOUR FUTURE

**AXA GLOBAL
GRADUATE PROGRAM**

redefining / standards 



The maximum shearing stress at part BC (outer surface) is

$$\tau_{II \max} = \frac{|T_{II}|}{J_{II}} \rho_{\max II} = \frac{\frac{T}{2}}{\frac{\pi D^4}{32}} \frac{D}{2} = \frac{8 T}{\pi D^3}$$

The diagram of shearing stresses for each part is shown in the Fig. 3.51 and Fig. 3.52.

Problem 3.5

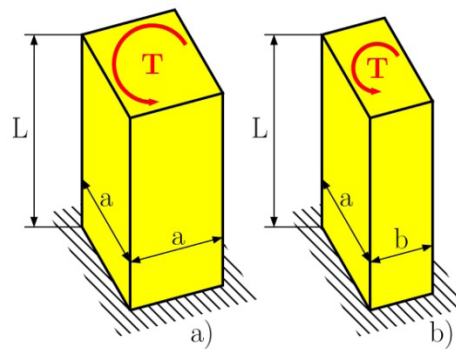


Fig. 3.53

The bars in Fig. 3.53 have a square and rectangular cross-section area. Knowing that the magnitude of torque T is 800 Nm determine the maximum shearing stress for each bar.

The dimensions are given by $L = 400$ mm, $a = 50$ mm and $b = 35$ mm

Solution

For a bar with square cross-section area (see Fig. 3.53a) and bar with rectangular cross-section area (see Fig. 3.53b), the maximum shearing stress is defined by Eq. (3.27)

$$\tau_{\max} = \frac{T}{\alpha a b^2},$$

where the coefficient α is obtained from tab. 3.1 in section 3.7. We have

$$\frac{a}{b} = \frac{50 \text{ mm}}{50 \text{ mm}} = 1 \Rightarrow \alpha = 0.208 \text{ for square cross section}$$

and

$$\frac{a}{b} = \frac{50 \text{ mm}}{30 \text{ mm}} = 1.43 \Rightarrow \alpha = 0.231 \text{ for rectangular cross section.}$$

Maximum shearing stress for square cross-section in Fig. 3.53a is

$$\tau_{\max} = \frac{T}{\alpha a b^2} = \frac{800 \text{ Nm}}{0.208 \times 0.050 \text{ m} \times (0.050 \text{ m})^2} = 30.77 \text{ MPa.}$$

Maximum shearing stress for rectangular cross-section in Fig. 3.53b is

$$\tau_{\max} = \frac{T}{\alpha a b^2} = \frac{800 \text{ Nm}}{0.208 \times 0.050 \text{ m} \times (0.035 \text{ m})^2} = 1.98 \text{ MPa.}$$

Problem 3.6

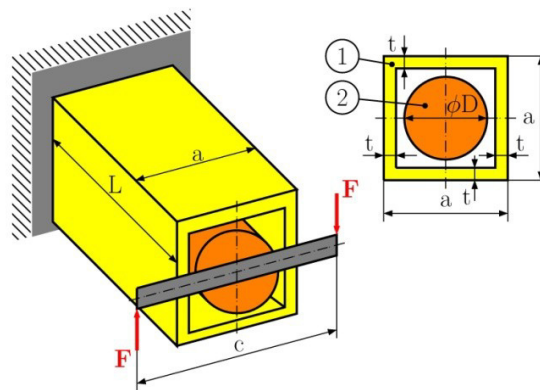


Fig. 3.54

Two shafts of the same length and made by the same materials is connected by a welded rigid beam. On the ends of the rigid beam a moment couple given by force F is applied. Cross-section area of the shaft is in Fig. 3.54. Design parameter D if we are given an allowable stress $\sigma_{\text{all}} = 150 \text{ MPa}$.

Given: $F = 1000 \text{ N}$, $c = 200 \text{ mm}$, $a = 2D$, $t = 0.1D$, $L = 400 \text{ mm}$.

Solution

From the given force, we find the total magnitude of the torque T applied to both shafts

$$T = F c = 1000 \text{ N} \times 0.2 \text{ m} = 200 \text{ Nm}$$

This torque will then be divided on both shafts and from the equilibrium of the rigid beam, we have

$$T = T_1 + T_2 \quad (a)$$

We have two unknowns torques T_1 and T_2 , so we need a second equation, which is found from the deformation condition

$$\phi_1 = \phi_2 \quad \Rightarrow \quad \frac{T_1 L}{G J_1} = \frac{T_2 L}{G J_2}, \quad (b)$$

where angle of twist for the first cross-section area is

$$J_1 = \frac{4A^2}{\int_s \frac{ds}{t}} = \frac{4(1.9D \times 1.9D)^2}{2\left(\frac{1.9D}{0.1D} + \frac{1.9D}{0.1D}\right)} = \frac{52.1284D^4}{76} = 0.686D^4 \quad (c)$$

and for the second cross-section is

$$J_2 = \frac{\pi D^4}{32} \quad (d)$$

inserting (c) and (d) into (b), we get

$$T_1 = 6.998 T_2 \quad (f)$$

Solving the system of equations (a) and (f), we give

$$T_1 = 0.875T = 0.875 F c = 0.875 \times 200 \text{ Nm} = 175 \text{ Nm}$$

$$T_2 = 0.125T = 0.125 F c = 0.125 \times 200 \text{ Nm} = 25 \text{ Nm}$$

**I'm with ZF.
Engineer and Easy Rider.**

I enjoy motorcycle riding as a hobby. My mind is free and clear. I just feel great. Especially in this famous region where I live and work. Riding on the legendary Blue Ridge Parkway with its beautiful scenic views is breathtaking. I have a great life and a great job. The doors are always open and everybody helps each other out. My name is Charles Jenkins and I'm working as a quality engineer. For more about me, what I do, and why I really enjoy working at ZF, go to www.im-with-zf.com.

DriveLine and Chassis Technology

Charles Jenkins
Quality Engineer
ZF Friedrichshafen AG
North Carolina/USA

www.im-with-zf.com



Maximum shearing stress in the first cross-section is

$$\tau_{\max I} = \frac{T_1}{2 A t_{\min}} = \frac{0.875 F c}{2 \times (1.9D)^2 0.1D} = \frac{175 \text{ Nm}}{0.722 D^3} = \frac{242.4}{D^3} \text{ Nm}$$

Maximum shearing stress in the second cross-section is

$$\tau_{\max II} = \frac{T_2}{\frac{\pi D^3}{16}} = \frac{16 T_2}{\pi D^3} = \frac{16 \times 25 \text{ Nm}}{\pi D^3} = \frac{127.3}{D^3} \text{ Nm}$$

To design parameter D , we get the maximum shearing stress (from all parts), which compare with the allowable stress, we then get

$$\tau_{\max I} = \frac{242.4}{D^3} \text{ Nm} \leq \tau_{\text{All}} \Rightarrow D \geq \sqrt[3]{\frac{242.4 \text{ Nm}}{\tau_{\text{All}}}} = \sqrt[3]{\frac{242.4 \text{ Nm}}{150 \times 10^6 \text{ Nm}^2}}$$

$$D \geq 0.012 \text{ m}$$

Problem 3.7

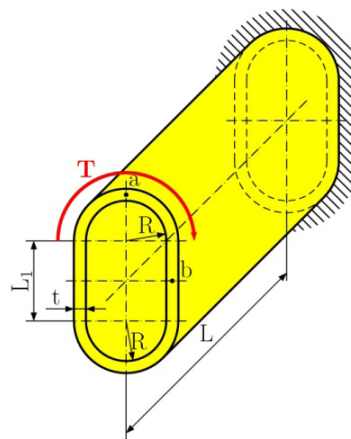
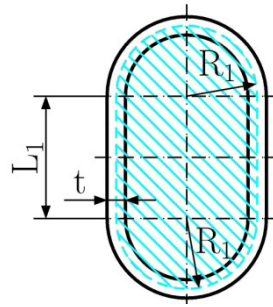
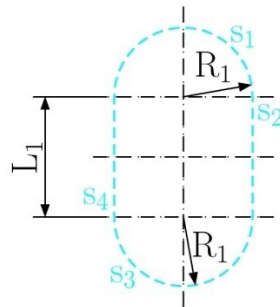


Fig. 3.55

A torque $T = 850 \text{ Nm}$ is applied to a hollow shaft with uniform wall thickness $t = 6 \text{ mm}$ shown in Fig. 3.55. Neglecting the effect of stress concentration, determine the shearing stress at points a and b . Determine the angle of twist at the end of shaft when L is 200 mm and the modulus of rigidity is $G = 77 \text{ GPa}$.

Given: $R = 30 \text{ mm}$, $t = 6 \text{ mm}$, $L_1 = 60 \text{ mm}$, $L = 200 \text{ mm}$.

Solution**Fig. 3.56****Fig. 3.57**

From the definition of maximum shearing stress for thin-walled hollow shafts, we have

$$\tau_{\max} = \frac{T}{2 A t_{\min}},$$

where A is the area bounded by the centerline of wall cross-section area (Fig. 3.56 – hatching area), we have

$$A = \pi R_1^2 + 2R_1 L_1 = \pi \left(R + \frac{t}{2} \right)^2 + 2 \left(R + \frac{t}{2} \right) L_1$$

The shearing stress at point a and b is

$$\tau_a = \tau_b = \frac{T}{2 A t_{\min}} = \frac{850000 \text{ Nmm}}{2 \times 6 \text{ mm} \times 7381,19 \text{ mm}^2} = 9.6 \text{ MPa}$$

The angle of twist of a thin-walled shaft of length L and modulus of rigidity G is defined

$$\varphi = \frac{T L}{G J}$$

where the moment of inertia is $J = \frac{4\mathcal{A}^2}{\oint_s \frac{ds}{t}}$

Integral $\oint_s \frac{ds}{t}$ is computed along the centerline of the wall section and we get

$$\int_s \frac{ds}{t} = \frac{s_1}{t} + \frac{s_2}{t} + \frac{s_3}{t} + \frac{s_4}{t} = \frac{\pi \cdot 33 \text{ mm}}{6 \text{ mm}} + \frac{60 \text{ mm}}{6 \text{ mm}} + \frac{\pi \cdot 33 \text{ mm}}{6 \text{ mm}} + \frac{60 \text{ mm}}{6 \text{ mm}} = 54.5575$$

$$J = \frac{4\mathcal{A}^2}{\oint_s \frac{ds}{t}} = \frac{4 \times (7381.19 \text{ mm}^2)^2}{54.5575} = 3994460.65 \text{ mm}^4$$

Angle of twist at the end of the shaft is given by the following

$$\phi = \frac{T L}{G J} = \frac{850000 \text{ Nmm} \times 200 \text{ mm}}{77 \times 10^3 \text{ MPa} \times 3994460.65 \text{ mm}^4} = 5.527 \times 10^{-4} \text{ rad} = 0.032^\circ$$



At Navigant, there is no limit to the impact you can have. As you envision your future and all the wonderful rewards your exceptional talents will bring, we offer this simple guiding principle: It's not what we do. It's how we do it.

Impact matters.

NAVIGANT
navigant.com

DISPUTES & INVESTIGATIONS • ECONOMICS • FINANCIAL ADVISORY • MANAGEMENT CONSULTING

©2013 Navigant Consulting, Inc. All rights reserved. Navigant Consulting is not a certified public accounting firm and does not provide audit, attest, or public accounting services.
See navigant.com/licensing for a complete listing of private investigator licenses.



Unsolved problems

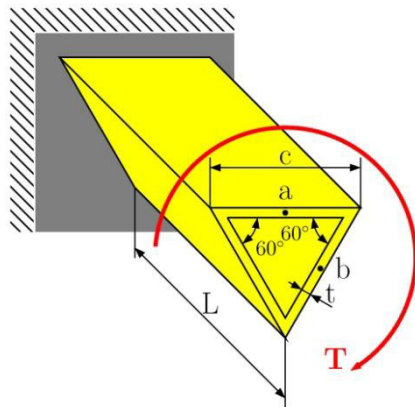


Fig. 3.58

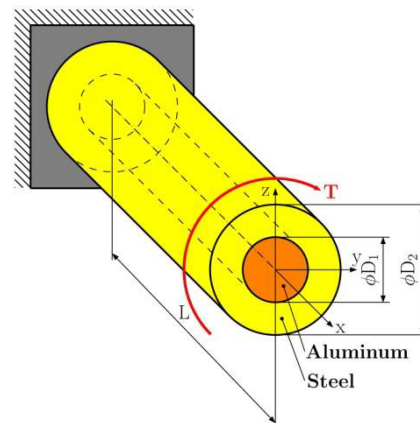


Fig. 3.59

Problem 3.8

A torque $T = 750 \text{ Nm}$ is applied to the hollow shaft shown in the Fig. 3.58 that has a uniform wall thickness of $t = 8 \text{ mm}$. Neglecting the effect of stress concentration, determine the shearing stress at points a and b.

$$[\tau_a = \tau_b = 16.1 \text{ MPa}]$$

Problem 3.9

The composite shaft in the Fig. 3.59 is twisted by applying a torque T at its end. Knowing that the maximum shearing stress in steel is 150 MPa , determine the corresponding maximum shearing stress in the aluminum core. Use $G = 77 \text{ GPa}$ for steel and $G = 27 \text{ GPa}$ for aluminum.

$$[\tau_{\max \text{ aluminum}} = 39.44 \text{ MPa}, T = 10.31 \text{ kNm}]$$

Problem 3.10

A statically indeterminate circular shaft BH consists of length L and diameter D (portion CH) and length L with diameter $2D$ (portion BC). The shaft is attached by fixed supports at both ends, and a torque T is applied at point C (see Fig. 3.60). Determine the maximum shearing stress in portion BC and CH, and reaction at the support in point H.

$$\left[T_H = \frac{T}{17}, \tau_{\max \text{ BC}} = \frac{32 T}{17 \pi D^3}, \tau_{\max \text{ CH}} = \frac{16 T}{17 \pi D^3} \right]$$

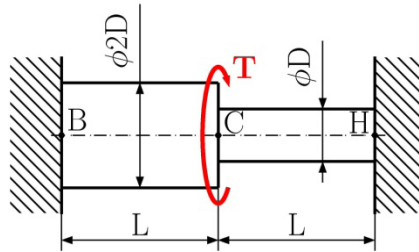


Fig. 3.60

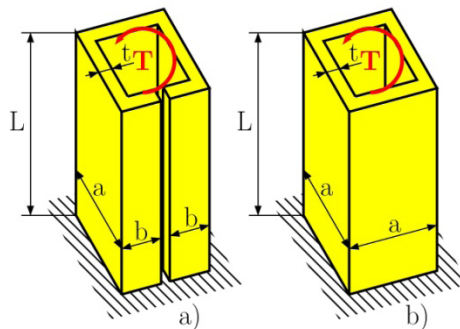


Fig. 3.61

Problem 3.11

Using $\tau_{\text{all}} = 150 \text{ MPa}$, determine the largest torque T that may be applied to each of the steel bars and to the steel tube shown in Fig. 3.61. Given is $a = 50 \text{ mm}$, $b = 24 \text{ mm}$, $t = 8 \text{ mm}$ and $L = 200 \text{ mm}$.

$$[(a) T = 531.2 \text{ Nm}, (b) T = 4233.6 \text{ Nm}]$$

Problem 3.12

A 1.25 m long angle iron with L cross-section (shown in Fig. 3.62). Knowing that the allowable shearing stress $\tau_{\text{all}} = 60 \text{ MPa}$ and modulus of rigidity $G = 77 \text{ GPa}$ and ignoring the effects of stress concentration, (a) determine the largest magnitude of torque T that may be applied, (b) the corresponding angle of twist at the free ends. The dimensions are $h = 50 \text{ mm}$, $b = 25 \text{ mm}$, $t = 5 \text{ mm}$ and $L = 200 \text{ mm}$.

$$[(a) T = 35 \text{ kNm}, (b) j = 31.2 \text{ rad}]$$

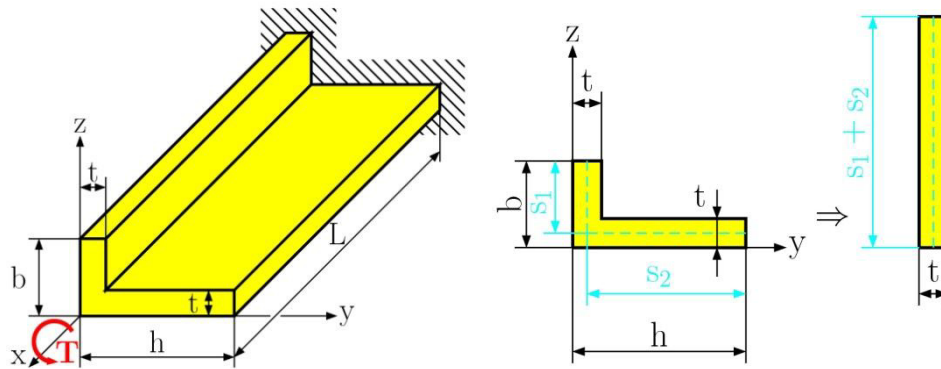


Fig. 3.62

Success here is about overcoming challenges – especially the ones we didn't even think of. I look forward to that.

- Scott, Mechanical Engineering Group Leader

Collaborating. Inspiring. Leading.

Monsanto has always embraced innovation and always focused on helping to make a better world. You can see it in our groundbreaking products and in our dynamic environment where your skills and your career can grow and develop. We know that every day, new ideas can come from anyone, anywhere. At Monsanto, you'll be respected, you'll contribute to the bottom line and you'll help farmers feed the world.

Start right now: www.monsanto.com/students

EEO/AA EMPLOYER M/F/D/V ©2013 Monsanto Company

MONSANTO



Please find the second part of this book by downloading
"Introduction to Mechanics of Materials: Part II"

Appendix

A.1 Centroid and first moment of areas

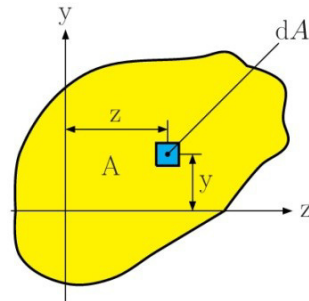


Fig. A.1

Consider an area A located in the zy plane (Fig. A.1). The first moment of area with respect to the z axis is defined by the integral

$$Q_z = \int_A y \, dA \quad (\text{A.1})$$

Similarly, the first moment of area A with respect to the y axis is

$$Q_y = \int_A z \, dA \quad (\text{A.2})$$

If we use SI units are used, the first moment of Q_z and Q_y are expressed in m^3 or mm^3 .

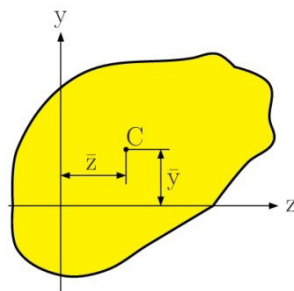


Fig. A.2

The centroid of the area A is defined at point C of coordinates $\bar{y}$ and $\bar{z}$ (Fig. A.2), which satisfies the relation

$$\bar{y} = \frac{\int_A y \, dA}{A}$$

$$\bar{z} = \frac{\int z \, dA}{A} \quad (\text{A.3})$$

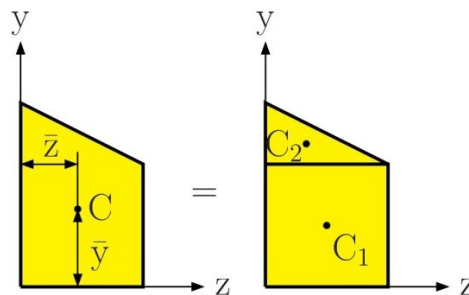


Fig. A.3

When an area possesses an axis of symmetry, the first moment of the area with respect to that axis is zero.

Considering an area A , such as the trapezoidal area shown in Fig. A.3, we may divide the area into simple geometric shapes. The solution of the first moment Q_z of the area with respect to the z axis can be divided into components A_1 , A_2 , and we can write

$$Q_z = \int_A y \, dA = \int_{A_1} y \, dA + \int_{A_2} y \, dA = \sum \bar{y}_i A_i \quad (\text{A.4})$$

Solving the centroid for composite area, we write

$$\bar{y} = \frac{\sum A_i \bar{y}_i}{\sum A_i} \quad \bar{z} = \frac{\sum A_i \bar{z}_i}{\sum A_i} \quad (\text{A.5})$$

Example A.01

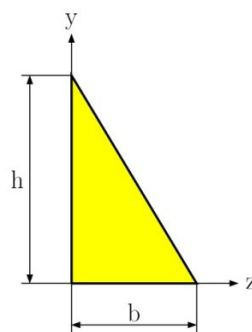
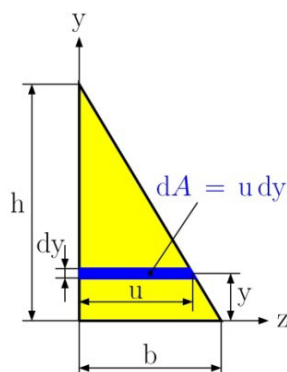


Fig. A.4

For the triangular area in Fig. A.4, determine (a) the first moment Q_z of the area with respect to the z axis, (b) the $\bar{y}$ ordinate of the centroid of the area.

Solution**(a) First moment Q_z** **Fig. A.5**

We selected an element area in Fig. A.5 with a horizontal length u and thickness dy . From the similarity in triangles, we have

$$\frac{u}{b} = \frac{h-y}{h} \quad u = b \frac{h-y}{h}$$

and

$$dA = u \, dy = b \frac{h-y}{h} dy$$

using Eq. (A.1) the first moment is

$$Q_z = \int_A y \, dA = \int_0^h y b \frac{h-y}{h} dy = \frac{b}{h} \int_0^h (hy - y^2) dy$$

$$Q_z = \frac{b}{h} \left[h \frac{y^2}{2} - \frac{y^3}{3} \right] = \frac{1}{6} b h^2$$

(b) Ordinate of the centroid

Recalling the first Eq. (A.4) and observing that $A = \frac{1}{2}bh$, we get

$$Q_z = A \bar{y} \Rightarrow \frac{1}{6} b h^2 = \frac{1}{2} b h^2 \bar{y} \Rightarrow \bar{y} = \frac{1}{3} h$$

A.2 Second moment, moment of areas

Consider again an area A located in the zy plane (Fig. A.1) and the element of area dA of coordinate y and z . The *second moment*, or *moment of inertia*, of area A with respect to the z -axis is defined as

$$I_z = \int_A y^2 dA \quad (\text{A.6})$$

Example A.02

Locate the centroid C of the area A shown in Fig. A.6

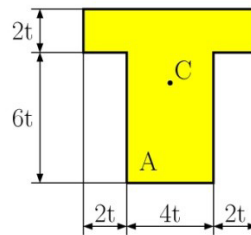


Fig. A.6



Are you the surfer or the wave?

Creating the future of communications technology requires to be a powerful force for change and at the same time be swift and agile enough to deliver even in varying conditions. Which is why when you look at our history of innovation you'll find countless awards and even a handful of Nobel Prizes in our company résumé. And when you look at our teams, you will find dynamic, diverse, passionate professionals. Hand-in-hand, team by team, every day we bring innovations to market to help realize the potential of a connected world.


..... Alcatel-Lucent 

www.alcatel-lucent.com/careers



Solution

Selecting the coordinate system shown in Fig. A.7, we note that centroid C must be located on the y axis, since this axis is the axis of symmetry than $\bar{z} = 0$.

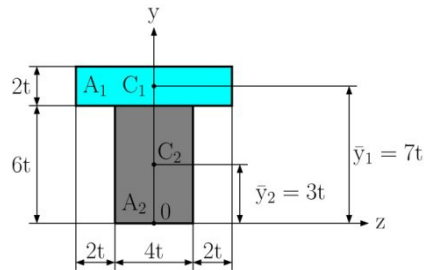**Fig. A.7**

Dividing A into its component parts A_1 and A_2 , determine the $\bar{y}$ ordinate of the centroid, using Eq. (A.5)

$$\bar{y} = \frac{\sum_i A_i \bar{y}_i}{\sum_i A_i} = \frac{\sum_{i=1}^2 A_i \bar{y}_i}{\sum_{i=1}^2 A_i} = \frac{A_1 \bar{y}_1 + A_2 \bar{y}_2}{A_1 + A_2}$$

$$\bar{y} = \frac{A_1 \bar{y}_1 + A_2 \bar{y}_2}{A_1 + A_2} = \frac{(2t \times 8t) \times 7t + (4t \times 6t) \times 3t}{2t \times 8t + 4t \times 6t} = \frac{184t^3}{40t^2} = 4.6t$$

Similarly, the *second moment*, or *moment of inertia*, of area A with respect to the y axis is

$$I_y = \int_A z^2 \, dA. \quad (\text{A.7})$$

We now define the *polar moment of inertia* of area A with respect to point O (Fig. A.8) as the integral

$$J_o = \int_A \rho^2 \, dA, \quad (\text{A.8})$$

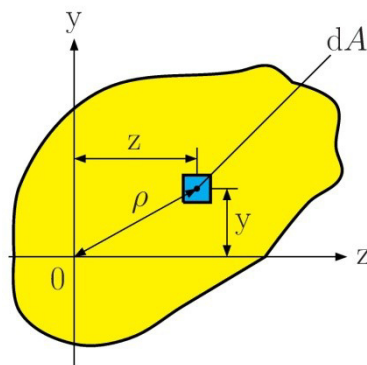


Fig. A.8

where ρ is the distance from O to the element dA . If we use SI units, the moments of inertia are expressed in m^4 or mm^4 .

An important relation may be established between the polar moment of inertia J_o of a given area and the moment of inertia I_z and I_y of the same area. Noting that $\rho^2 = y^2 + z^2$, we write

$$J_o = \int_A \rho^2 dA = \int_A (y^2 + z^2) dA = \int_A y^2 dA + \int_A z^2 dA$$

or

$$J_o = I_z + I_y \quad (\text{A.9})$$

The *radius of gyration* of area A with respect to the z axis is defined as the quantity r_z , that satisfies the relation

$$I_z = r_z^2 A \Rightarrow r_z = \sqrt{\frac{I_z}{A}} \quad (\text{A.10})$$

In a similar way, we defined the radius of gyration with respect to the y axis and origin O. We then have

$$I_y = r_y^2 A \Rightarrow r_y = \sqrt{\frac{I_y}{A}} \quad (\text{A.11})$$


$$J_o = r_o^2 A \Rightarrow r_o = \sqrt{\frac{J_o}{A}} \quad (\text{A.12})$$

Substituting for J_o , I_y and I_z in terms of its corresponding radii of gyration in Eq. (A.9), we observe that

$$r_o^2 = r_z^2 + r_y^2 \quad (\text{A.13})$$

Example A.03

For the rectangular area in Fig. A.9, determine (a) the moment of inertia I_z of the area with respect to the centroidal axis, (b) the corresponding radius of gyration r_z .

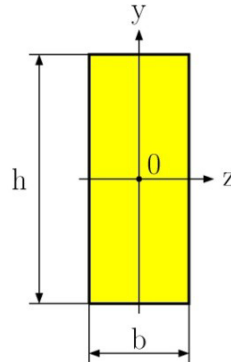**Fig. A.9****Solution**

(a) **Moment of inertia I_z .** We select, as an element area, a horizontal strip with length b and thickness dy (see Fig. A.10). For the solution we use Eq. (A.6), where $dA = b dy$, we have

Budget-Friendly. Knowledge-Rich.

The Agilent InfiniiVision X-Series and 1000 Series offer affordable oscilloscopes for your labs. Plus resources such as lab guides, experiments, and more, to help enrich your curriculum and make your job easier.

Scan for free
Agilent iPhone
Apps or visit
qrs.ly/po20pli

See what Agilent can do for you.
www.agilent.com/find/EducationKit

© Agilent Technologies, Inc. 2012

u.s. 1-800-829-4444 canada: 1-877-894-4414

Anticipate — Accelerate — Achieve

Agilent Technologies



$$I_z = \int_A y^2 dA = \int_{-h/2}^{+h/2} y^2 (b dy) = b \int_{-h/2}^{+h/2} y^2 dy = \frac{b}{3} [y^3]_{-h/2}^{+h/2}$$

$$I_z = \frac{b}{3} \left(\frac{h^3}{8} + \frac{h^3}{8} \right) \Rightarrow I_z = \frac{1}{12} b h^3$$

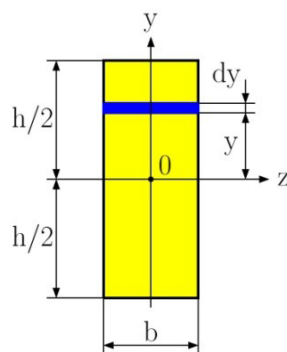


Fig. A.10

(b) Radius of gyration r_z . From Eq. (A.10), we have

$$r_z = \sqrt{\frac{I_z}{A}} = \sqrt{\frac{\frac{1}{12} b h^3}{b h}} = \sqrt{\frac{h^2}{12}} \Rightarrow r_z = \frac{h}{\sqrt{12}}$$

Example A.04

For the circular cross-section in Fig. A.11. Determine (a) the polar moment of inertia J_O , (b) the moment of inertia I_z and I_y .

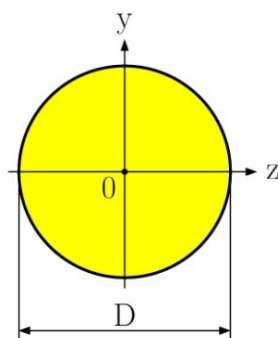


Fig. A.11

Solution

(a) **Polar moment of Inertia.** We select, as an element of area, a ring of radius ρ and thickness $d\rho$ (Fig. A.12). Using Eq. (A.8), where $dA = 2\pi\rho d\rho$, we have

$$J_o = \int_A \rho^2 dA = \int_0^{D/2} \rho^2 2\pi\rho d\rho = 2\pi \int_0^{D/2} \rho^3 d\rho,$$

$$J_o = \frac{\pi D^4}{32}.$$

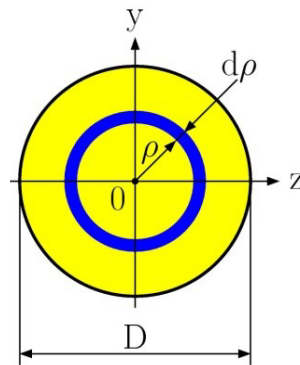


Fig. A.12

(b) **Moment of Inertia.** Because of the symmetry of a circular area $I_z = I_y$. Recalling Eq. (A.9), we can write

$$J_o = I_z + I_y = 2I_z \quad \Rightarrow \quad I_z = \frac{J_o}{2} = \frac{\pi D^4}{32}$$

$$I_z = I_y = \frac{\pi D^4}{64}.$$

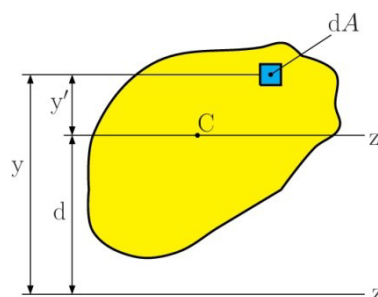
A.3 Parallel axis theorem

Fig. A.13

Considering the moment of inertia I_z of an area A with respect to an arbitrary z axis (Fig. A.13). Let us now draw the *centroidal* z' axis, i.e., the axis parallel to the z axis which passes through the area's centroid C . Denoting the distance between the element dA and axis passes through the centroid C by y' , we write $y = y' + d$. Substituting for y in Eq. (A.6), we write

$$\begin{aligned}
 I_z &= \int_A y^2 dA = \int_A (y' + d)^2 dA, \\
 I_z &= \int_A y'^2 dA + 2d \int_A y' dA + d^2 \int_A dA, \\
 I_z &= \bar{I}_z + Q_z + Ad^2
 \end{aligned} \tag{A.14}$$

where $\bar{I}_z$ is the area's moment of inertia with respect to the centroidal z' axis and Q_z is the first moment of the area with respect to the z' axis, which is equal to zero since the centroid C of the area is located on that axis. Finally, from Eq. (A.14) we have

$$I_z = \bar{I}_z + Ad^2 \tag{A.15}$$



The financial industry needs a strong software platform

That's why we need you

Working at SimCorp means making a difference. At SimCorp, you help create the tools that shape the global financial industry of tomorrow. SimCorp provides integrated software solutions that can turn investment management companies into winners. With SimCorp, you make the most of your ambitions, realising your full potential in a challenging, empowering and stimulating work environment.

Are you among the best qualified in finance, economics, computer science or mathematics?

Find your next challenge at www.simcorp.com/careers

Mitigate risk | Reduce cost | Enable growth
simcorp.com



"When I joined SimCorp, I was very impressed with the introduction programme offered to me."

Meet Lars and other employees at simcorp.com/meetouremployees





A similar formula may be derived, which relates the polar moment of inertia J_o of an area to an arbitrary point O and polar moment of inertia J_C of the same area with respect to its centroid C. Denoting the distance between O and C by d , we write

$$J_o = J_C + Ad^2 \quad (\text{A.16})$$

Example A.05

Determine the moment of inertia I_z of the area shown in Fig. A.14 with respect to the centroidal z axis.

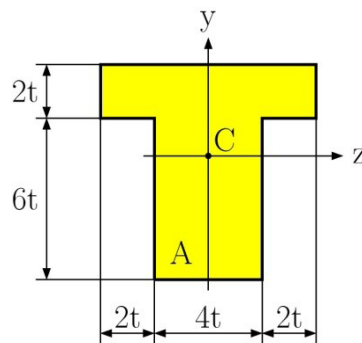


Fig. A.14

Solution

The first step of the solution is to locate the centroid C of the area. However, this has already been done in Example A.02 for a given area A.

We divide the area A into two rectangular areas A_1 and A_2 (Fig. A.15) and compute the moment of inertia of each area with respect to the z axis. Moment of inertia of the areas are

$$I_z = I_{z1} + I_{z2},$$

where I_{z1} is the moment of inertia of A_1 with respect to the z axis. For the solution, we use the parallel-axis theorem (Eq. A.15), and write

$$I_{z1} = \bar{I}_{z1} + A_1 d_1^2 = \frac{1}{12} b_1 h_1^3 + b_1 h_1 d_1^2$$

$$I_{z1} = \frac{1}{12} \times 8t \times (2t)^3 + 8t \times 2t \times (7t - 4.6t)^2$$

$$I_{z1} = 97.5 t^4$$

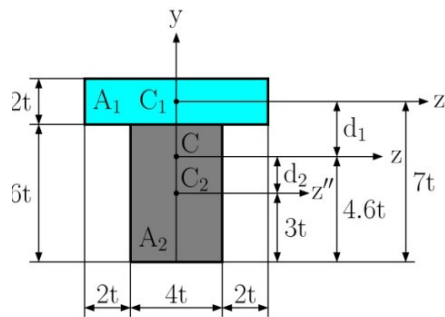


Fig. A.15

In a similarly way, we find the moment of inertia I_{z2} of A_2 with respect to the z axis and write

$$I_{z2} = \bar{I}_{z''} + A_2 d_2^2 = \frac{1}{12} b_2 h_2^3 + b_2 h_2 d_2^2$$

$$I_{z2} = \frac{1}{12} \times 4t \times (6t)^3 + 4t \times 6t \times (4.6t - 3t)^2$$

$$I_{z1} = 133.4 t^4$$

The moment of inertia I_z of the area shown in Fig. A.14 with respect to the centroidal z axis is

$$I_z = I_{z1} + I_{z2} = 97.5t^4 + 133.4t^4 = 230.9t^4.$$

Example A.06

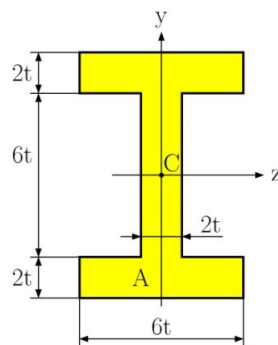


Fig. A.16

Determine the moment of inertia I_z of the area shown in Fig. A.14 with respect to the centroidal z axis and the moment of inertia I_y of the area with respect to the centroidal y axis.

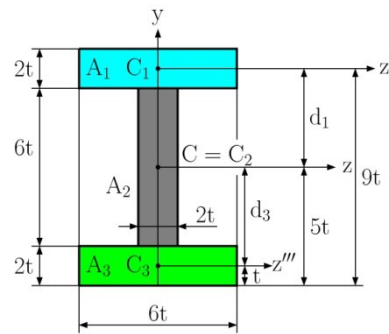


Fig. A.17

Solution

The first step of the solution is to locate the centroid C of the area. This area has two axis of symmetry, the location of the centroid C is in the intersection of the axes of symmetry.



ENGINEERING, RESEARCH AND OPERATIONS

85

years of
innovation

Who are we?
We are the world's largest oilfield services company¹. Working globally—often in remote and challenging locations—we invent, design, engineer, and apply technology to help our customers find and produce oil and gas safely.

Who are we looking for?
We're looking for high-energy, self-motivated graduates with vision to work in our engineering, research and operations domain.

> 113,000 employees
> 140 nationalities
> 85 countries of operation

careers.slb.com

¹ Based on Fortune 500 ranking 2011. Copyright © 2012 Schlumberger. All rights reserved.

What will you be?

Schlumberger



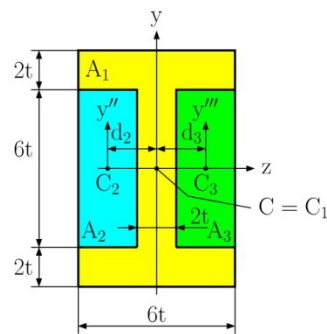


Fig. A.18

We divide the area A into three rectangular areas A_1 , A_2 and A_3 . The first way we can divide area A can be seen in Fig. A.17, a second way can be seen in Fig. A.18.

Solution the division of area A by Fig. A.17 (the first way) the moment of inertia I_z is

$$I_z = I_{z1} + I_{z2} + I_{z3},$$

where

$$I_{z1} = \bar{I}_z + A_1 d_1^2 = \frac{1}{12} b_1 h_1^3 + b_1 h_1 d_1^2 = \dots = 196t^4,$$

$$I_{z2} = \bar{I}_z + A_2 d_2^2 = \frac{1}{12} b_2 h_2^3 + b_2 h_2 d_2^2 = \dots = 36t^4,$$

$$I_{z3} = \bar{I}_z + A_3 d_3^2 = \frac{1}{12} b_3 h_3^3 + b_3 h_3 d_3^2 = \dots = 196t^4.$$

Resulting in

$$I_z = I_{z1} + I_{z2} + I_{z3} = 196t^4 + 36t^4 + 196t^4 = 428t^4.$$

For the moment of inertia I_y we have

$$I_y = I_{y1} + I_{y2} + I_{y3},$$

where

$$I_{y1} = \bar{I}_y = \frac{1}{12} h_1 b_1^3 = \frac{1}{12} \times 2t \times (6t)^3 = 36t^4,$$

$$I_{y2} = \bar{I}_y = \frac{1}{12} h_2 b_2^3 = \frac{1}{12} \times 6t \times (2t)^3 = 4t^4,$$

$$I_{y3} = \bar{I}_y = \frac{1}{12} h_3 b_3^3 = \frac{1}{12} \times 2t \times (6t)^3 = 36t^4.$$

Resulting in

$$I_y = I_{y1} + I_{y2} + I_{y3} = 36t^4 + 4t^4 + 36t^4 = 76t^4.$$

The solution for the division of area A according to Fig. A.18 (by the second way) the moment of inertia I_z is

$$I_z = I_{z1} - I_{z2} - I_{z3},$$

where

$$I_{z1} = \bar{I}_z = \frac{1}{12} b_1 h_1^3 = \frac{1}{12} \times 6t \times (10t)^3 = 500t^4,$$

$$I_{z2} = \bar{I}_z = \frac{1}{12} b_2 h_2^3 = \frac{1}{12} \times 2t \times (6t)^3 = 36t^4,$$

$$I_{z3} = \bar{I}_z = \frac{1}{12} b_3 h_3^3 = \frac{1}{12} \times 2t \times (6t)^3 = 36t^4.$$

Resulting in

$$I_z = I_{z1} - I_{z2} - I_{z3} = 500t^4 - 36t^4 - 36t^4 = 428t^4.$$

For the moment of inertia I_y we have

$$I_y = I_{y1} - I_{y2} - I_{y3},$$

where

$$I_{y1} = \bar{I}_y = \frac{1}{12} h_1 b_1^3 = \frac{1}{12} \times 10t \times (6t)^3 = 180t^4,$$

$$I_{y2} = \bar{I}_y = \frac{1}{12} h_2 b_2^3 + h_2 b_2 d_2^2 = \frac{1}{12} \times 6t \times (2t)^3 + 6t \times 2t \times (2t)^2 = 52t^4,$$

$$I_{y3} = \bar{I}_y = \frac{1}{12} h_3 b_3^3 + h_3 b_3 d_3^2 = \frac{1}{12} \times 6t \times (2t)^3 + 6t \times 2t \times (2t)^2 = 52t^4.$$

Resulting in

$$I_y = I_{y1} - I_{y2} - I_{y3} = 180t^4 - 52t^4 - 52t^4 = 76t^4.$$

Example A.07

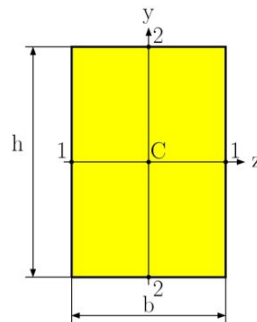


Fig. A.19



You're full of *energy*
and ideas. And that's
just what we are looking for.

Looking for a career where your ideas could really make a difference? UBS's Graduate Programme and internships are a chance for you to experience for yourself what it's like to be part of a global team that rewards your input and believes in succeeding together.

Wherever you are in your academic career, make your future a part of ours by visiting www.ubs.com/graduates.

www.ubs.com/graduates



© UBS 2010. All rights reserved.



In order to solve the torsion of a rectangular cross-section in Fig. A.19, we defined (See S.P. Timoshenko and J.N. Goodier, Theory of Elasticity, 3d ed. McGraw-Hill, New York, 1969, sec. 109) the following parameters for $b > h$:

$$J = \gamma b^3 h, \quad (\text{A.17})$$

$$S_1 = \alpha b^2 h, \quad (\text{A.18})$$

$$S_2 = \beta b h^2, \quad (\text{A.19})$$

where parameters α , β and γ are in Tab.A.1.

The shearing stresses at point 1 and 2 are defined as

$$\tau_1 = \tau_{\max} = \frac{T}{S_1}, \quad \tau_2 = \frac{T}{S_2}, \quad (\text{A.20})$$

where T is the applied torque.

Tab.A.1

h/b	1	1.2	1.5	2	3	5	10	>10
α	0.208	0.219	0.231	0.246	0.267	0.291	0.313	1/3
β	0.208	0.196	0.180	0.155	0.118	0.078	0.042	0
γ	0.1404	0.166	0.196	0.229	0.263	0.291	0.313	1/3

A.4 Product of Inertia, Principal Axes

Definition of product of inertia is

$$I_{yz} = \int_A y z \, dA \quad (\text{A.20a})$$

in which each element of area dA is multiplied by the product of its coordinates and integration is extended over the entire area A of a plane figure. If a cross-section area has an axis of symmetry which is taken for the y or z axis (Fig. A.19), the product of inertia is equal to zero. In the general case, for any point of any cross-section area, we can always find two perpendicular axes such that the product of inertia for these vanishes. If this quantity becomes zero, the axes in these directions are called the *principal axes*. Usually the centroid is taken as the origin of coordinates and the corresponding principal axes are then called the *centroidal principal axes*.

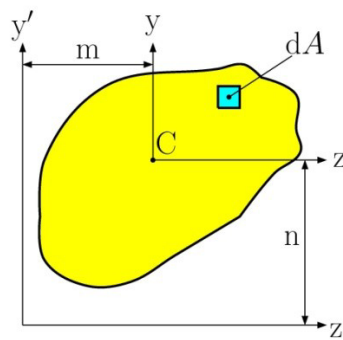


Fig. A.19a

If the product of inertia of a cross-section area is known for axes y and z (Fig. A.19a) through the centroid, the product of inertia for parallel axes y' and z' can be found from the equation

$$I_{y'z'} = I_{yz} + A m n. \quad (\text{A.20b})$$

The coordinates of an element dA for the new axes are

$$y' = y + n; \quad z' = z + m.$$

Hence,

$$I_{y'z'} = \int_A y' z' dA = \int_A (y + n)(z + m) dA = \int_A yz dA + \int_A mn dA + \int_A ym dA + \int_A nz dA.$$

The last two integrals vanish because C is the centroid so that the equation reduces to (A.20b).

A.5 Strain energy for simple loads

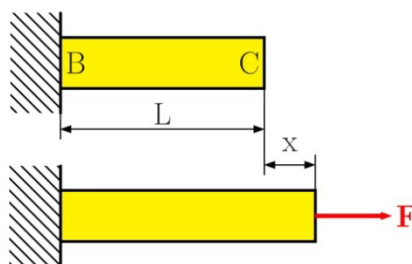


Fig. A.20

Consider a rod BC of length L and uniform cross-section area A , attached at B to a fixed support. The rod is subjected to a slowly increasing axial load F at C (Fig. A.20). The work done by the load F as it is slowly applied to the rod must result in the increase of some energy associated with the deformation of the rod. This energy is referred to as the *strain energy* of the rod. Which is defined by

$$\text{Strain energy} = U = \int_0^x F \, dx \quad (\text{A.21})$$

Dividing the strain energy U by the volume $V = A L$ of the rod (Fig. A.20) and using Eq. (A.21), we have

$$\frac{U}{V} = \int_0^x \frac{F}{A L} \, dx \quad (\text{A.22})$$

Recalling that F/A represents the normal stress σ_x in the rod, and x/L represents the normal strain ϵ_x , we write

$$\frac{U}{V} = \int_0^{\epsilon} \sigma_x \, d\epsilon_x \quad (\text{A.23})$$

The strain energy per unit volume, U/V , is referred to as the strain-energy density and will be denoted by the letter u . We therefore have



**Do you have to be a banker to
work in investment banking?**

Deutsche Bank
db.com/careers

Agile minds **value ideas** as well as experience

Global Graduate Programs

Ours is a complex, fast-moving, global business. There's no time for traditional thinking, and no space for complacency. Instead, we believe that success comes from many perspectives — and that an inclusive workforce goes hand in hand with delivering innovative solutions for our clients. It's why we employ 135 different nationalities. It's why we've taken proactive steps to increase female representation at the highest levels. And it's just one of the reasons why you'll find the working culture here so refreshing.

Discover something different at db.com/careers

Passion to Perform




$$u = \int_0^{\varepsilon} \sigma_x \, d\varepsilon_x \quad (\text{A.24})$$

A.5.1 Elastic strain energy for normal stresses

In a machine part with non-uniform stress distribution, the strain energy density u can be defined by considering the strain energy of a small element of the material with the volume ΔV . writing

$$u = \lim_{\Delta V \rightarrow 0} \frac{\Delta U}{\Delta V} \text{ or } u = \frac{dU}{dV}. \quad (\text{A.25})$$

for the value of σ_x within the proportional limit, we may set $\sigma_x = E \varepsilon_x$ in Eq. (A.24) and write

$$u = \frac{1}{2} E \varepsilon_x^2 = \frac{1}{2} \sigma_x \varepsilon_x = \frac{\sigma_x^2}{2E}. \quad (\text{A.26})$$

The value of strain energy U of the body subject to uniaxial normal stresses can be obtained by substituting Eq. (A.26) into Eq. (A.25), to get

$$U = \int \frac{\sigma_x^2}{2E} dV. \quad (\text{A.27})$$

Elastic strain energy under axial loading

When a rod is acted on by centric axial loading, the normal stresses are $\sigma_x = N/A$ from Sec. 2.2. Substituting for σ_x into Eq. (A.27), we have

$$U = \int \frac{N^2}{2EA^2} dV \text{ or, setting } dV = A \, dV, \quad U = \int_0^L \frac{N^2}{2EA} dV \quad (\text{A.28})$$

If the rod has a uniform cross-section and is acted on by a constant axial force F , we then have

$$U = \frac{N^2 L}{2EA} \quad (\text{A.29})$$


Elastic strain energy in Bending

The normal stresses for pure bending (neglecting the effects of shear) is $\sigma_x = My/I$ from Sec. 4. Substituting for σ_x into Eq. (A.27), we have

$$U = \int \frac{\sigma_x^2}{2E} dV = \int \frac{M^2 y^2}{2EI^2} dV \quad (\text{A.30})$$

Setting $dV = dA \, dx$, where dA represents an element of cross-sectional area, we have

$$U = \int_0^L \frac{M^2}{2EI^2} \left(\int y^2 dA \right) dx = \int_0^L \frac{M^2}{2EI} dx \quad (\text{A.31})$$

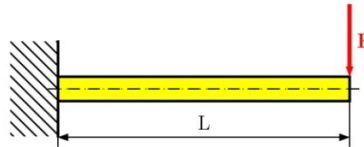Example A.08**Fig. A.21**

Determine the strain energy of the prismatic cantilever beam in Fig. A.21, taking into account the effects of normal stresses only.

Solution

The bending moment at a distance x from the free end is $M = -F x$. Substituting this expression into Eq. (A.31), we can write

$$U = \int_0^L \frac{M^2}{2EI} dx = \int_0^L \frac{(F x)^2}{2EI} dx = \frac{F^2 L^3}{6EI}$$

A.5.2 Elastic strain energy for shearing stresses

When a material is acted on by plane shearing stresses τ_{xy} the strain-energy density at a given point can be expressed as

$$u = \int_0^{\gamma} \tau_{xy} d\gamma_{xy}, \quad (\text{A.32})$$

where γ_{xy} is the shearing strain corresponding to τ_{xy} . For the value of τ_{xy} within the proportional limit, we have $\tau_{xy} = G \gamma_{xy}$, and write

$$u = \frac{1}{2} G \gamma_{xy}^2 = \frac{1}{2} \tau_{xy} \gamma_{xy} = \frac{\tau_{xy}^2}{2G}. \quad (\text{A.33})$$

Substituting Eq. (A.33) into Eq. (A.25), we have

$$U = \int \frac{\tau_{xy}^2}{2G} dV. \quad (\text{A.34})$$

Elastic strain energy in Torsion

The shearing stresses for pure torsion are $\tau_{xy} = T\rho / J$ from Sec. 3. Substituting for τ_{xy} into Eq. (A.27), we have

$$U = \int \frac{\tau_{xy}^2}{2G} dV = \int \frac{T^2 \tilde{r}^2}{2GEJ^2} dV \quad (\text{A.35})$$

Setting $dV = dA dx$, where dA represents an element of the cross-sectional area, we have

$$U = \int_0^L \frac{T^2}{2GJ^2} \left(\int \rho^2 dA \right) dx = \int_0^L \frac{T^2}{2GJ} dx \quad (\text{A.36})$$

In the case of a shaft of uniform cross-section acted on by a constant torque T , we have

$$U = \frac{T^2 L}{2GJ} \quad (\text{A.37})$$

Elastic strain energy in transversal loading

If the internal shear at section x is V , then the shear stress acting on the volume element, having a length of dx and an area of dA , is $\tau = VQ / It$ from Sec. 4. Substituting for τ into Eq. (A.27), we have

**Real drive.
Unreal destination.**

As an intern, you're eager to put what you've learned to the test. At Ernst & Young, you'll have the perfect testing ground. There are plenty of real work challenges. Along with real-time feedback from mentors and leaders. You'll also get to test what you learn. Even better, you'll get experience to learn where your career may lead. Visit ey.com/internships.

[See More | Opportunities](#)

© 2012 Ernst & Young LLP. All Rights Reserved.

ERNST & YOUNG
Quality In Everything We Do



$$U = \int_V \frac{\tau^2}{2G} dV = \int_V \frac{1}{2G} \left(\frac{V Q}{I t} \right)^2 dA dx = \int_0^L \frac{V^2}{2GI^2} \left(\int_A \frac{Q^2}{t^2} dA \right) dx \quad (\text{A.38})$$

The integral in parentheses is evaluated over the beam's cross-sectional area. To simplify this expression we define the form factor for shear

$$f_s = \frac{A}{I^2} \int_A \frac{Q^2}{t^2} dA \quad (\text{A.39})$$

Substituting Eq. (A.39) into Eq. (A.38), we have

$$U = \int_0^L f_s \frac{V^2}{2GA} dx \quad (\text{A.40})$$

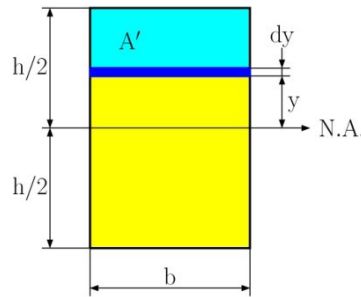


Fig. A.22


The form factor defined by Eq. (A.39) is a dimensionless number that is unique for each specific cross-section area. For example, if the beam has a rectangular cross-section with a width b and height h , as in Fig. A.22, then

$$t = b, \quad A = b h, \quad I = \frac{1}{12} b h^3$$

$$Q = \bar{y}' A' = \left(y + \frac{\frac{h}{2} - y}{2} \right) b \left(\frac{h}{2} - y \right) = \frac{b}{2} \left(\frac{h^2}{4} - y^2 \right)$$

Substituting these terms into Eq. (A.39), we get

$$f_s = \frac{bh}{\left(\frac{1}{12} b h^3 \right)^2} \int_{-h/2}^{+h/2} \frac{b^2}{4b^2} \left(\frac{h^2}{4} - y^2 \right) b dy = \frac{6}{5} \quad (\text{A.41})$$

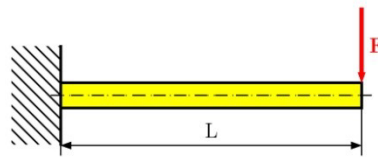Example A.09**Fig. A.23**

Determine the strain energy in the cantilever beam due to shear if the beam has a rectangular cross-section and is subject to a load F , Fig. A.23. assume that EI and G are constant.

Solution

From the free body diagram of the arbitrary section, we have

$$V(x) = F.$$

Since the cross-section is rectangular, the form factor $f_s = \frac{6}{5}$ from Eq. (A.41) and therefore Eq. (A.40)

becomes

$$U_{shear} = \int_0^L \frac{6}{5} \frac{F^2}{2GA} dx = \frac{3 F^2 L}{5 GA}$$

Using the results of Example A.08, with $A = b h$, $I = \frac{1}{12} b h^3$, the ratio of the shear to the bending strain energy is

$$\frac{U_{shear}}{U_{bending}} = \frac{\frac{3 F^2 L}{5 GA}}{\frac{F^2 L^3}{6EI}} = \frac{3 h^2 E}{10 L^2 G}$$

Since $G = E / 2(1+n)$ and $n = 0.5$, then $E = 3G$, so

$$\frac{U_{shear}}{U_{bending}} = \frac{3 h^2}{10 L^2} \frac{3G}{G} = \frac{9 h^2}{10 L^2}$$

It can be seen that the result of this ratio will increase as L decreases. However, even for short beams, where, say $L = 5 h$, the contribution due to shear strain energy is only 3.6% of the bending strain energy. For this reason, the shear strain energy stored in beams is usually neglected in engineering analysis.

References


Hibbeler, R.C.: Mechanics of Materials. SI Second Edition, Prentice-Hall, Inc., 2005, ISBN 0-13-191345-X

Beer, F.P., Johnston, E.R. Jr., Dewolf, J.T., Mazurek, D.F.: Mechanics of Materials, Sixth Edition, McGraw-Hill, 2012, ISBN 978-0-07-338028-5

Frydrýšek, K., Adámková, L.: Mechanics of Materials 1 (Introduction, Simple Stress and Strain, Basic of Bending), Faculty of Mechanical Engineering, VŠB - Technical University of Ostrava, Ostrava, ISBN 978-80-248-1550-3, Ostrava, 2007, Czech Republic, pp. 179

Halama, R., Adámková, L., Fojtík, F., Frydrýšek, K., Šofer, M., Rojíček, J., Fusek, M.: Pružnost a pevnost, VŠB – Technical University of Ostrava, Ostrava 2012, 254 pp., [<http://mi21.vsb.cz/modul/pruznost-pevnost>] (in Czech)

Puchner, O., Kamenský, A., Syč-Milý, J., Tesař, S.: Pružnosť a pevnosť I, SVŠT Bratislava, ISBN 80-227-0227-7, 1990. (in Slovak)

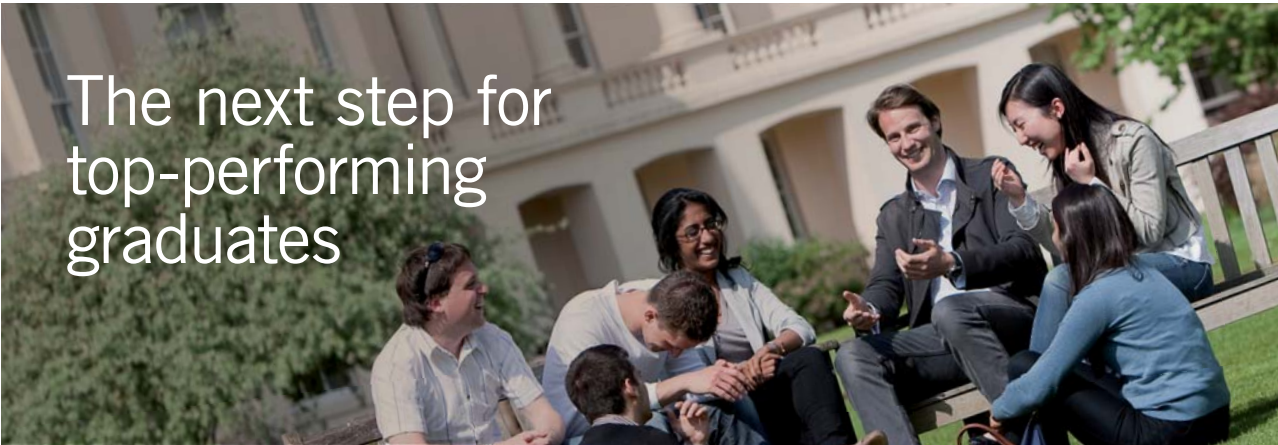

The next step for top-performing graduates

Masters in Management

Designed for high-achieving graduates across all disciplines, London Business School's Masters in Management provides specific and tangible foundations for a successful career in business.

This 12-month, full-time programme is a business qualification with impact. In 2010, our MiM employment rate was 95% within 3 months of graduation*; the majority of graduates choosing to work in consulting or financial services.

As well as a renowned qualification from a world-class business school, you also gain access to the School's network of more than 34,000 global alumni – a community that offers support and opportunities throughout your career.

For more information visit www.london.edu/mm, email mim@london.edu or give us a call on **+44 (0)20 7000 7573**.

* Figures taken from London Business School's Masters in Management 2010 employment report




Puchner, O., Kamenský, A., Syč-Milý, J., Tesař, S.: Pružnosť a pevnosť II, 2.edition, SVŠT Bratislava, ISBN 80-227-0169-6, 1989. (in Slovak)

Syč-Milý, J. a kol.: Pružnosť a pevnosť: Riešené príklady, Alfa, Bratislava, 1988. (in Slovak)

Timoshenko, S.: Strength of Materials, Elementary Theory and Problems, Part I, 2nd Edition, D. Van Nostrand Co., New York, NY, (1940)

Timoshenko, S.: Strength of Materials, Advanced Theory and Problems, Part II, 2nd Edition, D. Van Nostrand Co., New York, NY, (1947)

Trebuňa, F., Šimčák, F., Jurica, V.: Pružnosť a pevnosť I., 1. edition, Vienaľa, Košice, ISBN 80-7099-477-0, 2000 (in Slovak)

Trebuňa, F., Šimčák, F., Jurica, V.: Pružnosť a pevnosť II., 1. edition, Vienaľa, Košice, ISBN 80-7099-478-9, 2000 (in Slovak)

Trebuňa, F., Šimčák, F., Jurica, V.: Príklady a úlohy z pružnosti a pevnosti 1., 1. edition, Vienaľa, Košice, ISBN 80-7099-593-9, 2000 (in Slovak)

Trebuňa, F., Šimčák, F., Jurica, V.: Príklady a úlohy z pružnosti a pevnosti 2., 1. edition, Technical University in Košice, Košice, ISBN 80-7099-594-7, 2001 (in Slovak)

Ralston, A., Rabinowitz, P.: First Course in Numerical Analysis, Second Edition, 1978, Republished 2001 by Dover, Mineola, N.Y.

Gibson, L.J., Ashby. M.F.: Cellular Solids, First Paperback Edition, Cambridge University Press, 1999, ISBN 0 521 499 119